 


Tchibo Solar gutter light

en Instructions for use

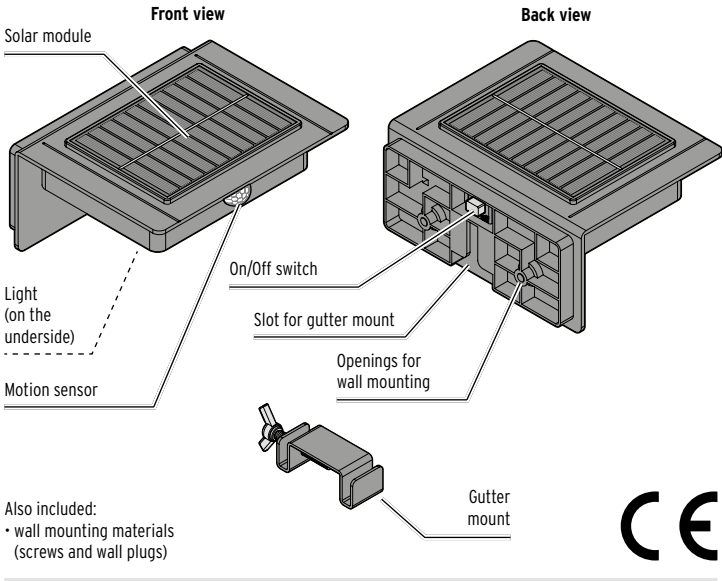

Safety warnings

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Intended use

The solar gutter light is intended as an orientation light or auxiliary light. It is designed for permanent outdoor use.

The solar gutter light has been designed for private use and is not suitable for commercial purposes.

Danger to children

- Children are not aware of the risks involved in handling electrical appliances incorrectly. Therefore, never allow children to use electrical appliances unsupervised.
- Keep the packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

Danger of explosion/fire/burns

- You cannot and must not attempt to replace or remove the rechargeable battery built into the gutter light yourself. There is a risk of explosion if the battery is replaced incorrectly. It should be replaced only with an identical battery or one of equivalent value. If the rechargeable battery is defective, contact a specialist workshop or our customer care service.
- The product contains a lithium-ion rechargeable battery. This battery must not be taken apart, thrown into fire or short-circuited.
- Do not modify and/or deform/heat/dismantle rechargeable batteries.
- If a rechargeable battery has leaked, avoid contact with skin, eyes and mucous membranes. If necessary, rinse the affected areas with water and consult a doctor immediately.

 
Material damage

- Do not use the product if it shows any visible signs of damage.
- Do not stick anything to, cover or paint the solar module or the motion sensor.
- Due to the extremely long service life of the LEDs, it is not necessary to replace them. They cannot and must not be replaced. The LEDs are firmly built into the light. Opening the product to remove the LEDs will damage it.
- Do not make any modifications to the product. Have repairs carried out only by a specialist workshop or as arranged by our customer care service.
- The product is suitable for outdoor use and complies with protection type IP44. This means that the product is protected against contact with tools, wires and foreign objects with a diameter larger than 1 mm and splashes of water from all sides, such as rain. However, protect the product from heavy rain and streams of water and do not immerse it in water. This would immediately result in a short circuit.
- Protect the gutter light from knocks, falls and extreme temperatures.
- We have included wall mounting materials (screws and wall plugs). The mounting materials provided are suitable for standard solid walls. Enquire about which mounting materials are suitable for your wall before mounting the light. Make sure there are no pipes or cables running through where you intend to drill the holes!
- Do not use any caustic, aggressive or abrasive products for cleaning.
- The product is suitable for outdoor use at temperatures above approx. -10 °C. If the temperature falls below this level, store the product inside, otherwise it may become damaged.

Prior to first use

Switching on/off

The rechargeable battery is already built-in upon purchase.

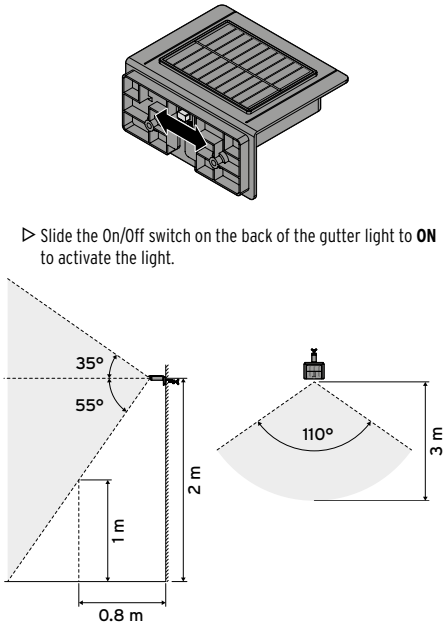

The motion sensor of the gutter light recognises movement in the detection area shown above. When movement occurs in this area at dusk or dawn, the light switches on and in approx. 30 seconds it automatically switches off again.

- ▷ If you need to deactivate the gutter light, slide the On/Off switch to **OFF**.

The light is now switched off permanently. The rechargeable battery will continue to charge once there is sufficient light.

 
Choosing a location

The gutter light works independently of any electric power source. However, since the product depends on light from the sun, you should consider and observe the following:


- Mount the light in a sunny location during the day. Choose a spot where the light will be exposed to direct sunlight for as long as possible. The rechargeable battery can only recharge if the solar module is in a sunny location.
- Avoid positioning the light in a fully, or mostly shady location (under trees, etc.).
- The solar module should not be continuously exposed to other sources of light during the night, for example strong spotlights in a driveway or garage entrance, etc. Keep in mind that many light sources only switch on at night, such as those activated by a timer or motion sensor.

Assembly

Attaching the light to the gutter

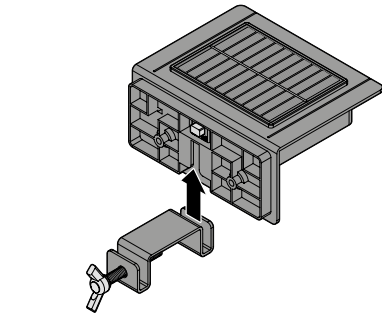


 1. Push the gutter mount into the slot on the back of the light as far as it will go.

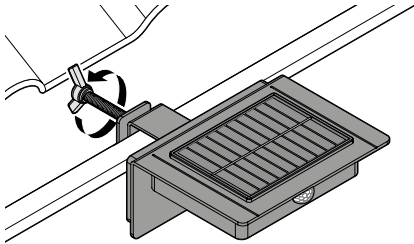

2. Clamp the light onto the gutter in the desired location.

 Attaching the light to the wall

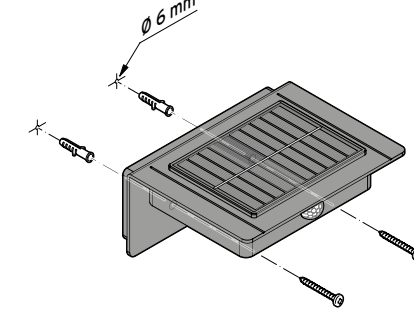

- ▷ Fasten the gutter light to a suitable wall using the wall plugs and screws.

Charging the rechargeable battery

- Depending on the weather and intensity of the sun, it can take a few hours for the solar module to fully charge the rechargeable battery.
- During the winter or after a successive number of cloudy days, you may find that the battery is not sufficiently charged. In this case, slide the On/Off switch to **OFF** to deactivate the light. The rechargeable battery will charge even when the light is switched off.

Cleaning

NOTICE - material damage

Do not use any caustic, aggressive or abrasive products for cleaning.

- ▷ Wipe the light with a soft, slightly damp cloth.

Problems / solutions

The light is not lighting up or is producing only a dim light.

- Are the surroundings too bright?
Check whether other sources of light (e.g. street lights or time or motion sensor-controlled outdoor lights) are shining onto the light. If necessary, change the location.
- Is the rechargeable battery not fully charged?
Switch the light off for a few days so that the battery can be fully recharged.
- Is the rechargeable battery flat?
The rechargeable battery cannot be replaced. Contact a specialist workshop or our customer care service.

The LEDs are faulty.

- The LEDs cannot be replaced.

Performance varies depending on the season.

- This is due to weather conditions and is not a fault. Weather conditions are best during the summer and unfavourable in the winter or after a successive number of cloudy days.

Technical specifications

Model:	700 018
Power supply	
Solar module:	5 V / 0.5 W
Rechargeable battery:	lithium-ion 3.7 V DC 600 mAh Watt-hour rating: 2.22 Wh (tested as per UN 38.3/not replaceable)
Protection class:	III
IP code:	IP44
Bulb:	12 LEDs
Ambient temperature:	-10 to +40 °C
Made exclusively for:	Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany

In the course of product improvements, we reserve the right to make technical and optical modifications to the product.

Disposal

The **product**, its **packaging** and the **rechargeable battery** inserted have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Appliances, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste!

You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities. Flat single-use/rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

Warning! This appliance contains a battery that, for safety reasons, is firmly built into the appliance. It cannot be removed without destroying the casing. Improper disassembly leads to safety hazards. For this reason, take the appliance intact to a collection point where the appliance and battery will be disposed of properly.

Product number: 700 018

