


Breathing sleeping-helper

en Instructions for use

At a glance (contents)

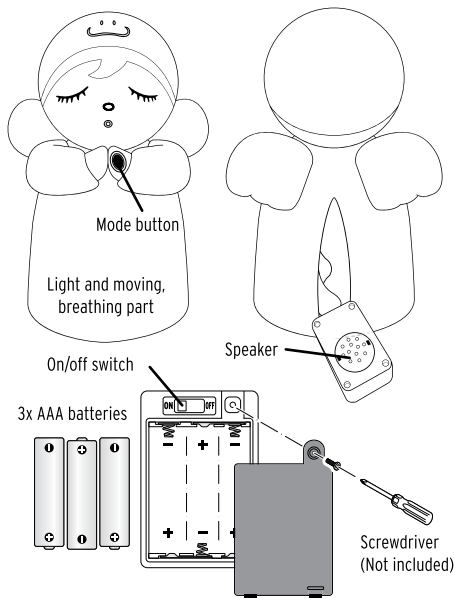

EG - DECLARATION OF CONFORMITY

The product described in this instruction manual complies with all relevant harmonized requirements of the EU. The complete declaration of conformity and instruction manual can be found online at www.jaxmotech.de/downloads.

About these instructions

This soft toy was designed to help children fall asleep and as a relaxation aid. Featuring rhythmic breathing exercises, soft lighting and soothing music, it helps to create a calming atmosphere and makes it easier to fall asleep.

Please keep this manual for future reference, as it contains important information. If you pass this item on to someone else, please include these instructions as well. Symbols used in these instructions:



This symbol warns you of a risk of injury.



This symbol warns you of the risk of injury from electricity.

Key terms in this guide:

DANGER: Indicates an imminent risk of serious injury or death.

CAUTION: Risk of minor injury.

NOTE: Warns of possible damage to property.



Additional information is marked with this symbol.

Safety instructions



User guide for the breathing sleeping-helper Intended use

This toy is suitable for children aged 0 months and over. Use only under adult supervision.

This product is intended for personal use and is not suitable for commercial purposes.

General safety

- Keep packaging materials out of the reach of children. They pose various risks, including the risk of suffocation!
- Attention! This toy must only be used under direct adult supervision.
- Attention! The toy must not be connected to more than the recommended number of power sources.

Inserting and replacing the batteries

The device requires 3x AAA batteries.

1. Open the Velcro fastening on the back of the soft toy and remove the battery compartment.
2. Loosen the battery compartment cover screw using a Phillips screwdriver and remove the cover.
3. Insert the new batteries, ensuring the correct polarity (+/-) is observed.
4. Close the cover and tighten the screw again.
5. Place the compartment back into the soft toy's back and fasten the Velcro.

Operation

Operation & Features

To switch the device on, slide the on/off switch on the battery compartment to ON. Control the device with the mode button on the left hand.

Press

Active functions

Press once	Breathing + Movement + Light + Music
Press twice	Breathing + Movement + Light
Press 3 times	Breathing + Movement
Press 4 times	Movement + Light
Press 5 times	Standby mode

Each mode takes approximately 5 to 6.5 minutes. The device then switches to standby mode.

Press the Mode button again to reactivate the device.

Slide the on/off switch on the battery compartment to the OFF position to switch the device off.

Care & Storage

Important cleaning instructions:

As the electronic unit is permanently fitted and cannot be removed, the soft toy must not be washed or soaked in water. Wipe the surface with a slightly damp cloth.

Storage when not in use:

If you do not intend to use the soft toy for a prolonged period, remove the batteries to prevent them from leaking and damaging the electronics. Store the product in a dry place.

Information about batteries

- Attention! There is a risk of explosion if the batteries are replaced incorrectly. Only replace batteries with the same or an equivalent type.
- Always replace the entire set of batteries. Do not mix old and new batteries, or batteries with different charge levels.
- Make sure you insert the batteries correctly. Note the polarity (+) / (-) on the battery and on the casing. Batteries used incorrectly may leak or, in extreme cases, cause a fire or an explosion.
- Never expose batteries to excessive heat (e.g. direct sunlight, fire) or throw them into a fire. This may cause the batteries to explode.
- The connections must not be short-circuited.
- Remove spent batteries. Remove the batteries if you do not plan on using the device for a prolonged period. Otherwise, the batteries may leak and cause damage.
- Keep batteries out of the reach of young children. If batteries have been swallowed, seek medical attention immediately.
- Non-rechargeable batteries must not be recharged.
- Rechargeable batteries must be removed from the device before charging.
- Rechargeable batteries must only be charged under adult supervision.
- If the batteries have leaked, remove them from the battery compartment using a cloth and dispose of them in accordance with the instructions. Avoid contact between the battery acid and your skin or eyes. If you do come into contact with battery acid, rinse your eyes thoroughly with water and seek medical attention immediately. If battery acid comes into contact with your skin, wash the area thoroughly with soap and water.
- Keep new and used batteries out of the reach of children.
- Do not use the product if the battery compartment cannot be closed securely, and keep it out of the reach of children.
- Do not allow children to replace the batteries without supervision.
- Do not short-circuit the batteries. Do not over-discharge the batteries.
- Remove used batteries from the device immediately and dispose of them properly.

Technical specifications

Model	: PT 133
Product number	: 766 448
Batteries	: 3 x LR03 (AAA) / 1.5 V ===
Ambient temperature	: +10 to +40 °C

Battery information

Battery model	: LR03/AAA
Battery manufacturer	: Naccon Power Technology Co., Ltd. 6F Block A, Dongshangang Industrial Park, Xixiang St., Baoan District, Shenzhen, P.R. China
Brand	: Naccon
Website	: http://www.naccon.com
Email address	: aguoguo@naccon.com
Date of manufacture	: 05/2026 Made in China
Manufactured by	: Jaxmotech GmbH, Ostring 60, 66740 Saarlouis, Germany info@jaxmotech.de

We reserve the right to make technical and aesthetic changes to the product as part of our ongoing product improvements.

Disposal

The product, its packaging and the supplied batteries have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment. Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Appliances, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste! You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities.



Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

Model	: PT 133
Manufactured by	: Jaxmotech GmbH, Ostring 60, 66740 Saarlouis, Germany info@jaxmotech.de

