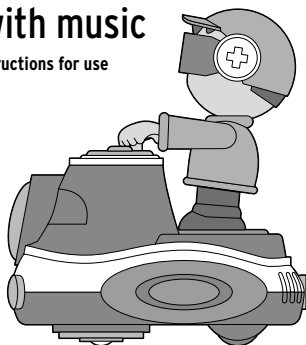


Removing the protective cap

- ▷ To allow the DJ booth to move around freely, remove the protective cap by pulling downwards. If you leave the protective cap on, you can still switch on the light and music, but the DJ booth will not move around.

0 = off
I = light only
II = light and music

Inserting batteries

1. Loosen the screw on the battery compartment and remove the lid.
2. Insert the batteries as illustrated. Ensure that the polarity (+/-) is correct when doing so.
3. Replace the battery compartment lid and tighten the screw.



www.tchibo.de/instructions
(Please enter the product number in the box labelled "Bedienungsanleitungssuche" and click on "Suchen".)

Product number: 720 856

Made exclusively for:
Tchibo GmbH, Überseering 18,
22297 Hamburg, Germany

Dear Customer

The DJ with music has five different 1-minute songs programmed into it which are played one after the other. After switching the product off and on again, the sequence of songs starts again from the beginning.

For your safety

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Intended use

The product is designed for private use and is not suitable for commercial purposes.

Recommended for children aged 3 and over.

WARNING:

- Not suitable for children under 36 months. Small parts. Risk of choking.
- Remove all packaging material before giving the product to a child. Risk of choking.
- Single-use and rechargeable batteries must only be inserted or replaced by adults. If you use rechargeable batteries, these may only be charged in a suitable charger and under adult supervision. They must be removed from the product for charging. Always secure the battery compartment cover with the screw.
- If a single-use/rechargeable battery has leaked, avoid contact with skin, eyes and mucous membranes. If necessary, rinse the affected areas with water and consult a doctor immediately.
- Non-rechargeable batteries must not be charged.
- Single-use/rechargeable batteries must not be taken apart, thrown into fire or short-circuited. Protect single-use/rechargeable batteries from excessive heat.
- The contact terminals in the battery compartment must not be short-circuited.
- If necessary, clean the battery and device contacts before inserting the single-use/rechargeable batteries. Risk of overheating!
- Remove the single-use/rechargeable batteries from the product when they are spent or if you do not intend to use the product for a longer period. This will prevent damage caused by leakage.
- Always replace all single-use/rechargeable batteries at the same time. Do not mix old and new batteries, different types or brands of batteries, or batteries with different capacities.
- Ensure that the polarity (+/-) is correct when inserting the batteries.
- We do not recommend using rechargeable batteries as they have a different voltage and affect sound reproduction.
- Do not use the product if it shows any visible signs of damage. Do not attempt to repair the product yourself. Do not make any modifications to the product.
- Do not immerse the product in water and protect it from moisture.

Danger to persons with epilepsy or suspected epilepsy

- In a very small number of people, certain visual influences (e.g. flickering lights) can lead to epileptic seizures. These seizures can start with various symptoms like dizziness, changes in vision, eye and facial twitching, loss of orientation, confusion, or temporary loss of consciousness. People who lose consciousness may injure themselves on nearby objects or by falling down.

Use

Switching on and off

- ▷ To switch the product on, slide the switch on the underside to ...
- I The LEDs on the DJ booth flash alternately.
 - II The LEDs flash, the music plays and the DJ booth moves.
- As soon as the DJ booth encounters an obstacle, it changes direction. However, make sure that it does not run over the edge of the table, for example, and fall.
- ▷ To switch the product off, slide the switch on the underside to ...
- 0 The product switches itself off.

Cleaning

- ▷ If necessary, wipe the device with a slightly damp, soft cloth.

Disposal

The product, its packaging and the supplied batteries have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment. Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Devices, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste!

You are legally obliged to dispose of old devices separately from household waste. Electronic devices contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old devices can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

Technical specifications

Model:	720 856
Single-use batteries:	3x LR6(AA)/1.5 V (Zn/MnO ₂)
Operating time with 1 set of batteries:	approx. 3.5-4 hours (level II)
Ambient temperature:	+10 to +40 °C

Information about the supplied batteries

Manufacturer: Naccon Power Technology Co., Ltd.,
6F, Block A, Dongshangang Industrial Park, Xixiang St., Baoan District,
Shenzhen, PRC.; <http://www.naccon.com>
Email: aguogo@naccon.com
Model: LR6/AA
Manufacturing date: 2025/05
Made in: China