



Top

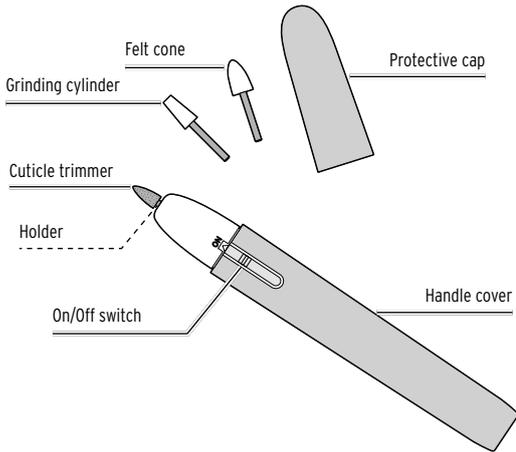

Bottom

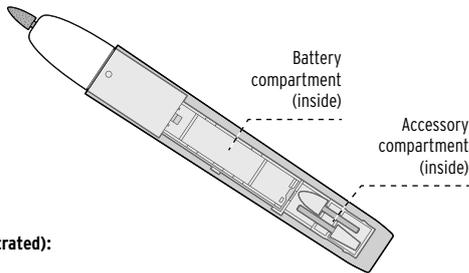

Also included (not illustrated):

- 1x single-use battery

Safety warnings

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Signal words in these instructions:

CAUTION warns about the potential risk of minor injury.

NOTICE warns about the risk of material damage.



This indicates additional information.

Intended use

The manicure and pedicure device is intended for toenail and fingernail care. The device is designed exclusively for private use and is not suitable for commercial use (e.g. in beauty salons or for medical foot care).

Do not use the device if ...

... you suffer from diabetes or other wound-healing disorders. The possibility of injuring yourself with this device is very slight. Nevertheless, we are obliged to draw your attention to the fact that you should not use it if you suffer from the illnesses mentioned above.

... another person has already used it. The device and attachments that come with it should be used by one person only. This will prevent the spread of infections such as athlete's foot.

... the skin near the nails has open wounds or inflammations with which the device could come into contact during use.

Danger to children and people with limited ability to operate devices

• Children must not be allowed to play with the device. Keep the device away from children under the age of 8 and from pets.

• This device may be used by children aged 8 and over and by people with diminished physical, sensory or mental capacity or lacking the requisite knowledge/experience, provided they are supervised or have been instructed in the safe use of the device and understand the potential dangers.

• Children must not be allowed to clean the device unless they are over 8 years of age and supervised while doing so. This device is maintenance-free.

• The device must not be used on children under the age of 8.

• Swallowing batteries can be fatal. Swallowing a battery can cause severe internal chemical burns and even death within 2 hours. Therefore, keep both new and old batteries and the product out of the reach of children. If you think a battery has been swallowed or has entered the body in any other way, seek medical advice immediately.

• Keep small swallowable parts and the packaging materials out of the reach of children. They pose several risks, including the risk of suffocation/choking!

Risk of fire/explosion

• Single-use batteries must not be charged, taken apart or crushed, thrown into fire or a hot oven or short-circuited.

• If necessary, clean the battery and device contacts before inserting the batteries. Risk of overheating!

• Warning! Batteries can explode if inserted incorrectly (e.g. lithium batteries). When inserting the battery, ensure correct polarity (+/-).

• If batteries are exposed to excessive heat, direct sunlight or extreme temperatures, they may explode or leak flammable liquids or gases. Protect the batteries from excessive heat, direct sunlight and extreme temperatures.

• If batteries are exposed to extremely low air pressure (e.g. at high altitudes), they may explode or leak flammable liquids or gases.

• Warning! Inserting the wrong type of battery poses a risk of explosion. Only replace the battery with the same or an equivalent type (see "Technical specifications").

Risk of injury

• If a battery has leaked, avoid contact with skin, eyes and mucous membranes. If necessary, rinse the affected areas with water and consult a doctor immediately.

• Do not use the device on the same spot for too long. The attachments rotate at high speed, generating heat. There is a risk of burns!

• When the device is in use, keep it away from long hair, loose clothing and similar. These may get caught in the rotating attachments.

• Do not use the device if it shows any signs of damage. Do not use attachments that are damaged or very worn down.

Material damage

• Protect the device from knocks, falls, dust, direct sunlight and extreme temperatures.

• The device must not be immersed in water or other liquids while it is being used or cleaned. Protect it from moisture.


• Remove the battery from the product when it is flat or if you do not intend to use the product for a prolonged period. This will prevent damage caused by leakage.

• Do not use abrasive or caustic cleaning agents, or hard brushes, etc., for cleaning.


• Only use the original accessories.

Prior to first use

Inserting the battery

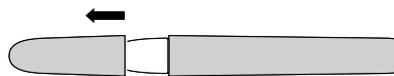


1. Pull off the protective cap.

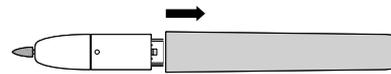


2. Pull off the handle cover.



3. Insert the battery as illustrated in the battery compartment. Ensure that the polarity (+/-) is correct.

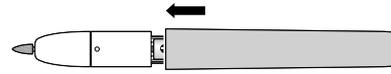

4. Slide the handle cover back onto the device.

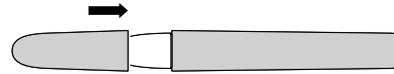


5. Put the protective cap back on.




The battery must be replaced if the attachments do not rotate anymore or only rotate slowly.

Use

Changing the attachments

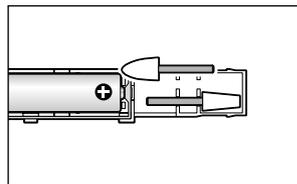

1. Take the required attachment out of the accessory compartment inside the housing.

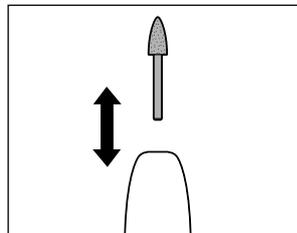


2. Pull the existing attachment off the device, then insert the new attachment, pushing until you feel and hear it click into place in the holder.



• The device must be switched off when you attach or detach the attachments.

• Ensure that the attachments are firmly in place when using the device.

Switching the device on/off

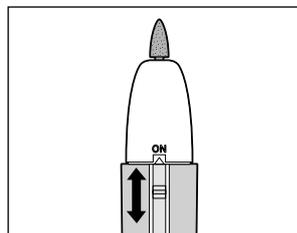

▷ **To switch on:** Slide the On/Off switch all the way up to switch the device on.


▷ **To switch off:** Slide the On/Off switch all the way down to switch the device off.

CAUTION - risk of injury

- Keep long hair away from moving parts.
- Do not use the device on the same spot for a prolonged period. The attachments rotate at high speed, generating heat.

Polishing nails


You will need:
the felt cone.

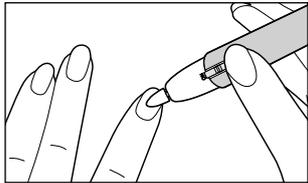

- ▷ Use the felt cone to polish the nail surface, working in circular motions. Do not apply the felt cone to any one spot for too long, as the friction causes intense heat to develop.

Smoothing the nail edges


You will need:
the cuticle trimmer.

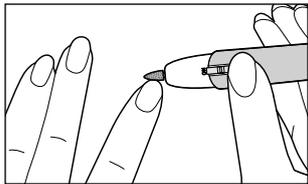

- ▷ Use the cuticle trimmer to remove bumps in your nail edges and to smoothen corners.

Removing cuticles

You will need:
the cuticle trimmer.

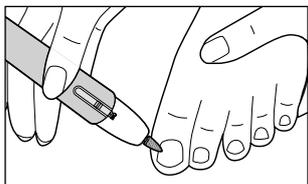


- ▷ Remove cuticles at the **sides of your nails** using the cuticle trimmer. This is especially necessary on your toes.



To treat the cuticles **on your nails**, you should first soak your nails and then push the cuticles back, as is the conventional method. We advise against using the cuticle trimmer for this purpose as it can easily cause indentations in your nails.

Smoothing the nail surface

You will need:
the grinding cylinder.

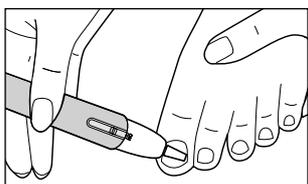


- ▷ Use the grinding cylinder to file and smoothen coarse surfaces. To do this, place the grinding cylinder horizontally onto the nail surface and use it to remove the nail layer in slow, circular movements.

Removing hard skin and calluses

- Do not wash the area being treated directly before treatment. The attachment does not have any effect on soft skin. Therefore always work on completely dry skin.
- Always leave a thin layer of hard skin so that the skin is protected.
- The device is not suitable for treating tough and coarse hard skin and calluses on feet. Use a callus remover file or pumice stone to remove these as usual.

You will need:
the grinding cylinder.

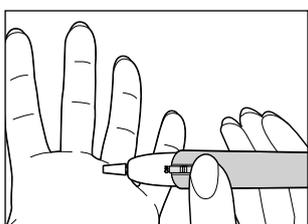

- ▷ Use the grinding cylinder to remove calluses and slightly hardened skin.

After use**Cleaning and disinfecting****NOTICE** - material damage

- The device must not be immersed in water or other liquids. Protect it from moisture.
- Do not use any caustic, aggressive or abrasive products for cleaning.

- ▷ Pull the used attachment off the device. Clean the cuticle trimmer and grinding cylinder (but not the felt cone!) using a small, soft brush under warm running water and, if necessary, using ethyl alcohol (available from pharmacies).
- ▷ After each use, wipe off the device with a dry cloth or one that has been slightly dampened with water in order to clean off any leftover nail residue. Make sure that no moisture gets into the device.

Storage

- ▷ After cleaning, insert one of the attachments back into the holder at the front of the device and replace the protective cap.
- ▷ Store the other two attachments in the accessory compartment inside the housing.
- ▷ When the device is not in use, store it in a cool, dry location protected from sunlight.

Technical specifications

Model: 724 926

Single-use battery: 1x LR03 (AAA)/1.5 V (ZnMnO₂)

Ambient temperature: +10 to +40 °C

Made exclusively for: Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany

In the course of product improvement, we reserve the right to make technical and optical modifications to the product.

**Disposal**

This product, its packaging and the supplied battery have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Devices, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste!

You are legally obliged to dispose of old devices separately from household waste. Electronic devices contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment.

Information about collection points where old devices can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer.

Additional information about the supplied battery

Manufacturer:

Naccon Power Technology Co. Ltd

6F, Block A, DongShanGang Industrial Park, Xixiang St., Bao'An District, Shenzhen, PRC

www.naccon.com

aguogo@naccon.com

Tel. no.: 0086 755 82991519

Trademark: NACCON

Manufacturing date: 2025/09

Made in: China



www.tchibo.de/instructions

Product number: 724 926