





Rechargeable LED multifunctional light with remote control

(en) Instructions for use

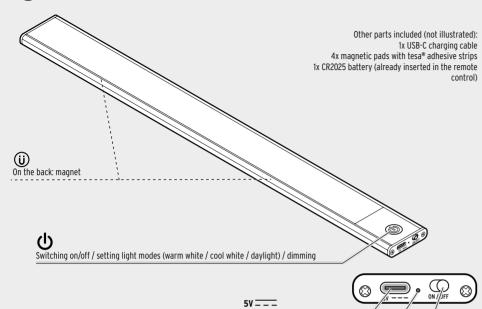

USB-C connection socket

Charging indicator

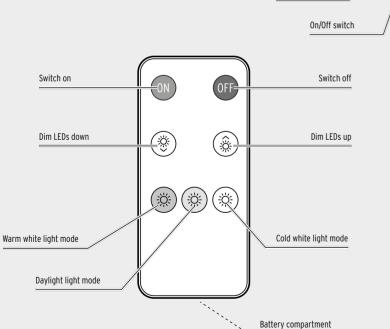

Product number: 726 306

Safety warnings

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these

The light is only suitable for decoration in private homes and not for lighting whole rooms. The light is designed for use in dry, indoor rooms. It has been designed for private use and is not suitable for commercial purposes.

- Children are not aware of the risks involved in handling electrical appliances incorrectly. Therefore keep the product away from children.
- Keep all small parts and packaging materials out of the reach of children. They pose several risks, including the risk of suffocation and choking!

Danger to life/risk of injury due to magnetism for persons with pacemakers/

· Magnets can potentially impair the function of pacemakers and affect the correct position of endoprostheses in the body. It is therefore important that you keep the magnets away from your body. Before using this product, consult your doctor.

Danger due to electricity when charging the battery

- Do not charge the light outdoors or in damp rooms.
- •Use only suitable mains adapters for charging the product. Do not use a faulty mains adapter and do not attempt to repair a faulty mains adapter.
- •Only connect the light to a properly installed power socket with a voltage that complies with the technical specifications of the mains adapter used.
- •The power socket used must be easily accessible so that you can quickly unplug the mains adapter whenever necessary. Route the charging cable in such a way that it cannot be tripped over
- Remove the mains adapter from the power socket if malfunctions occur during charging, during thunderstorms and before cleaning the light.

Danger due to explosion/fire/burns

· You cannot and must not attempt to replace or remove the built-in rechargeable battery in the light yourself. There is a risk of explosion if the battery is replaced incorrectly. The battery should be replaced only with an identical or equivalent type. If the rechargeable battery is defective, contact a specialist workshop or our customer care service.

The remote control contains a lithium battery (button cell battery). There is a risk of leakage, gas emissions, explosion and fire:

- Swallowing batteries can be fatal. If a button cell battery is swallowed, it can cause severe internal chemical burns and even death within 2 hours. Keep both new and used batteries out of the reach of children. If the battery compartment does not close properly, discontinue use of the product and keep it out of the reach of children. If you think that a battery has been swallowed or has got into the body in any other way, seek medical advice immediately
- Warning! Lithium batteries can explode if inserted incorrectly. Therefore, ensure that the polarity (+/-) is correct when inserting the batteries. Use only batteries of the same or of equivalent type (see the technical specifications).
- · Batteries must not be taken apart or crushed, thrown into fire or a hot oven or short-circuited. In addition, single-use batteries must not be charged. Do not modify and/or deform/heat/dismantle single-use batteries. Do not allow damaged batteries to come into contact with water.
- Single-use batteries must not be overdischarged. Keep unused batteries in the original packaging. Unpacked batteries (either new or partially/fully used) must be stored in an orderly fashion so that their contacts cannot touch each other. Also keep them away from metal objects.
- · Batteries exposed to excessive heat, direct sunlight, extremely low air pressure (e.g. at high altitudes) or extreme temperatures can explode or leak flammable liquids or gases. Protect batteries from excessive heat, direct sunlight and extreme air pressure levels and temperatures.
- If a battery has leaked, avoid all contact with skin, eves and mucous membranes. If necessary, rinse the affected areas with water and consult a doctor immediately.

· Warning! Lithium batteries can explode ...

- ... if they are exposed to extreme heat, such as sunlight, fire, etc., or extremely low air pressure during use, storage or transport. Only use the light in moderate climatic conditions
- .. if they are taken apart, thrown into fire or short-circuited. Do not place any naked flames such as burning candles near the light. The light must be kept away from candles and other naked flames at all times to prevent the spread of fire.
- · Do not modify and/or deform/heat/dismantle rechargeable batteries. Do not immerse them in water either.

Warning - danger due to improper use

- The LEDs are very bright. To avoid eye damage, do not look straight into the light from
- Do not make any modifications to the product. Only have repairs to the product carried out by a specialist workshop or as arranged by our customer care service. Improper repairs may result in considerable risks to the user.
- Do not use the light if it shows visible signs of damage or if it has fallen down.

Material damage

- Keep the magnets away from cards with magnetic strips, such as credit cards, debit cards, etc. These may become damaged. You should also keep the magnets away from CRT screens, magnetic storage media, watches and all devices that are affected by magnetism or could suffer functional impairment
- Do not operate the light outdoors or in damp rooms.
- Never immerse the light in water or other liquids. Protect the light from impacts, falls, dust, moisture, direct sunlight and extreme temperatures.
- Protect the batteries from excessive heat. Remove the battery from the remote control when it is flat or if you do not intend to use the remote control for a longer period of time. This will help prevent damage caused by leakage.
- The built-in LEDs cannot be replaced.
- Do not use caustic or abrasive agents or hard brushes, etc. for cleaning.
- Do not stick the self-adhesive metal pads to sensitive surfaces which could be damaged if you wish to remove them again later.

Prior to first use

Charging the battery in the light

The rechargeable battery comes in a half-charged state. This is to prevent it from becoming damaged. Charge the battery fully by connecting a USB mains adapter (not included) to the power supply before using the product for the first time.

You can use the light while the battery is charging, however, this will increase the charging time slightly.

Connect the provided USB-C

charging cable to the USB-C

charging socket 5V = - =

nical specifications").


on the light and to a suitable

USB mains adapter (see "Tech-

a mains socket. The charging

indicator light lights up red

while the battery is charging.

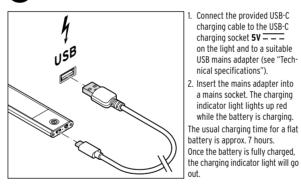

3. After charging, unplug the mains adapter from the power socket and the USB-C charging cable from the light and the mains adapter.


Information on rechargeable batteries

- To preserve the rechargeable battery's full capacity for as long as possible, you should fully recharge the battery every 2 to 3 months, even if you do not use the product.
- Charge the battery in an environment between +10 and +40 °C.
- The battery will best hold its charge at room temperature. The lower the ambient temperature, the shorter the operating time.

Activating the battery in the remote control


Remove the insulating strip from the battery compartment when using the product for the first time. The remote control is now ready for use.

Inserting / changing the battery

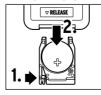

Push the locking mechanism to the side and pull out the battery holder.

Replace the flat battery with a new one. When doing so, make sure that the polarity is correct (+ symbol facing upwards).

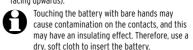


3. Push the battery holder completely into the remote control. You must hear and feel it click into place.

Attaching the light

Thanks to the integrated magnets, you can attach the light directly to a metallic surface - or you can use the enclosed self-adhesive metal pads for non-metallic surfaces.

Using the self-adhesive metal pads

- Bear in mind that the adhesive metal pads may not be easy to remove later on. Removal may cause paint, wallpaper or the like to come off the wall, and can cause discolouration on the surface. Thinners (such as petroleum ether or similar) can remove any adhesive layer residue from wood or other solid surfaces. Also observe the manufacturer's instructions. Test beforehand on an inconspicuous part of the surface.
- The self-adhesive metal pads adhere to all smooth and flat surfaces, such as mirror or glass surfaces, tiles and smooth furniture surfaces etc. Do not affix the metal pads over joints or other irregularities. The metal pads will not adhere to textured surfaces. The surface must be free from dust, grease, silicone and limescale. The adhesive pads are intended for permanent attachment. Avoid attaching them to sensitive surfaces if you want to remove them later. You will get the best hold at temperatures between 23 °C and 40 °C.
- 1. Clean and degrease the surface with pure alcohol (isopropyl) or methylated spirit. Bathroom or all-purpose cleaners are not suitable. Gently pre-dry the cleaned area and then leave it to dry completely.

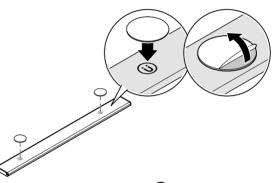


- 2. The magnets in the light are located under the (ii) markings on the back of the light. Attach the metal pads here.
- 3. Remove the protective film from the metal pads and press the light firmly into the desired position for approx. 10 seconds. After approx. 30 minutes, press it again for approx. 10 seconds

Use



> ON Slide the switch on the light to ON to switch the light on permanently.

Controls on the light

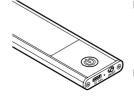

- > Briefly tap the (1) button several times to switch the light.
- ... on with warm white light. ... on with cold white light,
- ... on with "Daylight",
- ... off again.
- When the light is switched on, press and hold the (1) button to dim the light steplessly from 100% to 10% and press and hold again to increase brightness to 100%.

Controlling via the remote control

- Point the remote control at the light. The light must not be obscured by other objects. as this prevents radio communication.
- ▶ Press ON or OFF to switch the light on or off. The light switches on with the same light setting you last used when you switched it off, e.g. with cold white light.
- ▶ Change the light intensity: darker with the (※) button and brighter with the (※)
- ▶ Select the desired light colour with the (※), (※) and (※) buttons.



> **OFF** Slide the switch to **OFF** to switch the light

Disposal

The product, its packaging and the supplied battery have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment. Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Appliances, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste! You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and.

if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

Warning! This appliance contains a rechargeable battery that, for safety reasons, is firmly built into the appliance and cannot be removed without destroying the casing. Improper disassembly leads to safety hazards. For this reason, take the appliance intact to a collection point where the appliance and battery will be disposed of properly.

Technical specifications

Model Rechargeable battery: Lithium-ion 3.7 V DC 2000 mAh.

Watt-hour rating: 7.4 Wh (tested as per UN 38.3) (non-replaceable)

Input: DC 5 V Charging time: approx. 7 hours

Operating time: approx. 15 hours (100% light intensity) approx. 150 hours (10% light intensity)

Remote control:

Range:

1x CR2025 / 3 V Single-use battery: Watt-hour rating: 0.45 Wh

(tested as per UN 38.3) max. 3 m

(with direct visual contact between remote control and light)

Tchibo GmbH, Überseering 18, Made exclusively for: 22297 Hamburg, Germany

> Information on the built-in rechargeable battery: Manufacturer: Ningbo Yibo Technology Co.,Ltd. Address:NO.281, south side of xinyanRoad, Ditang Street, YuyaoCity, Zhejiang Province, China Email: 630863708@gg.com Manufacturing date: 2025-07 Made in: China

Information on the supplied single-use battery:

Manufacturer: Dongguan Dongzan Lithium Energy Technology Co.,Ltd. Address: Tingshan Industrial Park, Houjie Town, Dongguan City, China Email: 519629302@gg.com Manufacturing date: 2025-08

Made in: China

www.tchibo.de/instructions