 


Tchibo Solar light

en Instructions for use

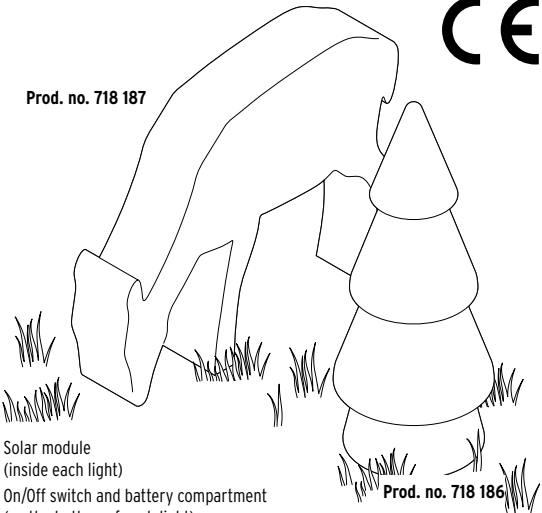

- Solar module (inside each light)
- On/Off switch and battery compartment (on the bottom of each light)
- 2x ground spikes (supplied only for deer light)

For your safety ⚠

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Intended use

The product is only suitable for decoration and not for lighting whole rooms or outdoor areas. The product is designed for permanent outdoor use. It has been designed for private use and is not suitable for commercial purposes.

Danger to children

- Keep small swallowable parts (e.g. screws) and packaging materials out of the reach of children. They pose several risks, including the risk of suffocation and choking!
- The product is not a toy! Keep the light and ground spikes away from children.

Danger of injury

- Do not operate the product using standard, non-rechargeable batteries. Risk of explosion!
- Rechargeable batteries must not be taken apart, thrown into fire or short-circuited.
- If a rechargeable battery has leaked, avoid contact with skin, eyes and mucous membranes. If necessary, rinse the affected areas with water and consult a doctor immediately.

Material damage

- The product complies with protection type IP44 and is protected against the ingress of solid foreign objects with a diameter larger than 1 mm and splashes of water, but must not be immersed in water. Nor should it be exposed to direct, heavy rain. The product must be correctly assembled and the battery compartment closed. The product must be placed in an upright position so that the solar module inside the light faces upwards and the water outlets on the bottom face downwards, otherwise water can get inside.
- Do not position the light in hollows or depressions where puddles might form.
- Make sure that the water outlets on the bottom remain clear so that condensation can escape.
- Remove the rechargeable battery from the product when it is flat or if you do not intend to use the product for a longer period of time. This will prevent damage caused by leakage.
- Do not use the product if it shows any visible signs of damage.
- Do not make any modifications to the product. Have repairs carried out only by a specialist workshop or as arranged by our customer care service.
- Due to the extremely long service life of the light-emitting diodes (LEDs), it is not necessary to replace them. They cannot and must not be replaced. The LEDs are firmly built into the light. Taking apart the light would damage the light and the LEDs.
- The solar module is inside the light. Do not stick anything to, cover or paint the light.
- If you set up the deer light outdoors without ground spikes, bring it inside if a storm is forecast.
- The product is suitable for outdoor use at temperatures above approx. -10°C. Keep it indoors at colder temperatures, otherwise, it may become damaged.
- Do not use any caustic, aggressive or abrasive products for cleaning.

Use

Unpacking

- ▷ Carefully take the product out of its packaging and remove all packaging materials.

Cleaning

 
NOTICE - material damage

Do not use any caustic, aggressive or abrasive products for cleaning.

- ▷ If necessary, wipe the light with a slightly damp cloth.

Attaching ground spikes (only for deer light)

- Suitable ground is required to set the product up with ground spikes. You can also set up the deer light without ground spikes.
- The tree light is supplied without ground spikes. It is held in place by an integrated weight.

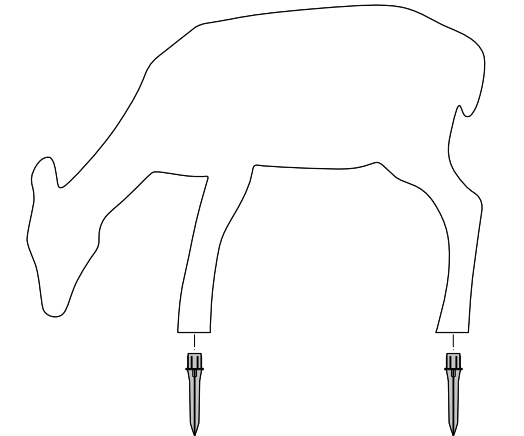


1. Insert the ground spikes all the way into the two corresponding holes on the bottom of the light.
2. Push the light together with the ground spikes into the earth as far as it will possibly go.


Turning the light on and off

The On/Off switch and battery compartment are located on the bottom of the light.

 Deer light

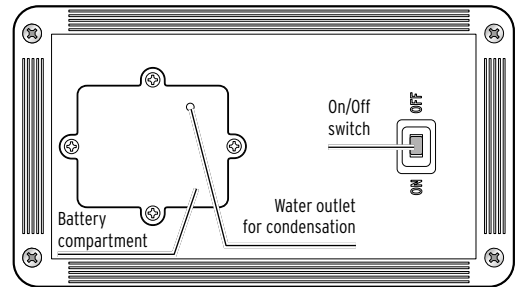

Tree light

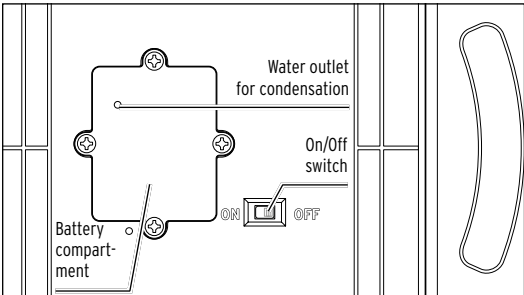 

- ▷ Slide the On/Off switch to **ON** to turn the light on. The light works fully automatically in this position:
 - The light switches on at dusk.
 - The light switches off at dawn.
- ▷ Slide the On/Off switch to **OFF** to turn the light off. The rechargeable battery will continue to charge whenever there is sufficient light.

Choosing a location

The solar light works independently of any electric power source. However, since the product depends on light from the sun, you should consider and observe the following:

- Set up the light in a place where it is exposed to direct sunlight for as long as possible throughout the day.
- Avoid positioning the light in a fully, or mostly shady location (beneath trees, roof ridges, etc.). Do not place the light on the north side of a building where there is not sufficient sunlight during the day.
- The light should not be continuously exposed to other sources of light during the night, e.g. bright spotlights in a driveway or garage entrance, etc. Keep in mind that many light sources only switch on at night if activated by a time-switch or motion sensor.

Charging the battery

- The rechargeable battery can only recharge if the light is placed in an upright position in a sunny location.
- Depending on the weather and intensity of the sun, it can take a few hours for the solar module to fully charge the battery.
- During the winter or after a successive number of cloudy days, you may find that the battery is not sufficiently charged. Slide the On/Off switch to **OFF** to turn the light off. The rechargeable battery will charge even when the light is switched off.

Problems / solutions

The solar light is producing only a dim light or does not light up at all.

 
- Is the rechargeable battery not fully charged or flat? Switch the light off for a few days so that the rechargeable battery can be fully recharged. If there is no improvement, try replacing the rechargeable battery pack. See the chapter titled "Removing / replacing the rechargeable battery".
- Are the surroundings too bright? Check whether other sources of light (e.g. street lights or time or motion sensor-controlled outdoor lights) are shining onto the light. If necessary, change the location.

Light shines with different brightness depending on the season.

- This is due to the weather and is not a fault. Weather conditions are at their best during the summer, and at their worst in the winter.

Removing / replacing the battery

Deer light

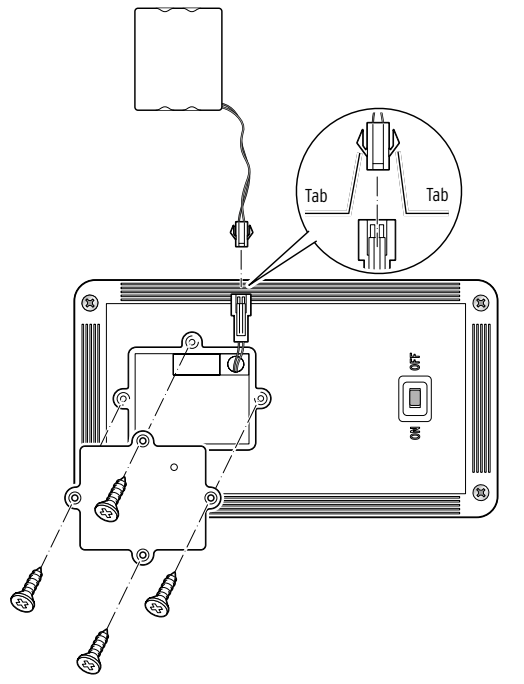


Product number: 718 186 / 718 187

Made exclusively for:

Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany

 Tree light

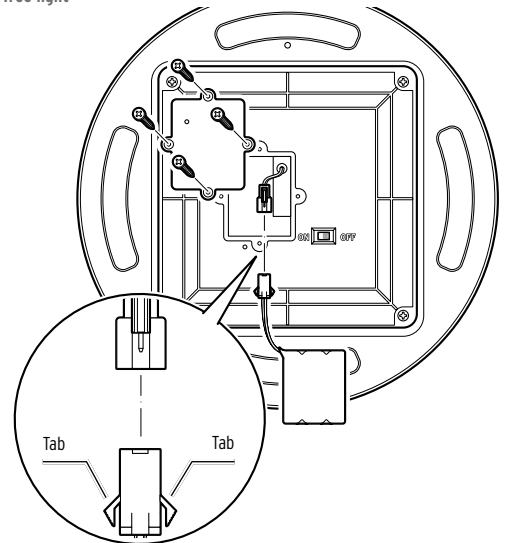

The rechargeable battery is designed for long-term operation. However, after a long period of use it may need to be replaced. Rechargeable batteries are subject to standard wear and tear, and performance can diminish.

1. Undo the four screws of the battery compartment lid using a Phillips screwdriver.
2. Remove the battery compartment lid.
3. Squeeze the tabs together on the plug of the old battery and pull off the plug. Use flat pliers if necessary.
4. Insert the plug of the new battery. You can order a new battery by contacting the customer care service (see enclosed warranty, chapter "Customer care service").
5. Put the battery compartment lid back on correctly.
6. Retighten the four screws.

Technical specifications

Model:	718 186 (tree light) 718 187 (deer light)
Power supply	
Solar module:	5 V / 2 W
Rechargeable battery:	3 x HR6 (AA) Ni-MH, 3.6 V / 1000 mAh
Protection class:	III ⚡
Splash protection:	IP44
Bulb:	22 LEDs (tree light) 19 LEDs (deer light)
Ambient temperature:	-10 to +40 °C
Made exclusively for:	Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany
In the course of product improvement, we reserve the right to make technical and optical modifications to the product.	

Disposal

The product, its packaging and the built-in rechargeable battery have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment. Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Devices, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste!

You are legally obliged to dispose of old devices separately from household waste. Electronic devices contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old devices can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.