 


Mini grater

Instructions for use

Product number: 733 649

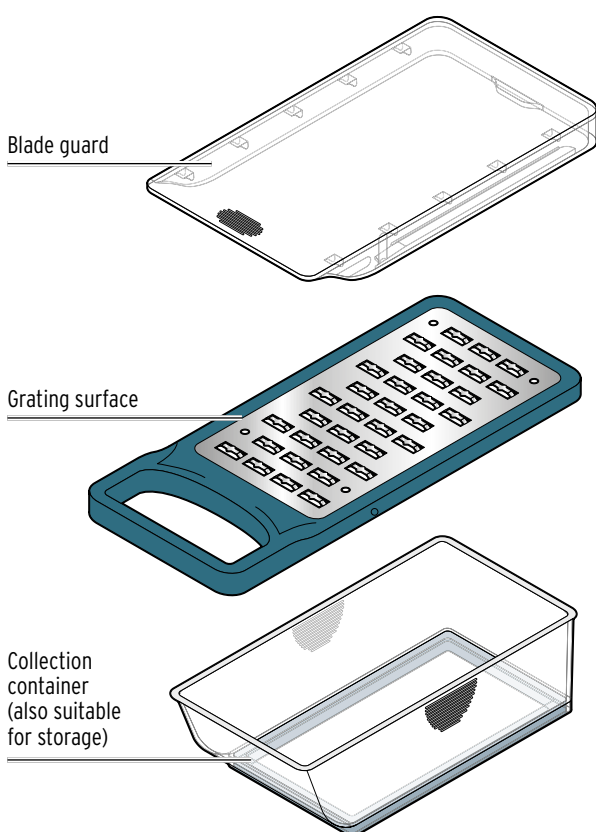

Dear Customer

Your new mini grater is suitable for grating hard cheeses such as Parmesan and can also be used for vegetables, fruit, citrus fruits, chocolate and other foods.

The grated food can be conveniently stored and served in the collection container.

We hope you will enjoy using this product.

Your Tchibo Team

For your safety



CAUTION - risk of injury


- The grating surface is very sharp:
 - Keep children away from the grater.
 - Handle the grater with care when using and cleaning it.
 - Always replace the blade guard **after use** and keep the grater out of the reach of children.

NOTICE - material damage




- Do not use any caustic, aggressive or abrasive products for cleaning.
- Do not allow food remnants to remain on the grating surface for longer periods. Always wash it immediately after use and only use a mild washing-up liquid to do so. To avoid injury, the dishwater should be clear enough for you to see the grating surface as you wash.
- The blade guard, the grating surface and the collection container can also be cleaned in the dishwasher. Take them out of the dishwasher as soon as possible after cleaning and dry them thoroughly if they are still wet.

Made exclusively for:
Tchibo GmbH, Überseering 18,
22297 Hamburg, Germany

Using the grater

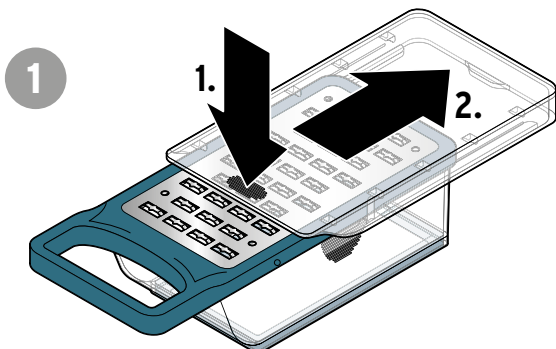

▷ Press lightly on the ribbed area and slide the blade guard off the collection container.

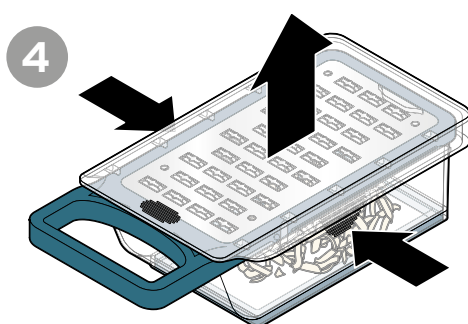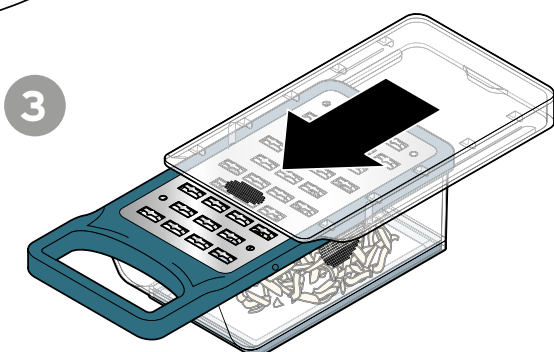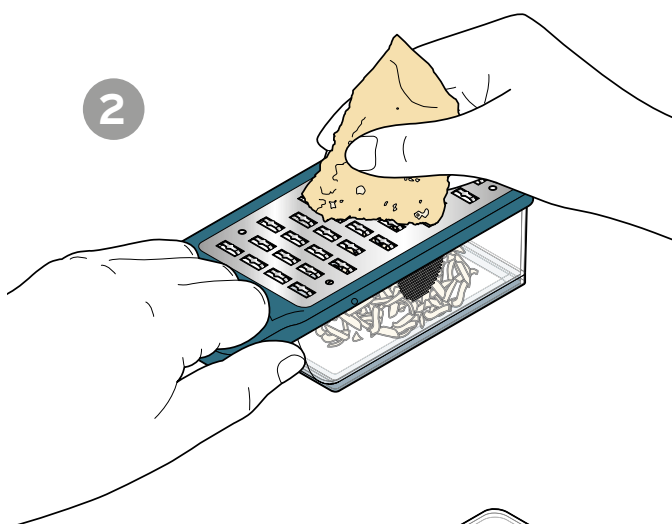

▷ Press the ribbed area on both sides and lift the grating surface up and off the collection container.



After use

