 



Cordless multipurpose chopper

en Instructions for use

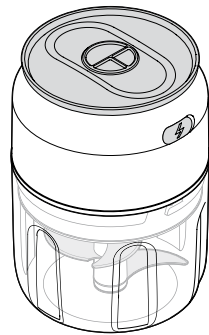

Tchibo GmbH D-22290 Hamburg · 154627AB4X3XVI · 2025-12

 At a glance (features)

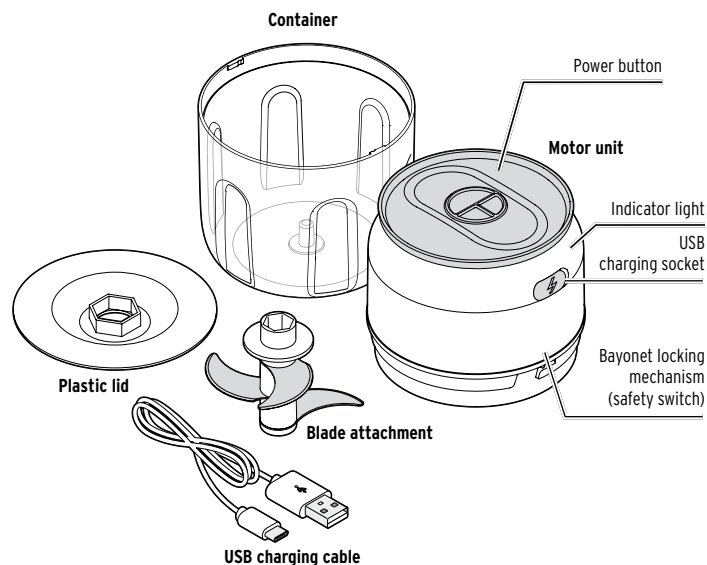

Recommended quantities for processing*:

Food	Quantity in g
Vegetables	approx. 30 g
Carrots	approx. 60 g
Peanuts	approx. 30 g
Garlic	approx. 50 g
Fruit (apples, pears, oranges, etc.)	approx. 50 g

The recommended quantities serve only as a guide; the appropriate amounts may be slightly higher or lower depending on the food.

About these instructions

This product is equipped with safety features. Nevertheless, read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage.

Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Symbols used in these instructions:

- This symbol warns you about the risk of injury.
- This symbol warns you about the risk of injury caused by electricity.

Signal words in these instructions:

CAUTION warns about the potential risk of minor injury.

NOTICE warns about the potential risk of material damage.

- This symbol indicates additional information.

Safety warnings

Intended use

The appliance is intended for chopping herbs, onions, nuts (without the shell) and other fruit and vegetables.

The appliance is **not** designed to process hard ingredients such as coffee beans, soya beans, ice cubes, frozen foods or dried herbs, dried fruit or dried vegetables. Remove any firm or hard shells, peels, stones, seeds or grains before processing. Do **not** process different ingredients with different consistencies at the same time.

The appliance is not designed for whipping liquids.

The appliance is designed to process domestic quantities and is not suitable for commercial use.

Danger to children and people with limited ability to operate appliances

- The appliance must not be used by children. Keep the appliance and USB charging cable out of the reach of children. Also store the appliance out of the reach of children when it is not in use. Children must not be allowed to play with the appliance.
- Cleaning and user maintenance must not be carried out by children.
- This appliance may be used by people with diminished physical, sensory or mental capacity or lacking the requisite knowledge/experience, provided they are supervised or have been instructed in the safe use of the appliance and understand the potential dangers.
- Keep the packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

Danger due to electricity

- Never immerse the motor unit or the USB charging cable in water or other liquids, as this poses a risk of electric shock. Do not touch the appliance with wet hands while it is charging.
- Do not use the appliance if the appliance itself or the USB charging cable show any visible signs of damage or if the appliance has fallen down.

- Do not disassemble the appliance any more than as described in these instructions. Do not make any modifications to the product. Only have repairs to the appliance or USB charging cable carried out by a specialist workshop.

When charging the appliance, note the following:

- Only use a suitable USB mains adapter that corresponds with the technical specifications of the appliance to charge the battery.
- Do not use or attempt to repair a faulty USB mains adapter.
- To charge the product, only plug it into a power socket which has been properly installed and which complies with the technical specifications of the mains adapter used.

Danger of explosion / fire / burns

- This product contains a rechargeable lithium-ion battery that for safety reasons is firmly built into the appliance and cannot be removed without destroying the housing. Improper disassembly leads to safety hazards.

It should be replaced only with an identical battery or the same type of battery. If the rechargeable battery is faulty, contact a specialist workshop.

- Do not charge the product in the vicinity of explosive gases.

- Warning!** Rechargeable lithium batteries can catch fire or explode, ...

.... if they are exposed to extreme heat, such as sunlight, fire, etc., or extremely low air pressure during use, charging, storage or transport. Use the product only in moderate climatic conditions.

... if they are taken apart, thrown into a fire or short-circuited.

Do not place any naked flames, such as burning candles, near the product. The product must be kept away from candles and other naked flames at all times to prevent the spread of fire.

- Do not modify, deform, heat or dismantle rechargeable batteries. Do not immerse them in water.
- The appliance cannot and must not be used while it is charging.

Risk of injury

- The blades are extremely sharp. Be careful when handling and cleaning the blade attachment, and when emptying the container. Never touch the blades directly with your hands.
- Always release the power button and wait until the blades have stopped turning before removing the container.
- Never leave the appliance unattended while in use.
- Do not use the appliance if the container, plastic lid or blade attachment is damaged, or if the blades are jammed or only rotate with difficulty.
- Keep all utensils such as spoons, knives, etc. away from the moving blades or other moving parts.
- The appliance must not be connected to a power socket during use, cleaning or when removing the container. Ensure that the USB charging socket is closed to ensuring the housing remains watertight.
- If the container shows cracks or similar signs of damage, refrain from using it. There is a risk of breakage and therefore of injury!
- Only use the original attachments.



www.tchibo.de/instructions

Material damage

- The appliance is designed to operate in short bursts of no longer than 30 seconds. After each burst, let the appliance cool for approx. 30 seconds before switching it on again. After max. 4 such bursts, switch off the appliance for approx. 30 minutes.
- Cut harder ingredients into small pieces before placing them in the container and do not overfill the container. Otherwise the blades can jam and become blocked.
- Never switch the appliance on while the container is empty. The motor and blade attachment bearing may overheat and become damaged.
- Do not use the container in the microwave, oven or on the hob; do not use it for freezing either.
- Avoid subjecting the container to hard knocks.
- Always place the appliance on an even, non-slip work surface. The surface must be hard-wearing, as occasional spatters are unavoidable. Keep the appliance a sufficient distance away from walls, furniture, etc., as well as from sources of heat such as hobs and ovens.
- Do not use caustic or abrasive cleaning products.

Disposal

The product, its packaging and the built-in rechargeable battery have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.




Appliances, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste!

You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health or the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

Warning! This appliance contains a battery that for safety reasons is firmly built into the appliance and cannot be removed without destroying the housing. Improper disassembly leads to safety hazards. Therefore, take the appliance intact to a collection point where the appliance and battery will be disposed of properly.

Charging the battery

The battery is not fully charged upon delivery. To reach the maximum charging capacity, charge the appliance up fully before using it for the first time.

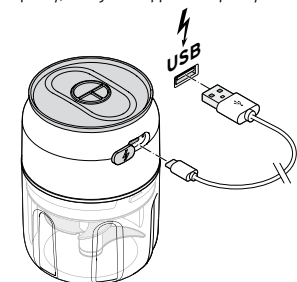

1. Open the covering cap on the USB charging socket on the motor unit.
2. Connect the supplied USB charging cable to the USB charging socket and a suitable USB mains adapter (not included).
3. Insert the USB mains adapter into a power socket.

The indicator light lights up in red while the appliance is charging. Once the battery is fully charged, the indicator light goes out.

The maximum charging time is approx. 4 hours. The operating time of the appliance with a fully charged battery is approx. 12 minutes.

Do not operate the appliance while it is charging.

4. When the appliance is charged, firstly remove the USB mains adapter from the power socket and then remove the USB charging cable from the appliance. Carefully close the USB charging socket on the appliance using the covering cap.

i To preserve battery's capacity for as long as possible, fully charge the battery every 2-3 months, even if you are not using the product. Charge the battery at a temperature of +10 to +40 °C. The battery will best hold its capacity at room temperature. The lower the ambient temperature, the shorter the operating time. The battery must be charged if the indicator light flashes red 5 times.

Use

- ▷ Clean the appliance prior to first use, as described in the chapter titled "Cleaning and storage".

Instructions for safe use and optimal results

- Observe the information on suitable foods under "Intended use".
- Always insert the blade attachment before adding the ingredients.
- Do not overfill the container as otherwise the blade attachment may become blocked or the appliance may not operate evenly. In this case, carefully remove any contents and try again. Observe the quantities specified in the table in the "At a glance (features)" section. There should always be some space between the blades and the container. The larger and harder the ingredients, the less full the container should be.
- Uniform results can be achieved by adding pieces of food that are the same size. It may therefore be necessary to roughly chop the ingredients before adding them to the container. Cut large ingredients such as carrots into slices, for example. Also cut herbs and vegetables with hard stems into smaller pieces before processing them.
- The multipurpose chopper operates quickly: some ingredients can be processed within 15 seconds. Wet ingredients can easily liquify if they are processed too long.
- If necessary, wet ingredients can be pushed back to the centre of the container with a spoon or similar implement. Never use your fingers!
- If you want to puree ingredients, ensure that these are cooked first.
- Do not add liquid or boiling-hot ingredients.

- Highly pigmented foods such as carrots, raspberries, etc. may slightly stain the plastic parts that they come into contact with. This is perfectly normal and is not a defect!
- Always empty the container immediately after use. It is not suitable for storing food over long periods of time.
- To prevent the appliance from overheating, do not operate it if the container is empty.


Assembling and filling the appliance



1. Place the blade attachment onto the fitting at the bottom of the container.



2. Add the ingredients to the container. Do not overfill the container.

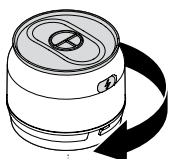

3. Place the plastic lid and motor unit onto the container as shown, ensuring that the drive axle on the bottom of the motor unit slots onto the blade attachment, and turn clockwise to tighten.

Warning: The motor unit, plastic lid and container are not permanently attached but are simply slotted together. Make sure that you do not accidentally pull off the motor unit during use.

The indicator light lights up blue 3 times (if the battery is sufficiently charged). The safety switch is activated and the appliance is ready to use.



Processing food



Attention: Always use the appliance in an upright position with the power button facing upwards. Never place the appliance with the power button facing down.

1. Press and hold the power button until the contents have been chopped to the desired consistency. The indicator light lights up blue during operation. Release the power button after **max. 30 seconds** so as not to strain the appliance.

i The appliance is equipped with a safety switch. If the motor unit is not positioned correctly on the plastic lid and container, it will not be possible to switch on the appliance and the indicator light will flash alternately in red and blue 3 times.

2. If you still do not have the consistency you require, wait approx. 30 seconds and then start another processing cycle - a maximum of four times in total.

After use

1. When the desired consistency is achieved, release the power button and wait for the blade attachment to come to a stop.
2. Turn the motor unit anticlockwise and remove it from the container. Remove the plastic lid from the container, then carefully take out the blade attachment. **Never hold the blade attachment by the blades themselves** - risk of injury!
3. Remove the processed ingredients from the container.
4. Clean the appliance as soon as possible after using it, as described in the chapter titled "Cleaning and storage".

Cleaning and storage



CAUTION - risk of injury

The blades are extremely sharp. Be especially careful when cleaning the blade attachment. Never touch the blades directly with your hands.



NOTICE - material damage

- Do not immerse the motor unit in water to clean it. Moisture must not get into the USB charging socket on the motor unit.
- Do not use any caustic, aggressive or abrasive products for cleaning.

- ▷ Wipe the motor unit with a slightly damp cloth. Make sure that the USB charging socket is securely closed so that moisture cannot get into the appliance.



The motor is self-lubricating and needs no additional lubrication or other maintenance.

- ▷ Rinse the container out with water to remove the coarsest residue from the sides.

- ▷ Thoroughly clean the blade attachment, container and plastic lid with warm water and a little washing-up liquid. To prevent injury, ensure that the water used for cleaning is clear enough for you to see the blades while washing.

- ▷ Rinse these parts in clean water and dry them well.



The plastic lid and blade attachment are also dishwasher-safe, although we would recommend hand-washing as this is more gentle.

- ▷ Allow all parts to dry thoroughly before reassembling the appliance. Moisture can cause mould to form.

- ▷ If necessary, recharge the battery before putting the appliance away. It will then be ready to use straight away next time.

- ▷ Store the appliance out of the reach of children.

Keep in mind: The motor unit and the plastic lid are only loosely slotted onto the container. The sharp blade attachment is therefore easily accessible for children!

Problems / solutions

The appliance does not switch on, even when the power button is pressed.

- The motor/appliance is damaged. Have the appliance checked at a specialist workshop.

Does the indicator light flash alternately in red and blue 3 times?

- The motor unit is not screwed fully into place (safety switch not activated) or is not correctly positioned on the container. Reassemble the appliance and screw the motor unit firmly into place.

Does the indicator light flash red five times?

- The battery is empty. Charge the battery.

The battery does not charge.

Does the indicator light not light up?

- Check whether the USB charging cable is correctly inserted into the charging socket and the mains adapter. Replace the charging cable if necessary.

Unpleasant smell coming from the motor.

- This is normal and harmless on the first use. Make sure there is sufficient ventilation.
- If the appliance continues to emit the smell after repeated use, have the appliance checked at a specialist workshop.

The blade attachment does not rotate.

- The drive axle at the bottom of the motor unit is not correctly positioned in the blade attachment. Correct the motor unit position.
- The added ingredients are blocking the blade attachment. Cut the ingredients into smaller pieces and do not fill the container as high.

Does the indicator light flash red three times?

- Cut the ingredients into smaller pieces if necessary and add a smaller amount.
- The motor/appliance is blocked. Have the appliance checked at a specialist workshop.

Technical specifications

Model:	734 272
Multipurpose chopper	
Rated input:	DC 5.0 V 1.0 A USB-C
Power:	20 W
Protection class:	III
Short-term operation:	max. 30 seconds
Volume capacity:	approx. 220-250 ml (in use)
Power consumption in off mode:	0 W
Charging time:	approx. 4 hours
Operating time:	approx. 12 minutes
Ambient temperature:	+10 to +40 °C
Rechargeable battery (tested as per IEN 38.3)	
Type:	Li-ion
Voltage:	3.7 V / 1200 mAh
Watt-hour rating:	4.44 Wh
USB mains adapter (not included)	
Input:	AC 100-240 V 50/60 Hz
Output:	DC 5.0 V 1.0 A

To charge the product, only use mains adapters of protection class II that are approved for use with household appliances.

Made exclusively for:

Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany



Product number: 734 272