

NINETEC NT5-16XL

passend zu folgenden Druckermodellen: Epson WorkForce WF-2010 W, Epson WorkForce WF-2500 Series, Epson WorkForce WF-2510 WF, Epson WorkForce WF-2520 NF, Epson WorkForce WF-2530 WF, Epson WorkForce WF-2540 WF, Epson WorkForce WF-2630 WF, Epson WorkForce WF-2650 DWF, Epson WorkForce WF-2660 DWF, Epson WorkForce WF-2750 DWF, Epson WorkForce WF-2760 DWF

NINETEC NT5-223

passend zu folgenden Druckermodellen: Brother DCP-J 4120 DW, Brother DCP-J 562 DW, Brother MFC-J 1100 Series, Brother MFC-J 1140 W, Brother MFC-J 1150 DW, Brother MFC-J 1170 DW, Brother MFC-J 1180 DWT, Brother MFC-J 4420 DW, Brother MFC-J 4425 DW, Brother MFC-J 4620 DW, Brother MFC-J 4625 DW, Brother MFC-J 480 DW, Brother MFC-J 5320 DW, Brother MFC-J 5600 Series, Brother MFC-J 5620 DW, Brother MFC-J 5625 DW, Brother MFC-J 5720 DW, Brother MFC-J 680 DW, Brother MFC-J 880 DW

NINETEC NT5-29XL

passend zu folgenden Druckermodellen: Epson Expression Home XP-235, Epson Expression Home XP-240 Series, Epson Expression Home XP-245, Epson Expression Home XP-247, Epson Expression Home XP-250 Series, Epson Expression Home XP-255, Epson Expression Home XP-257, Epson Expression Home XP-330 Series, Epson Expression Home XP-332, Epson Expression Home XP-335, Epson Expression Home XP-340 Series, Epson Expression Home XP-342, Epson Expression Home XP-345, Epson Expression Home XP-350 Series, Epson Expression Home XP-352, Epson Expression Home XP-355, Epson Expression Home XP-430 Series, Epson Expression Home XP-432, Epson Expression Home XP-435, Epson Expression Home XP-440 Series, Epson Expression Home XP-442, Epson Expression Home XP-445, Epson Expression Home XP-450 Series, Epson Expression Home XP-452, Epson Expression Home XP-455

NINETEC NT5-3213

passend zu folgenden Druckermodellen: Brother DCP-J 572 DW, Brother DCP-J 770 Series, Brother DCP-J 772 DNW, Brother DCP-J 772 DW, Brother DCP-J 774 DW, Brother MFC-J 490 Series, Brother MFC-J 491 DW, Brother MFC-J 497 DW, Brother MFC-J 890 DW, Brother MFC-J 890 Series, Brother MFC-J 895 DW

NINETEC NT5-3219

passend zu folgenden Druckermodellen: Brother MFC-J 5330 DW, Brother MFC-J 5330 DW XL, Brother MFC-J 5335 DW, Brother MFC-J 5335 DWF, Brother MFC-J 5730 DW, Brother MFC-J 5830 DW, Brother MFC-J 5930 DW, Brother MFC-J 6530 DW, Brother MFC-J 6535 DW, Brother MFC-J 6535 DW XL, Brother MFC-J 6730 DW, Brother MFC-J 6930 DW, Brother MFC-J 6935 DW, Brother MFC-J 6935 DWF

Ninetec NT5-550/551XL

passend zu folgenden Druckermodellen: Canon Pixma IP 7200 Series, Canon Pixma IP 7240, Canon Pixma IP 7250, Canon Pixma IP 8700 Series, Canon Pixma IP 8720, Canon Pixma IP 8750, Canon Pixma IX 6800 Series, Canon Pixma IX 6820, Canon Pixma IX 6850, Canon Pixma MG 5400 Series, Canon Pixma MG 5450, Canon Pixma MG 5500 Series, Canon Pixma MG 5550, Canon Pixma MG 5600 Series, Canon Pixma MG 5650, Canon Pixma MG 5650 white, Canon Pixma MG 5655, Canon Pixma MG 6300 Series, Canon Pixma MG 6350, Canon Pixma MG 6400 Series, Canon Pixma MG 6420, Canon Pixma MG 6450, Canon Pixma MG 6600 Series, Canon Pixma MG 6650, Canon Pixma MG 7100 Series, Canon Pixma MG 7120, Canon Pixma MG 7150, Canon Pixma MG 7500 Series, Canon Pixma MG 7550, Canon Pixma MX 720 Series, Canon Pixma MX 725, Canon Pixma MX 920 Series, Canon Pixma MX 922, Canon Pixma MX 925

NINETEC NT5-570/571XL

passend zu folgenden Druckermodellen: Canon Pixma MG 5700 Series, Canon Pixma MG 5750, Canon Pixma MG 5750 Series, Canon Pixma MG 5751, Canon Pixma MG 5752, Canon Pixma MG 5753, Canon Pixma MG 6800 Series, Canon Pixma MG 6850, Canon Pixma MG 6850 Series, Canon Pixma MG 6851, Canon Pixma MG 6852, Canon Pixma MG 6853, Canon Pixma MG 7700 Series, Canon Pixma MG 7750, Canon Pixma MG 7750 Series, Canon Pixma MG 7751, Canon Pixma MG 7752, Canon Pixma MG 7753, Canon Pixma TS 5000 Series, Canon Pixma TS 5050, Canon Pixma TS 5050 Series, Canon Pixma TS 5051, Canon Pixma TS 5052, Canon Pixma TS 5053, Canon Pixma TS 5055, Canon Pixma TS 6000 Series, Canon Pixma TS 6020 white, Canon Pixma TS 6040, Canon Pixma TS 6050, Canon Pixma TS 6050 Series, Canon Pixma TS 6051, Canon Pixma TS 6052, Canon Pixma TS 8000 Series, Canon Pixma TS 8020 Series, Canon Pixma TS 8040, Canon Pixma TS 8050, Canon Pixma TS 8050 Series, Canon Pixma TS 8051, Canon Pixma TS 8052, Canon Pixma TS 8053, Canon Pixma TS 9000 Series, Canon Pixma TS 9040, Canon Pixma TS 9050, Canon Pixma TS 9050 Series, Canon Pixma TS 9055

NINETEC NT5-580/581XXL

passend zu folgenden Druckermodellen: Canon Pixma TR 7500 Series, Canon Pixma TR 7520, Canon Pixma TR 7550, Canon Pixma TR 8500 Series, Canon Pixma TR 8520, Canon Pixma TR 8550, Canon Pixma TS 6100 Series, Canon Pixma TS 6150, Canon Pixma TS 6151, Canon Pixma TS 6200 Series, Canon Pixma TS 6220, Canon Pixma TS 6220 white, Canon Pixma TS 6240, Canon Pixma TS 6241, Canon Pixma TS 6250, Canon Pixma TS 6251, Canon Pixma TS 6300 Series, Canon Pixma TS 6350, Canon Pixma TS 6350 Series, Canon Pixma TS 6351, Canon Pixma TS 705, Canon Pixma TS 8100 Series, Canon Pixma TS 8120, Canon Pixma TS 8150, Canon Pixma TS 8151, Canon Pixma TS 8152, Canon Pixma TS 8200 Series, Canon Pixma TS 8220, Canon Pixma TS 8220 white, Canon Pixma TS 8240, Canon Pixma TS 8241, Canon Pixma TS 8242, Canon Pixma TS 8250, Canon Pixma TS 8251, Canon Pixma TS 8252, Canon Pixma TS 8300 Series, Canon Pixma TS 8350, Canon Pixma TS 8350 Series, Canon Pixma TS 8351, Canon Pixma TS 8352, Canon Pixma TS 9100 Series, Canon Pixma TS 9120 gray, Canon Pixma TS 9150, Canon Pixma TS 9155, Canon Pixma TS 9500 Series, Canon Pixma TS 9520, Canon Pixma TS 9521 C, Canon Pixma TS 9540, Canon Pixma TS 9541 C, Canon Pixma TS 9550, Canon Pixma TS 9551 C

NINETEC NT4-932/933XL

passend zu folgenden Druckermodellen: HP OfficeJet 6100 e-Printer, HP OfficeJet 6600 e-All-in-One, HP OfficeJet 6600 e-All-in-One special Edition, HP OfficeJet 6600 Series, HP OfficeJet 6700 Premium, HP OfficeJet 7110 wide format, HP OfficeJet 7510 wide format, HP OfficeJet 7600 Series, HP OfficeJet 7610 wide format, HP OfficeJet 7612 wide format

NINETEC NT4-950/951XL

passend zu folgenden Druckermodellen: HP OfficeJet Pro 251 dw, HP OfficeJet Pro 276 dw, HP OfficeJet Pro 8100 ePrinter, HP OfficeJet Pro 8600 e-All-in-One, HP OfficeJet Pro 8600 Plus e-All-in-One, HP OfficeJet Pro 8600 Premium e-All-in-One, HP OfficeJet Pro 8610 e-All-in-One, HP OfficeJet Pro 8615 e-All-in-One, HP OfficeJet Pro 8616 e-All-in-One, HP OfficeJet Pro 8620 e-All-in-One, HP OfficeJet Pro 8625 e-All-in-One, HP OfficeJet Pro 8630 e-All-in-One, HP OfficeJet Pro 8640 e-All-in-One, HP OfficeJet Pro 8660 e-All-in-One

NINETEC NT5-364XL

passend zu folgenden Druckermodellen: HP DeskJet 3070 A, HP DeskJet 3070 Series, HP DeskJet 3520 e-All-in-One, HP DeskJet 3521, HP DeskJet 3522, HP DeskJet 3524, HP DeskJet D 5400 Series, HP DeskJet D 5445, HP DeskJet D 5460, HP OfficeJet 4610, HP OfficeJet 4620, HP OfficeJet 4622, HP OfficeJet 7515, HP PhotoSmart 5510 e-All-in-One, HP PhotoSmart 5514 e-All-in-One, HP PhotoSmart 5515 e-All-in-One, HP PhotoSmart 5520 e-All-in-One, HP PhotoSmart 5522 e-All-in-One, HP PhotoSmart 5524 e-All-in-One, HP PhotoSmart 5525 e-All-in-One, HP PhotoSmart 6500 Series, HP PhotoSmart 6510 e-All-in-One, HP PhotoSmart 6520 e-All-in-One, HP PhotoSmart 6525 e-All-in-One, HP PhotoSmart 7510 e-All-in-One, HP PhotoSmart 7520 e-All-in-One, HP PhotoSmart B 109 a, HP PhotoSmart B 8550, HP PhotoSmart C 5300 Series, HP PhotoSmart C 5324, HP PhotoSmart C 5370, HP PhotoSmart C 5373, HP PhotoSmart C 5380, HP PhotoSmart C 5383, HP PhotoSmart C 5388, HP PhotoSmart C 5390, HP PhotoSmart C 5393, HP PhotoSmart C 6300 Series, HP PhotoSmart C 6324, HP PhotoSmart C 6380, HP PhotoSmart C 6383, HP PhotoSmart D 5400 Series, HP PhotoSmart D 5445, HP PhotoSmart D 5460, HP PhotoSmart D 5463, HP PhotoSmart D 5468, HP PhotoSmart D 7500 Series, HP PhotoSmart D 7560, HP PhotoSmart eStation, HP PhotoSmart eStation C 510 a, HP PhotoSmart eStation C 510 Series, HP PhotoSmart Plus, HP PhotoSmart Plus B 200 Series, HP PhotoSmart Plus B 209 a, HP PhotoSmart Plus B 209 b, HP PhotoSmart Plus B 209 c, HP PhotoSmart Premium B 010 a, HP PhotoSmart Premium B 010 b, HP PhotoSmart Premium B 010 Series, HP PhotoSmart Premium B 210, HP PhotoSmart Premium B 210 a, HP PhotoSmart Premium B 210 b, HP PhotoSmart Premium B 210 c, HP PhotoSmart Premium B 210 e, HP PhotoSmart Premium B 210 Series, HP PhotoSmart Premium B 410 a, HP PhotoSmart Premium B 410 c, HP PhotoSmart Premium B 410 Series, HP PhotoSmart Premium C 309 g, HP PhotoSmart Premium C 310 a, HP PhotoSmart Premium C 410 a, HP PhotoSmart Premium C 410 b, HP PhotoSmart Premium C 410 c, HP PhotoSmart Premium C 410 d, HP PhotoSmart Premium C 410 e, HP PhotoSmart Premium C 410 Series, HP PhotoSmart Premium Fax, HP PhotoSmart Premium Fax C 309 a, HP PhotoSmart Premium Touchsmart Web, HP PhotoSmart Premium TouchSmart Web C 309 n, HP PhotoSmart Wireless B 100 Series, HP PhotoSmart Wireless B 109 a, HP PhotoSmart Wireless B 109 b, HP PhotoSmart Wireless B 109 c, HP PhotoSmart Wireless B 109 d, HP PhotoSmart Wireless B 109 e, HP PhotoSmart Wireless B 109 f, HP PhotoSmart Wireless B 109 g, HP PhotoSmart Wireless B 109 n, HP PhotoSmart Wireless e-All-in-One B 110 a, HP PhotoSmart Wireless e-All-in-One B 110 c, HP PhotoSmart Wireless e-All-in-One B 110 d, HP PhotoSmart Wireless e-All-in-One B 110 e, HP PhotoSmart Wireless e-All-in-One B 110 f, HP PhotoSmart Wireless e-All-in-One B 110 Series

NINETEC NT5-502XL

passend zu folgenden Druckermodellen: Epson Expression Home XP-5100, Epson Expression Home XP-5100 Series, Epson Expression Home XP-5105, Epson Expression Home XP-5115, Epson WorkForce WF-2860 DWF, Epson WorkForce WF-2865 DWF

NINETEC NT5-603XL

passend zu folgenden Druckermodellen: Epson Expression Home XP-2100, Epson Expression Home XP-2100 Series, Epson Expression Home XP-2105, Epson Expression Home XP-3100, Epson Expression Home XP-3100 Series, Epson Expression Home XP-3105, Epson Expression Home XP-4100, Epson Expression Home XP-4100 Series, Epson Expression Home XP-4105, Epson WorkForce WF-2810 DWF, Epson WorkForce WF-2830 DWF, Epson WorkForce WF-2835 DWF, Epson WorkForce WF-2850 DWF