




## Charging

To prevent damage to the rechargeable battery, it is only half charged upon delivery. Charge the battery completely before using the product for the first time.

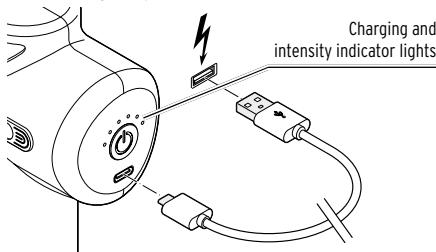

1. Insert the plug of the supplied USB-C charging cable into the charging socket on the device.
2. Connect the USB-C charging cable to a suitable USB mains adapter and plug the adapter into a mains power socket.


The flashing indicator light shows that the battery is charging. Indicator lights that are continuously on indicate the charging status:

3. The battery is fully charged when all indicator lights are lit up and none are flashing. Unplug the mains adapter from the mains power socket and disconnect the USB-C charging cable from the charging socket.


If the battery is flat, the charging time is approx. 3-4 hours. If the battery is fully charged and the device is set to the highest intensity, the operating time is approx. 2 hours 15 minutes.

**i** To preserve the battery's full capacity, the battery should be recharged every 3 months even if the device is not being used. The battery will best hold its charge at room temperature. The lower the temperature, the shorter the operating time.

## Use

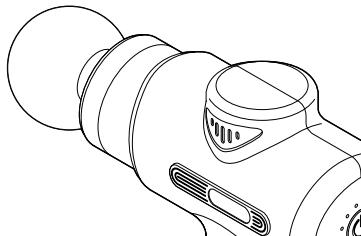

1. Insert the desired attachment into the attachment slot on the device.

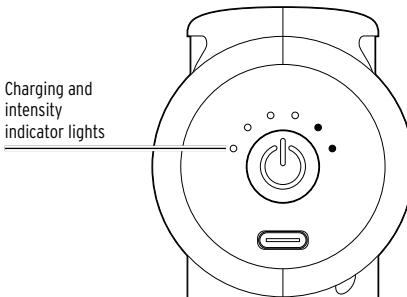

**i** To display the battery charge level, briefly press the **○** button.

2. Press and hold the **○** button to switch on the device.

The first indicator light lights up and the lowest massage intensity is switched on.

3. Briefly press the **○** button to increase the massage intensity gradually.


Depending on the massage intensity set, the corresponding number of indicator lights will light up.

When all six indicator lights light up, the highest massage intensity has been reached.

4. Press and hold the **○** button to switch off the device. The indicator lights go out.

5. Move the massage attachment slowly and, depending on the attachment, in a circular motion, over the areas of the body you wish to massage.

- Do not apply too much pressure to the skin with the device.
- Do not use the device for a long time on one specific area.
- **Do not use the device directly on your spine.** When using the fork attachment, ensure that the ends of the attachment are next to the vertebrae of the spine as you move it down your back.

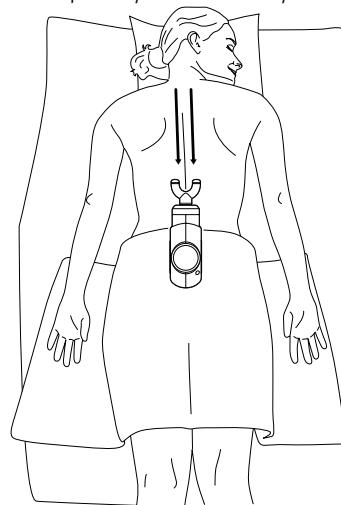

- The massage should last no longer than 15 minutes. The device therefore switches off automatically after 15 minutes.

- ▷ Remove the massage attachment from the slot in the device after use.

## Care

- ▷ Disconnect the device from the mains power supply and switch it off before cleaning it.
- ▷ Wipe the device and attachments with a slightly damp cloth.
- ▷ Store the device in a dry place out of the reach of children.

## Problems / solutions

The device does not switch on.

- Does the battery need to be charged?

The device does not charge.

- Check the plug connections between the device, USB-C charging cable, mains adapter and power socket.
- Unplug the mains adapter from the mains power socket and disconnect the USB-C charging cable for a few seconds before connecting them again.

## Disposal

This product, its packaging and the built-in rechargeable battery have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



**Devices, single-use batteries and rechargeable batteries** marked with this symbol must not be disposed of along with household waste! You are legally obliged to dispose of old devices separately from household waste. Electronic devices contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old devices can be disposed of free of charge is available from your local authorities.

**Warning!** This device contains a rechargeable battery that, for safety reasons, is firmly built into the device and cannot be removed without destroying the casing. Improper disassembly leads to safety hazards. For this reason, take the device intact to a collection point where the device and battery will be disposed of properly.

## Information about the inserted battery

**Manufacturer:** Yongkang Shengyuan Technology Co., Ltd. 2F, No. 9, Geshantou, Shangtiaoqiao Natural Village, Xicheng Street, Yongkang City, Jinhua City, Zhejiang Province, PEOPLE'S REPUBLIC OF CHINA

**Email:** 674751020@qq.com

**Telephone:** 0086 15989510939

**Model:** Li-ion 18650 - 2S1P 1200 mAh

**Manufacturing date:** 2025/06

**Made in:** China