 




Rechargeable Heated House Shoes

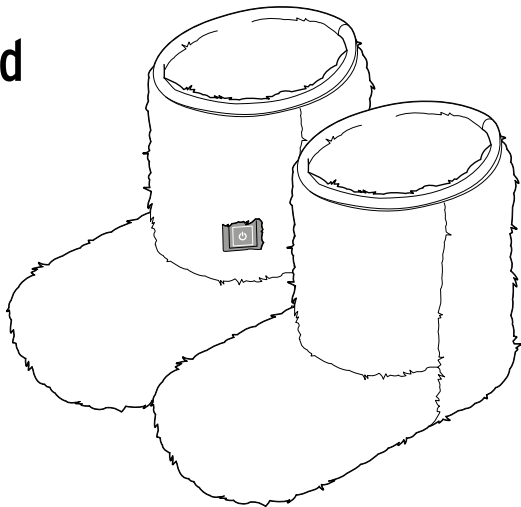

en Instructions for use and warranty

Dear Customer

Your new heated house shoes provide warmth for cold feet that have been outside for a long time.

You can also warm up your feet in the evening before bed, so that you do not have to go bed with cold feet.

Thanks to the rechargeable battery, you have maximum freedom of movement.

Your Tchibo Team



The product is a heating device that fits snugly around the feet and requires little electricity. It takes approx. 15-20 minutes to heat up. When checking the temperature, bear in mind that a temperature that feels lukewarm to your hand might well feel uncomfortably hot on your feet.



www.tchibo.de/instructions

(Please enter the product number in the box labelled "Bedienungsanleitungssuche" and click on "Suchen".)

Contents

3 About these instructions

5 Safety warnings

9 At a glance (features)

10 Use

10 Unpacking

10 Charging the rechargeable batteries

11 Putting on and switching on the heated shoes

12 Switching the shoes off/automatic switch-off function

12 Cleaning and storage

13 Technical specifications

 
14 Problems / solutions

15 Disposal

16 Warranty

16 Service and repair

16 Customer care service

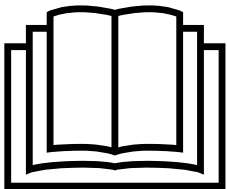

Read the instructions! Important information - keep for future reference!

About these instructions

This product is equipped with safety features. Nevertheless, read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage.

Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Symbols in these instructions:



This symbol warns you about the risk of injury.



This symbol warns you about the risk of injury caused by electricity.

Signal words in these instructions:

DANGER warns about the imminent risk of serious or fatal injury.

WARNING warns about the potential risk of serious or fatal injury.

NOTICE warns about the potential risk of material damage.



This indicates additional information.

Symbols on the heated house shoes that must be observed



Read notes and instructions for use



Hand wash at max. 30 °C



Do not pierce with needles or anything similar



Do not bleach



Do not use when folded or crumpled



Do not iron



Not suitable for children under the age of 3



Do not dry clean



Do not dry in a tumble dryer

Safety warnings

Intended use

- The heated shoes are designed for home use as described in these instructions. They are not suitable for use in hospitals, clinics, etc.
- The heated shoes are not a medical device.
- The heated shoes must not be used together with outdoor shoes. Outdoor shoes must be removed before the heated shoes are used. Do not insert the heated shoes into outdoor shoes and do not insert outdoor shoes into the heated shoes.

Danger to children and people with limited ability to operate devices

- This product must not be used by children aged between 0 and 3 years as children of this age cannot sense or indicate that they are too hot.
- Children aged between 3 and 8 years may use this product only if

... they are continually supervised by their parents or another adult when doing so,
... and the product is kept at the lowest heat setting at minimum temperature.

- This product can be used by children aged 8 and over and by people with
... reduced physical, sensory or mental capabilities or
... lack of experience and/or knowledge, provided they are
... supervised or
... have been trained in the safe use of the product and
... understand the potential dangers.
Children are not permitted to play with the product.
Cleaning and maintenance must not be carried out by children without supervision.
- Keep the packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

Danger to people with a pacemaker

- If you have a pacemaker, please be aware that the electromagnetic fields emanating from this electric product may, under certain circumstances, interfere with the functions of your pacemaker. The strength of these fields is however well below the applicable limits. Therefore, ask your doctor and the manufacturer of the pacemaker for advice before using this product.

Do not use the heated shoes on ...

- ... people who are unable to feel heat properly. Small children react more sensitively to heat than adults. Taking certain medicines, or suffering from certain diseases, such as diabetes, may lead to disturbances in the sensory perception of temperature. Frail or sick people or those with special needs may not be able to call for help if they feel too warm.
 - ... children younger than 3 years, people who are unable to help themselves, the sick or anyone who is unable to sense heat properly.
- If in doubt, or if the user suffers from circulatory problems, consult your doctor before use.

... pets or other animals.

If you feel unwell or have any other complaints while using the product, discontinue use. If necessary, contact a doctor.

Danger of electric shock due to moisture

- The rechargeable batteries and charging cable must not come into contact with moisture, water or any other liquids, as there is otherwise a danger of electric shock. The heated shoes must also not become moist when plugged in. Only use the product when dry - never when damp!
- After washing the shoes, wait until they have dried thoroughly before reinserting the rechargeable batteries!
- Do not use the product outdoors or in rooms with high humidity.
- Do not charge the rechargeable batteries in the bathroom or in the vicinity of washbasins or containers filled with liquid (e.g. vases).

Danger due to electricity

- Only plug the rechargeable batteries into a properly installed power socket that complies with the device's technical specifications.
- When connecting to the mains via USB mains adapter, use only a USB mains adapter that has protection class II (symbol: ) and complies with the technical specifications of the rechargeable battery.
- The power socket must be easily accessible so that you can unplug the mains adapter quickly if needed. Route the connection cable in such a way that it does not present a tripping hazard.
- Do not insert any pointed objects such as safety pins or anything similar into the heated shoes.
- Keep the product away from hot surfaces and sharp edges.
- Never use the product if any part of it is visibly damaged or if it has been handled violently.
- Do not make any modifications to the product. Have repairs to the product carried out only by

a specialist workshop or as arranged by our customer care service. Improper repairs can result in considerable risk of injury to the user.

Danger - risk of fire / explosion

- Always take the rechargeable batteries out of the shoes before charging them.
- Do not use any sprays or aerosols near the heated shoes. In unfavourable conditions the spray might ignite.
- To avoid parts of the device overheating and suffering damage, only use the product when it is unfolded. The product must never be used when it is doubled up or crumpled and must never be sharply creased.
- The product is equipped with a thermal control switch as protection against overheating. If the thermal control switch is triggered, allow the product to cool to room temperature before switching it on again.
- Make sure that you do not fall asleep during use. If you use the product when you are very tired, select the lowest heat setting for precautionary reasons.

- The product contains rechargeable lithium-ion batteries. These must not be taken apart, thrown into fire or short-circuited.
- Do not change, deform, heat up or dismantle rechargeable batteries.
Do not allow damaged rechargeable batteries to come into contact with water.
- Only use the rechargeable batteries provided with the shoes. Only use the batteries to charge the shoes and not for any other purpose.


Danger – risk of burns

- Prolonged use at the highest setting may lead to skin irritations and burns.
- To avoid burn injuries to the skin, test the temperature prior to use with the back of your hand or elbow (not with the palm, as this is less sensitive than other parts of the body).
- Do not use the product directly on your skin.
Always wear socks with the heated shoes.

Material damage

- The product is subject to wear and tear. You should therefore always check it for signs of wear or damage before each use. If you discover signs of damage, have the product inspected at a specialist workshop or by our customer care service before using it again.
- Keep all pointed and sharp objects of any kind (e.g. jewellery, belt buckles, etc.) away from the heated shoes.
- Always store the product in a cool, dry place where it is protected from other sources of heat.
Do not place any heavy items on top of the shoes.
- When cleaning the shoes, observe the care instructions on the sewn-in label.


At a glance (features)

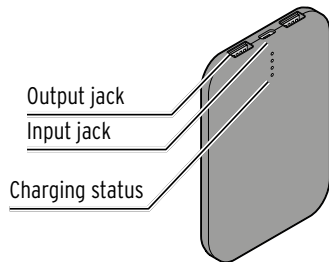

Heat settings:


- 1 = maximum heat level = **red**
- 2 = medium heat level = **blue**
- 3 = minimum heat level = **white**

2x rechargeable
battery

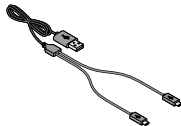

1x Y charging cable

2x heated shoe

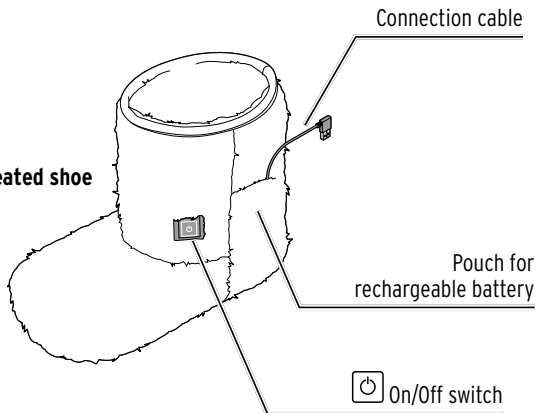

Use

Unpacking


- ▷ Take the product out of its packaging and remove all packaging materials.

Charging the rechargeable batteries

If possible, charge the rechargeable batteries fully (at the same time) before each use.

1. Remove the rechargeable batteries from the battery pouches on the heated shoes.

2.

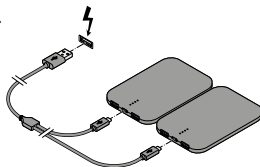

Insert the small plugs on the charging cable provided into the input jacks on the rechargeable batteries.

3. Insert the large plug on the charging cable into a suitable USB mains adapter. (see "Technical specifications", not included).

4. Insert the mains adapter into a power socket.

- The charging status symbol indicates the charging status of the charging box:
 - LED extinguished = battery is flat
 - LED is flashing = charging
 - LED is glowing continually = charged.
- The following charging intervals are displayed:
25% - 50% - 75% - 100%.
- When the battery is fully charged, all 4 LEDs will light up.

Charging time: max. 10 hours (at 1 A)

Operating time (with fully charged battery):
approx. 4 hours on highest heat setting

5. When the batteries are fully charged, disconnect the USB mains adapter from the socket and the charging cable from the rechargeable batteries.
6. Place the rechargeable batteries back into the battery pouches on the heated shoes.




If the product has not been used for a very long period of time, the rechargeable batteries may have lost so much power that you will no longer be able to operate the product. In this case, recharge the batteries as described in the section “Charging the rechargeable batteries”.

Putting on and switching on the heated shoes


Before use, read the previous “Safety warnings” chapter carefully. This includes a great deal of information to ensure safe use.

1. Place the heated shoes next to each other, ensuring that the switch and battery pouch are facing inwards.

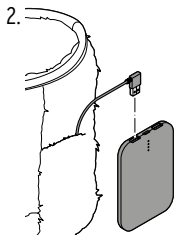

2. Connect the heated shoe's connection cable with one of the output jacks on the rechargeable battery.

The indicator light in the switch will flash up in red first, then in blue, then in white.

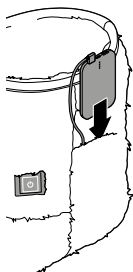

3. Store the rechargeable battery in the designated pouch.
4. To switch the shoes on, press the On/Off switch down for approx. 2-3 seconds.
The indicator light in the switch will light up red.
5. To switch between the heat levels, briefly press on the On/Off switch.

The indicator light on the switch will light up in...

- ... **red** for the highest heat level,
- ... **blue** for the medium heat level,
- ... **white** for the lowest heat level.

Select heat level 3 to begin with.

The heated shoes will take approx. 15-20 minutes to reach the maximum temperature. Now you can switch back to a lower heat level.

6. Put on the heated shoes.

Switching the shoes off / automatic switch-off function

- ▷ To switch the shoes off, press the On/Off switch down for approx. 2-3 seconds until the indicator light extinguishes.
- ▷ Allow the shoes to cool down before storing them away.

The heated shoes will switch off automatically after approx. 90 minutes.

- ▷ Allow the batteries and heated shoes to cool down to room temperature before switching them on again.

Cleaning and storage



WARNING - risk of explosion

- Always remove the rechargeable batteries from the shoes before washing them. The rechargeable batteries could otherwise be damaged.
Risk of explosion.



DANGER - electricity

- After washing the shoes, wait until they have dried thoroughly before reinserting the rechargeable batteries. Never use while damp!
 - Never switch the heated shoes on to dry them.
-
- Frequent washing of the shoes puts them under strain. We therefore recommend that you do not wash them too often over the course of their life.
 - Follow the care instructions on the sewn-in label.
 - Let the shoes cool down completely after use before washing them.

NOTICE - material damage

- Hand wash only.
- Do not dry in a tumble dryer.
- Do not dry on a radiator, in the sun or by means of any other source of heat.
- Do not iron.
- Do not wring it out or deform it in any way.
- Do not use clothing pegs to hang up the heated shoes.
- Do not use any caustic, aggressive or abrasive products for cleaning.

1. Wash the heated shoes by hand only. Use lukewarm water and mild detergent to do so. Do not wring out or fold the heated shoes.
2. Spread the heated shoes out flat in a warm environment and leave them to dry completely.

Storing

- ▷ Do not fold the heated shoes up.
- ▷ Do not place heavy objects on top of the heated shoes. The shoes must not be creased.

- ▷ Always keep the shoes in a dry, cool place, protected from other sources of heat.

Technical specifications

Model: 718 079 (S / 37-39)
718 080 (M / 40-42)

Rechargeable battery: lithium-ion rechargeable battery
3.7 V/ 5000 mAh
(tested as per UN 38.3)
Watt-hour rating: 18.5 Wh

Input: 5 V  2 A
Output: 5 V  1 A
(the  symbol indicates direct current)

Power: 5 W

Charging time: max. 10 hours

Operating time (with fully charged battery):
approx. 4 hours
on the highest heat setting

Ambient temperature: +10 to +40 °C



Problems / solutions

Not working

- Are the rechargeable batteries flat?
Charge the rechargeable batteries as described in chapter “Use”, section “Charging the rechargeable batteries”.
 - Check whether the connection plug on the shoe has been firmly inserted into the output jack on the battery.
 - The thermal control switch may have turned the heated shoes off. Remove the rechargeable batteries from the heated shoes and allow them to cool to room temperature before reinserting them and switching the heated shoes on again. If the product still isn't working, contact a specialist workshop or our customer care service.
-

Disposal

This product, its packaging and the supplied rechargeable batteries have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Devices, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with normal household waste! You are legally obliged to dispose of old devices separately from household waste.

Electronic devices contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old devices can be disposed of free of charge is available from your local authorities.

Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

- Remove the rechargeable batteries from the product for disposal (see section “Charging the rechargeable batteries”).

Made exclusively for:

Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany

Warranty

Tchibo GmbH grants a **three-year warranty** from the date of purchase.

Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany

We will remedy all defects in workmanship or materials **within the warranty period**. In order for the warranty to be granted, all warranty claims must be accompanied by proof of purchase from Tchibo or from an authorised Tchibo distribution partner. This warranty is valid within the EU, Switzerland and Turkey.

The warranty does not cover worn parts, consumables, or damage resulting from improper use or inadequate descaling. Parts and consumables can be ordered from our customer care service.

This warranty does not restrict **statutory warranty rights**. Statutory warranty rights can be asserted free of charge.

Service and repair

If, contrary to our expectations, a defect is found, please contact our customer care service. Our customer consultants will be happy to advise you on further procedure.

If you have any questions relating to product information, ordering accessories or servicing, please contact our customer care service. Please have the product number to hand in case of any queries.

Customer care service

Email: **service@tchibo.de**

**Product numbers: 718 079 (S / 37-39)
718 080 (M / 40-42)**
