 


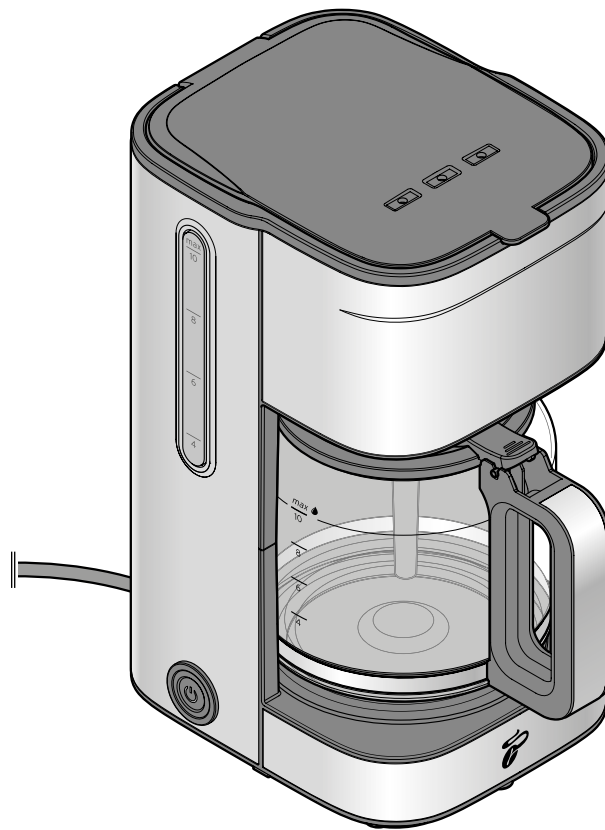

Let's Brew Elegant



en Instructions for use and warranty

Tchibo GmbH D-22290 Hamburg · 145828HB · 2025-03

About these instructions

Dear Customer

Enjoy delicious filter coffee with your new coffee machine which can make up to 10 cups of coffee.

The aroma swing built into the jug stirs and mixes the coffee during the brewing process and ensures the coffee has a perfectly balanced flavour profile.

We hope you enjoy using your “Let’s Brew Elegant” coffee machine.

Your Tchibo Team



www.tchibo.de/instructions

(Please enter the product number in the box labelled “Bedienungsanleitungssuche” and click on “Suchen”.)

Contents

2	About these instructions	10	Technical specifications
2	Safety warnings	10	Disposal
5	At a glance (contents)	11	Warranty
5	Removing packaging materials	11	Service and repair
5	Prior to first use	11	Customer care service
6	Making coffee		
8	Cleaning and storage		
9	Descaling		
10	Problems / solutions		

This product is equipped with safety features. Nevertheless, read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Symbols used in these instructions:



This symbol warns you about the risk of injury.



This symbol warns you about the risk of injury caused by electricity.

Signal words used in these instructions:

WARNING warns about the potential risk of serious or fatal injury.

CAUTION warns about the potential risk of minor injury.

NOTICE warns about the potential risk of material damage.



This indicates additional information.

Safety warnings



Intended use

The filter coffee machine is exclusively designed for preparing filter coffee using ground coffee. It must not be used to heat or prepare any other liquids.

The coffee machine is designed to produce normal household quantities. It is not suitable for use in staff kitchens in businesses, in agricultural premises, in bed and breakfasts, or use by customers at hotels, motels or other similar facilities, or for commercial purposes.

The product is designed for use in dry, indoor rooms.

Danger to children and people with limited ability to operate appliances

- Children must not be allowed to play with the machine. Keep the machine and mains cable away from children under the age of 8.
- The machine may be used by children aged 8+ and by people with diminished physical, sensory or mental capacity or lacking the requisite knowledge/experience, provided they are supervised or have been instructed in the safe use of the machine and understand the potential dangers.
- Children must not be allowed to clean the machine unless they are over 8 years of age and supervised while doing so. The machine is maintenance-free.
- The machine and its mains cable must be kept out of the reach of children under the age of 8 once the appliance is switched on and until it has cooled down completely after use.
- Keep packaging materials out of the reach of children.
They pose several risks, including the risk of suffocation!

Danger due to electricity

- Never immerse the machine, mains plug or mains cable in water, as there is otherwise a danger of electric shock. Never touch the mains plug with damp hands. Do not use the machine outdoors.
- Never leave the machine to operate unattended.
- Only connect the machine to a properly installed power socket with earthed contacts. The mains voltage must comply with the requirements stated in the machine's technical specifications.
- The power socket used must be within easy reach so that the mains plug can be removed quickly if necessary.
- Remove the mains plug from the power socket, ...
... when not using the machine,
... if a malfunction occurs,
... before cleaning the machine and
... during thunderstorms.
Always pull on the mains plug, not the mains cable.
- The mains cable must not be kinked or crushed. Keep it away from sharp edges and sources of heat.

- Do not use the machine if the machine, mains cable or mains plug is damaged, or if the machine has fallen down.
- Do not make any modifications to the product. Do not attempt to replace the mains cable yourself. Have repairs to the machine or the mains cable carried out only by a specialist workshop or as arranged by our customer care service. Improper repairs to the appliance may result in significant risks to the user.
- If the mains cable becomes damaged, it must be replaced by the manufacturer, its customer care service or a similarly qualified person to prevent risks.
- The machine must not be operated using a timer mechanism or with a separate remote control system.
- To disconnect the machine from the mains completely, remove the mains plug from the power socket.

Danger of fire

- Position the machine in such a way that it is free-standing for use; never place it directly against a wall, in a corner, in a cupboard, against curtains, etc.

Danger of scalds/burns

- Hot steam and hot water can cause scalding. Never move the machine or open the lid of the machine while coffee is still being brewed. Hot water can spill out of the filter and scald you. The rising steam can also cause scalds.
- Do not fill the coffee machine with water when it is switched on or still hot after use. Otherwise, the heating system may become damaged. In the worst case, you can also scald yourself on a sudden burst of steam from inside the coffee pot.
- The pot is made of glass and can become very hot. Only hold the pot using its handle while it is full. Do not leave the pot unattended in the vicinity of children as they may attempt to pull it down.
- Do not remove the pot during the brewing process. There is a risk of the filter overflowing and scalding you.
- The warming plate becomes very hot during operation. Never touch it during operation or shortly after the machine has been used.

- During or immediately after use, do not touch ...
 - ... the coffee spout. Avoid contact with coffee or hot water being dispensed from the spout.
 - ... the steam outlets in the lid. The steam escaping can cause scalds.
- Allow the machine to cool sufficiently after using it before removing, emptying and cleaning the filter holder.
- Use the original pot only, otherwise the drip-stop may not work, and the filter holder will overflow.
- Use only coffee grounds suitable for filter coffee machines. If the coffee grounds are too fine, they may block the filter and cause it to overflow.

Caution – other health hazards

- Clean the water tank, filter holder and the pot regularly.
- Empty the water tank if you will not use the machine for a longer period of time.
- Change the water in the water tank daily to prevent germs from collecting. Dispose of the used filter along with the coffee grounds immediately after brewing coffee and once the machine has cooled down.
- Use only the cleaning and descaling agents listed in these instructions as well as the relevant cleaning utensils to clean the machine. The use of other cleaning agents can lead to health hazards.

Danger – risk of injury due to defective glass pot

If the glass pot is damaged, there is risk that it may shatter unexpectedly. This may also happen at a later point in time, without any visible signs of what might have caused damage to the glass:

- Do not continue to use the pot if the glass shows visible signs of damage.
- Even if you cannot find any signs of damage, hold the pot away from your body and from other people when it is filled with hot liquid.

To prevent the glass from shattering:

 
- Avoid vibrations, impacts and extreme temperature fluctuations, e.g. do not fill the hot coffee pot with cold water.
- Do not use a hard object, e.g. a spoon, to stir the coffee.
- Do not use any caustic or abrasive products or sharp objects for cleaning.

- Do not use the pot in the microwave, in the oven, or anything similar. Do not place it on a hob, immediately next to a hot oven, radiator, etc.

Material damage

- Use the machine only when fully assembled.
- Pour only fresh, cold tap water or other drinking water into the water tank. Do not use carbonated mineral water or any other liquids.
- To avoid limescale deposits, descale the machine at regular intervals as outlined in the chapter titled “Descaling”. Do not use too much vinegar-water solution when descaling the machine as it can foam up substantially when heated and might overflow.
- To move the machine, always hold it by the outer housing.
- Place the machine on a solid, horizontal and level surface that is well illuminated and resistant to moisture and heat.
- Route the mains cable in such a way that it is not a tripping hazard. Do not let the cable hang down from the surface where the machine is located so that the machine cannot be accidentally pulled down by the cable.
- Do not use caustic or abrasive agents or hard brushes, etc. for cleaning.
- Use the original accessories only.
- The machine is equipped with non-slip feet. Work surfaces often have varnished or plastic finishes and are treated with a variety of care products. Some of these may contain substances that react adversely to the non-slip machine feet and soften them. If necessary, place a non-slip mat under the machine.
- Protect the machine from impacts, falls, dust, moisture, direct sunlight and extreme temperatures.
- The machine must not be exposed to temperatures below 4 °C. Residual water in the heating system could freeze and cause damage.

At a glance (contents)

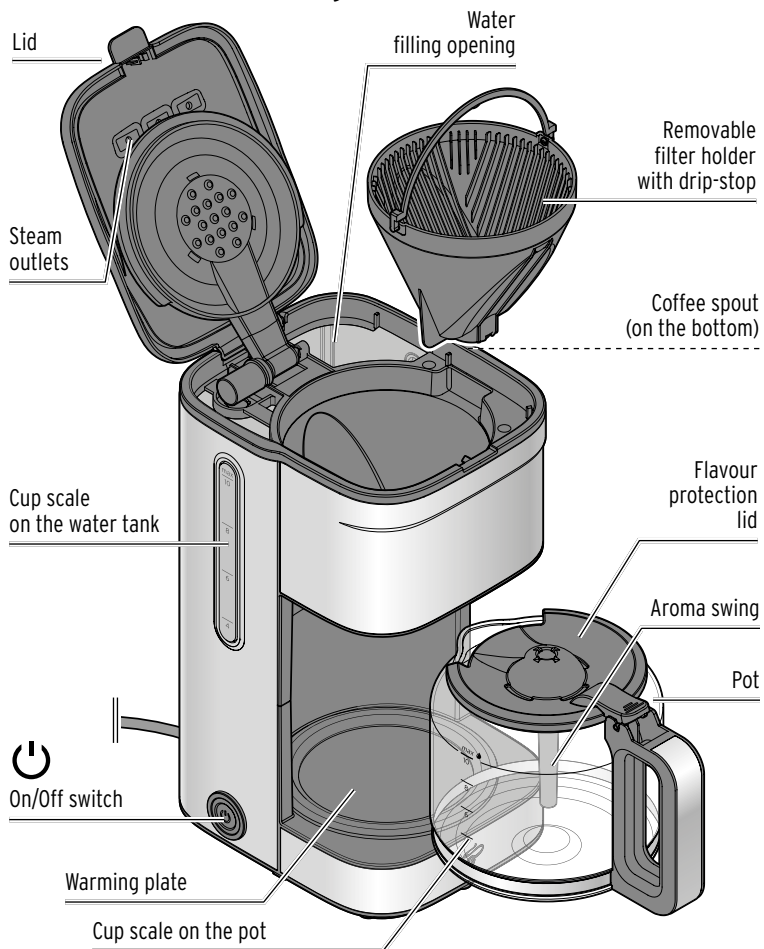

Removing packaging materials

1. Take the machine out of the packaging.
2. Remove all packaging materials.
3. Check the components to make sure they are all there and in working order.



The packaging materials protect the machine during transport. Keep the packaging in case you need to transport the machine or return it if it suffers damage.

Prior to first use



WARNING - risk of fatal electric shock

- Remove the mains plug from the power socket before cleaning the appliance.
- The appliance must not be exposed to moisture. Protect it against dripping and splashing water.

1. Clean the filter holder and pot with warm water and a standard, mild washing-up liquid. Wipe the compartment for the filter holder and the underside of the lid with a damp cloth and a little washing-up liquid.
2. Dry all parts well before putting the filter holder and the pot back into the appliance.

Making coffee



 
 
CAUTION -

risk of scalds/burns



Hot water or hot coffee can cause scalding.

- When the appliance is switched on and during the brewing process, you must not ...
... pour any more water into the water tank.
... open the lid.
... remove the pot for longer than a few seconds. Although the drip-stop will prevent the coffee from being dispensed, this could cause the filter to overflow.
- Handle the pot filled with hot liquid with care so that the contents do not spill.
- The pot is made of glass and can become very hot. Only hold the pot using its handle when it is full. Do not leave the pot unattended in the vicinity of children as they may attempt to pull it down.

When using the coffee machine for the first time or after a longer period of non-use, we recommend allowing the machine to run 1-2 times using clean, cold water without the filter paper and ground coffee. Then pour the water away. Switch the appliance off after every rinsing sequence and allow it to cool down for at least 5 minutes before filling it with water again.

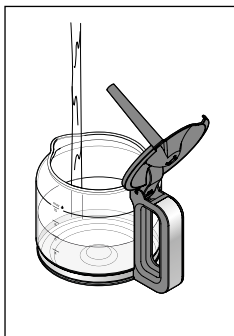
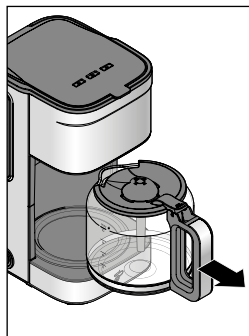


  1. Remove the glass pot from the machine.
2. Fill the pot up to the desired number of cups or at most up to the **max** mark with fresh, cold tap water or drinking water.

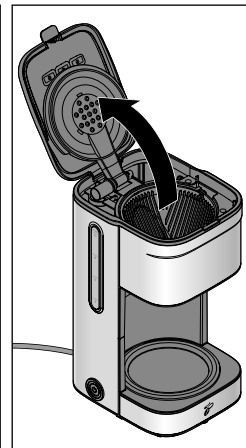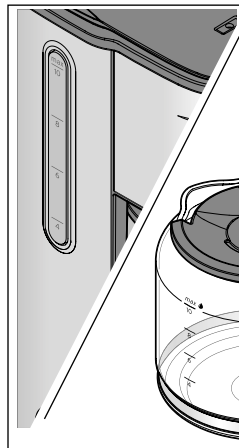

The amount of water required for the number of cups is shown on the cup scale on the viewing window on the water tank and on the glass pot.

  3. Open the lid.

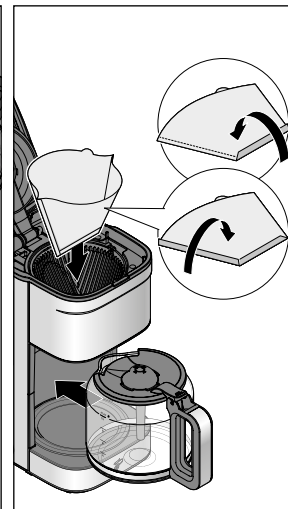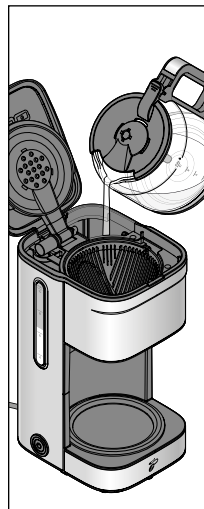


4. Pour the water into the water tank.

5. Place the pot onto the warming plate.

You need a coffee filter paper, size 4.


 
6. Fold over the adhesive edges at the bottom and the sides of the filter paper so that it fits well in the filter holder. Place it into the filter holder and press it down all the way around until it is firmly in place.

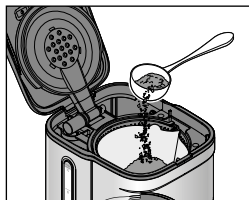

7. Fill the filter with ground coffee according to the number of cups you wish to make and depending on your preferred intensity: approx. one level scoop per cup of coffee (= approx. 7 g per cup).

NOTICE - material damage

  • Only use ground coffee suitable for use with filter coffee machines. Do not use coffee that has been ground too finely. Finely ground coffee is intended for hand-brewing coffee. If the coffee machine is used with coffee that is too fine, it may cause the filter to overflow.

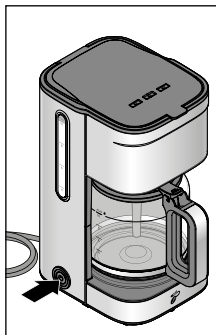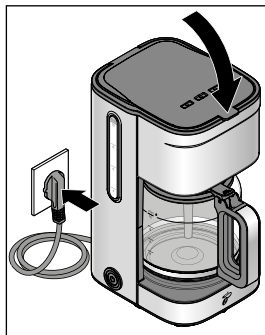

8. Close the lid. You must hear and feel it click into place.
9. Insert the plug into a power socket.
10. Press the On/Off switch  to turn on the machine. The indicator light in the switch lights up. The brewing process will begin after a short delay. The warming plate is switched on.

11. Wait until all of the coffee has been dispensed before taking the pot out of the machine.



Automatic switch-off mechanism: approx. 40 minutes after it has been switched on, the machine will switch itself off automatically. The indicator light in the switch goes out. If you still want to enjoy your coffee after 40 minutes, we recommend pouring it into an insulated coffee pot.

12. If you no longer wish to use the warming function, press the On/Off switch  to turn off the machine.

The indicator light in the switch goes out. The warming plate is switched off.

13. Remove the plug from the power socket.

 
 
Disposing of coffee filter paper





CAUTION - risk of burns

The filter holder and filter paper become hot during use.

- Do not remove the filter paper immediately after using the machine. Allow the machine to cool down sufficiently before removing the filter paper.

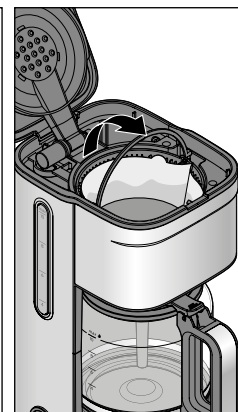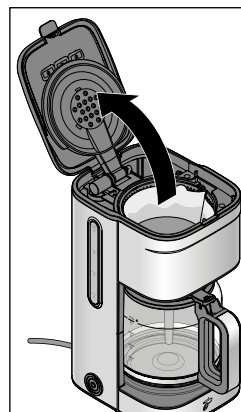

 
 
1. Open the lid.
2. Lift the handle on the filter holder up.

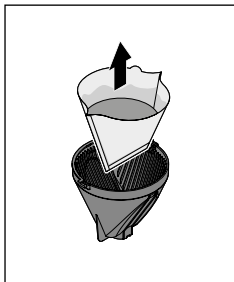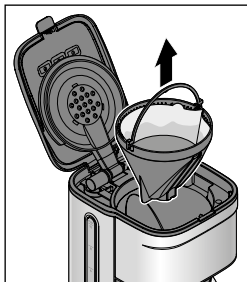

3. Pull the filter holder up and out of the hinged compartment and dispose of the used coffee filter paper with the coffee grounds, preferably in organic waste (depending on the type of coffee filter paper/ local regulations).



  The used filter paper and the coffee grounds can also be composted.

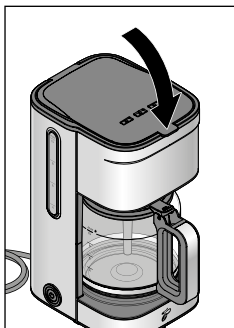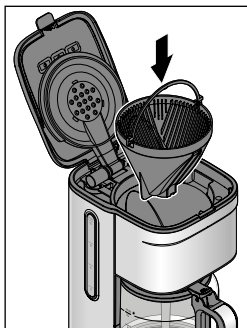

4. Clean all parts of the machine as described in the chapter "Cleaning and storage".
5. Dry all parts thoroughly before you reinsert the filter holder and the pot into the appliance.
6. Close the lid.

Cleaning and storage

Cleaning



WARNING - risk of fatal electric shock

• Remove the mains plug from the power socket before cleaning the appliance.



 
WARNING - risk of fatal electric shock

• Do not immerse the appliance in water. The appliance must not be exposed to moisture. Protect it against dripping and splashing water.


NOTICE - material damage

• Do not use any caustic, aggressive or abrasive products for cleaning.

- ▷ Wipe down the **housing** as required, with a damp cloth. You can also wipe out the compartment for the filter holder using a damp cloth and a little washing-up liquid.
- ▷ Regularly clean the **filter holder** with warm water and a conventional washing-up liquid. If you wish to clean the filter holder in the dishwasher, do not place it directly above the heating elements.
- ▷ Clean the **pot** immediately after use with warm water and a conventional washing-up liquid.

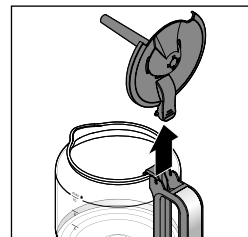

 To clean it thoroughly, remove the lid with the aroma swing.
To do this, unhook the lid from the hinge.
The pot and its lid are also dishwasher-safe.

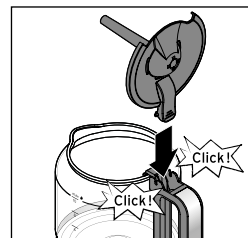

Allow all parts to dry thoroughly before reassembling them.

Storage

- ▷ Before storing or transporting the appliance, empty out any residual water and clean the appliance as outlined in these instructions.
- ▷ Allow to keep the appliance upright when transporting it. Only carry the appliance by its housing. Transport the glass coffee pot separately.
- ▷ Store the appliance - preferably in its original packaging - in a cool, dry location where it is not exposed to direct sunlight, dust or moisture.

Descaling

Like all hot water appliances, the coffee machine must be descaled at regular intervals. A machine with limescale deposits makes more noise, takes longer to brew coffee and uses additional energy. Failure to descale the appliance may ultimately cause it to become damaged.



Damage or malfunctions due to failure to descale are not covered by the warranty.

How often to descale the appliance

The following values are just a rough guide based on daily usage.

Hardness of water		Time interval
1	soft	approx. every 6 months
2	medium	approx. every 3 months
3	hard to very hard	once a month

You can find out the hardness of the water in your area by contacting your supplier.

Descaling the coffee machine

Always use a coffee filter paper when descaling the appliance. This collects residual limescale and prevents the filter from becoming blocked.

NOTICE - damage to the appliance due to limescale deposits

Limescale can damage the machine.

- Do not use any descaling agents made on the basis of formic acid.
- Use a standard, liquid, descaling agent suitable for coffee and espresso machines. Other agents may damage materials in the appliance and/or have no effect.
- Do not pour the descaling solution into enamelled sinks.

1. Pour a standard, liquid, descaling agent suitable for coffee and espresso machines into the **empty** water tank.
2. Add water up to the "10 cup" mark.
3. Place the coffee filter paper into the filter holder. Insert the filter holder into the machine. Close the lid of the pot and place it onto the warming plate.
4. Wait 10 minutes. Then switch on the coffee machine and allow the solution to pass through the machine.
Tip: If you repeatedly switch off the coffee machine for several minutes while the solution is running through it, this allows the descaling solution to clean the machine more effectively.
5. For heavy limescale deposits, repeat this process. You can re-use the same solution. The solution must first be allowed to cool down completely.
6. Then rinse the machine again two to three times with clean water.
7. Switch the appliance off after each repetition and allow it to cool down for at least 5 minutes before filling it with water again.
8. Wipe out the compartment for the filter holder in the machine. Thoroughly clean and rinse the filter holder and coffee pot before using them to brew coffee again.

Problems / solutions

The filter is overflowing

- Is the coffee filter paper folded double? Did you fold over the edges correctly before starting the brewing process? (see the chapter "Making coffee").
- Is the filter holder correctly inserted?
- Is the pot correctly positioned on the warming plate (is the drip-stop open)?
The pot must be placed on the warming plate such that it is level and does not wobble so that the lid presses the drip-stop on the filter holder upward correctly.
- Is there too much coffee in the filter?
- Is the coffee ground too finely?

The machine is louder than usual / brewing process takes longer

- Is there limescale in the machine (see also chapter "Descaling/How often to descale the appliance")?

The coffee is not hot enough

- Is there limescale in the machine (see also chapter "Descaling/How often to descale the appliance")?
- Was there some liquid (coffee or water) left in the pot?
- Did you brew at least 4 cups of coffee?

Technical specifications

Type / Model:	700 211
Mains voltage:	220-240 V ~ 50 Hz
Protection class:	I 
Output:	900 W
Power consumption when switched off:	≤0.3 W

Automatic switch-off

mechanism: approx. 40 minutes

Coffee filter paper: Size 4

Capacity: 10 cups

Ambient temperature: +10 to +40 °C

Made exclusively for: Tchibo GmbH, Überseering 18,
22297 Hamburg, Germany

In the course of product improvement, we reserve the right to make technical and optical modifications to the product.



Disposal

This product and its packaging have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point which sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and light-weight packaging.



Appliances marked with this symbol must not be disposed of along with normal household waste!

You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities.

Warranty

Tchibo GmbH grants a **two-year warranty** from the date of purchase.

Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany

We will remedy all defects in workmanship or materials **within the warranty period**. In order for the warranty to be granted, all warranty claims must be accompanied by proof of purchase from Tchibo or from an authorised Tchibo distribution partner. This warranty is valid within the EU, Switzerland and Turkey.

The warranty does not cover worn parts, consumables, or damage resulting from improper use or inadequate descaling. Parts and consumables can be ordered from our customer care service.

This warranty does not restrict **statutory warranty rights**. Statutory warranty rights can be asserted free of charge.

Service and repair

If, contrary to our expectations, a defect is found, please contact our customer care service. Our customer consultants will be happy to advise you on further procedure.

If you have any questions relating to product information, ordering accessories or servicing, please contact our customer care service. Please have the product number to hand in case of any queries.

Customer care service

Email: **service@tchibo.de**

Product number: 700 211
