


Plate warmer

en Instructions for use

Dear Customer

This practical plate warmer preheats up to 12 plates at the same time, so you will never serve cold food again.

Bon appétit! We hope you and your guests enjoy your meal.

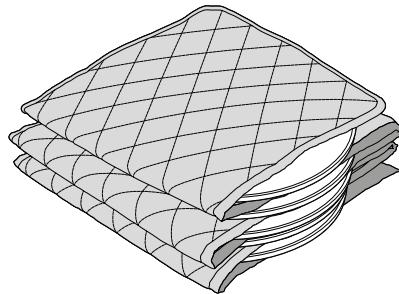

Symbols on the **heating element and outer cover** of the plate warmer that must be observed:



Read notes and instructions for use



Do not pierce with needles or anything similar



Not suitable for children under the age of 3



Do not use when folded or crumpled



Do not dry in a tumble dryer

Symbols on the **heating element** of the plate warmer that must be observed:



Do not wash



Do not dry clean



Do not bleach



Do not iron

Symbols on the **outer cover** of the plate warmer that must be observed:



Gentle wash at max. 30 °C

About these instructions

This product is equipped with safety features. Nevertheless, read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage.

Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Symbols used in these instructions:



This symbol warns you about the risk of injury.



This symbol warns you about the risk of injury caused by electricity.

Signal words used in these instructions:

WARNING warns about the potential risk of serious or fatal injury.

NOTICE warns about the potential risk of material damage.



This indicates additional information.

For your safety

Intended use

- The plate warmer is intended exclusively for preheating plates made of ceramic materials. It is not suitable for plates made of metal, plastic or other materials.
- The plate warmer is designed for a maximum of 2 plates per folded pocket with a maximum diameter of 32 cm.
- The plate warmer is not suitable for use as a heating blanket to heat or keep food, drinks, etc. warm or for any other purpose than that described here. Not for medical use!
- The product is designed for private use. The plate warmer is not suitable for use in staff kitchens of shops, offices or other areas of commerce, in agricultural buildings, in bed and breakfast establishments or by customers in hotels, motels or any other places offering accommodation, as well as for general commercial purposes.
- The product is suitable for use in dry indoor locations.

Danger to children and people with limited ability to operate appliances

- This product may be used by children aged 8 and over and by people with limited physical, sensory or mental capacity or lacking the requisite knowledge and/or experience, if they are supervised or have been instructed in the safe use of the product and understand the potential dangers.

Children must not be allowed to play with the appliance. Cleaning and maintenance must not be carried out by children unless they are supervised.

• Keep packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

Danger to people with pacemakers

- The electromagnetic fields emitted by this electrical product may interfere with the function of your pacemaker. However, the effects are far below the limit values. Therefore, consult your doctor and the manufacturer of your pacemaker before using this product.

Danger of electric shock due to moisture

- Do not use the product with wet hands and do not use it outdoors or in rooms with high humidity.
- The product must not be immersed in water or other liquids. Do not hold it under running water. Also keep it away from dripping and splashing water. Protect it from moisture. Do not position the plate warmer in the immediate vicinity of a sink or washbasin. Do not place any containers filled with liquid directly next to the product, as they could topple over.

- Wash only the outer cover, not the complete product. After washing the outer cover, wait until it is completely dry before putting it back on the product and using it. Do not use it if it is wet or damp!

Danger due to electricity

- Only connect the plate warmer to a properly installed power socket that corresponds to the technical specifications of the product.

- Do not pierce any sharp objects, e.g. safety pins or similar into the plate warmer.

- Unplug the mains plug from the power socket during use if malfunctions occur, after use, during thunderstorms and before cleaning the product. Always pull on the plug, not on the mains cable.
- The product can only be turned off and disconnected from the power supply by pulling out the plug.
- The power socket used must be within easy reach so that the mains plug can be removed quickly if necessary. Route the mains cable in such a way that it is not a tripping hazard and that the product cannot be pulled down.
- The mains cable must not be kinked or crushed. Keep the mains cable away from hot surfaces and sharp edges.
- Do not use the product if the product itself or its mains cable shows any visible signs of damage or if the product has fallen down.
- Use only the accessories provided.

- The plate warmer is subject to ageing. Therefore, before each use, check whether the plate warmer and mains cable show signs of wear or damage. If you notice such signs or the plate warmer has been used improperly, its use must be discontinued.
- Do not make any modifications to the product. Do not attempt to replace the mains cable yourself. If the mains cable is damaged, it must be replaced by the manufacturer, its customer service or a similarly qualified person in order to avoid hazards.

Have repairs to the product or the mains cable carried out only by a specialist workshop. Improper repairs can result in considerable danger to the user.

Warning - risk of fire

- Do not use spray products in the vicinity of the plate warmer. In the worst case, the spray can ignite.
- Keep the product away from naked flames.
- The product is equipped with a thermal cut-off. This provides protection against overheating. If the fuse blows, the plate warmer will no longer work and must be disposed of.

- The product must not be left unattended when connected.
- The product must not be operated with a separate timer or by means of any separate remote control.
- To avoid overheating, do not use the product if one or more of the folded pockets do not contain plates.

Danger of burns

- The plate warmer gets very hot during use! Therefore, the plates are also very hot when removed. Hold the plates by the rim and use oven gloves or something similar to handle the preheated plates.

Material damage

- The plate warmer must not be wedged in, bent in any way other than allowed by the heating element or switched on when wet. Do not switch the plate warmer on while it is still in its packaging.

- Do not place any large or heavy objects on the product. Even when you put it away, do not place any heavy objects on it to avoid creating sharp creases.

- Always store the plate warmer in a dry, cool place away from other heat sources.

- Always allow the plate warmer to dry completely before storing it away.

- Never lift or carry the plate warmer by the mains cable.
- Do not carry the plate warmer when it is loaded with plates.

- When using the plate warmer, always place it on a clean, level, heat-resistant and stable surface where it cannot fall down. Bear in mind that it will be very heavy when fully loaded.

- Take care when inserting and removing the plates to prevent them from slipping out. Place the plates in the centre of the folded pockets if possible. Always insert the plates from bottom to top and remove them from top to bottom. Do not attempt to remove a plate from the centre.

- Especially with deep plates, make sure that the stack is stable. Place the filled plate warmer such that it cannot be pulled down.

Notice regarding hygiene

- Make sure that the outer cover is clean. It should not come into contact with leftover food. If necessary, wash it back on the product and using it.

Do not use it if it is wet or damp!

Use

- Put the plate warmer in its folded position on a clean, level, heat-resistant and stable surface where it cannot fall down. Bear in mind that it will be very heavy when fully loaded. The mains cable must be at the bottom.

- Insert the plates. Place a maximum of two plates into each folded pocket. At least one plate must be inserted to keep the heating elements separated. Always start with the bottom pocket.

Be careful as you are stacking. If possible, use plates of the same size. If you have different sizes, place the largest plates in the lower folded pockets. Always place the plates in the centre of the folded pockets if possible. If the plate warmer does not seem stable enough when fully loaded, it is better to remove a few plates.

NOTICE - material damage

Do not carry the plate warmer when it is loaded with plates.

- Plug the mains plug into a an easily accessible power socket. Route the mains cable so that it cannot pull down the plate warmer.

- Now the plate warmer heats up.
- Check the temperature of the plates regularly during heating.

Depending on the ambient temperature and the initial temperature of the inserted plates, it takes approx. 20 minutes for the plates to reach a comfortably warm temperature. The rims remain colder than the centres of the plates so that you can handle the plates safely.



WARNING - risk of fire

To avoid overheating, do not use the product if one or more of the folded pockets do not contain plates.

- Remove the mains plug from the power socket to turn the product off.

- Remove all the plates from top to bottom.


Cleaning



WARNING - risk of fatal electric shock

Wash only the outer cover, not the complete product. After washing the outer cover, wait until it is completely dry before putting it back on the product and using it.

Do not use it if it is wet or damp!

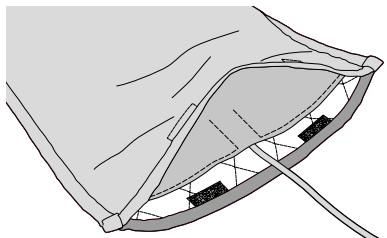

- Open the hook-and-loop fasteners.
- Carefully pull the heating element out of the outer cover. Do not pull on the mains cable when doing so!
- Wash the outer cover as indicated on the care label.
- You can wipe off the heating element with a damp cloth.
- Allow all the parts to dry thoroughly.
- Pull the outer cover back over the heating element and close the hook-and-loop fasteners.

Technical specifications

Model:	210700
Product number:	721560
Mains voltage:	220 - 240 V ~ 50/60 Hz
Protection class:	II
Power:	200 W
Ambient temperature:	+10 to +40 °C
Manufactured by:	Premier Intertrade GmbH Kirchenstraße 7 21244 Buchholz Germany

In the course of product improvement, we reserve the right to make technical and optical modifications to the product.



Disposal

The product and its packaging have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.

 **Appliances** marked with this symbol must not be disposed of along with normal household waste!

You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities.