

Made exclusively for:
Tchibo GmbH, Überseering 18,
22297 Hamburg, Germany

Safety warnings

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage.

Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

- This is not a children's toy! Use only under adult supervision. Keep small swallowable parts and packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

- The product is only suitable for decoration and not for lighting whole rooms. It is designed for private use and is not suitable for commercial purposes. The product is intended for use in dry indoor rooms only. Protect the product from moisture.

- Do not switch the product on while it is still in the packaging.

- The built-in LEDs cannot and must not be replaced.

- The outer surface of the LED candles is made of real wax.** Protect it from naked flames, heat and direct sunlight. Do not use any real candles directly next to the LED candles. Do not light the wicks!

- Handle the product with care. Impacts, shocks and falls, even falls from a low height, may damage the product. For this reason, do not attach the candles to thin branches that could break.

The product contains a lithium battery (coin battery). There is a risk of leakage, gas emissions, explosion and fire:

- Swallowing batteries can be fatal. The remote control is fitted with a coin battery. Swallowing a coin battery can cause severe internal chemical burns and even death within 2 hours. Keep both new and used batteries out of the reach of children. If the battery compartment does not close correctly, discontinue use of the remote control and keep it out of the reach of children. If you think a battery has been swallowed or has got into the body in any other way, seek medical advice immediately.

- Batteries must only be inserted or replaced by adults.

- Warning!** Lithium batteries can explode if inserted incorrectly. Ensure that the polarity is correct (+/-) when inserting the battery in the remote control. Use only batteries of the same or of equivalent type (see "Technical specifications").

- If necessary, clean the battery and device contacts before inserting the batteries. Risk of overheating!

- Single-use batteries must not be charged, taken apart, thrown into fire or short-circuited. Do not modify and/or deform/heat/dismantle batteries. Do not allow damaged batteries to come into contact with water.

 
- Batteries must not be overdischarged. Store unused batteries in the original packaging. Do not bring unpacked batteries (both new and partially/fully used) into contact with each other and keep them away from metal objects.

- Protect batteries from excessive heat (radiators, direct sunlight). Remove the batteries immediately from the product when they are flat or if you do not intend to use the product for a longer period of time. This will prevent damage caused by leakage.


- If a battery has leaked, avoid all contact with skin, eyes and mucous membranes. If necessary, rinse the affected areas with plenty of clean water and consult a doctor immediately.

Use


Inserting the battery into the LED candles

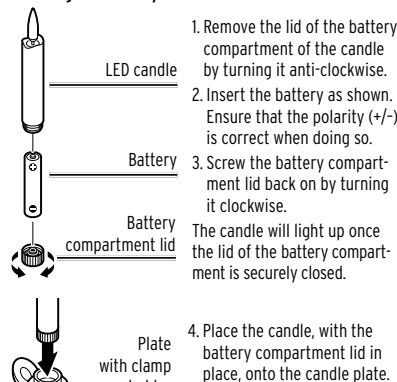

Activating the remote control

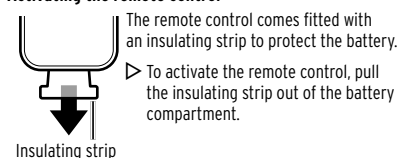 

Using the remote control

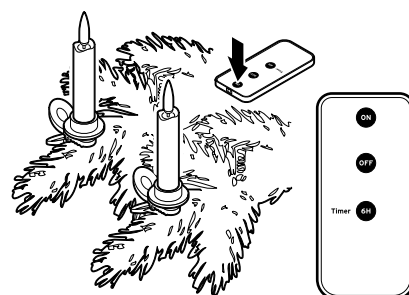 

The remote control has a range of approx. 5 m and will detect candles within a radius of approx. 50 cm.

Point the remote control in the direction of the candles. Ensure there are no objects blocking the space between the remote control and the candles.

Switching the LED candles on and off permanently

 
- Press the **ON** button on the remote control to switch the LED candles on permanently.
- Press the **OFF** button on the remote control to switch the LED candles off permanently.

Switching the LED candles on in timer mode

- To switch the LED candles on in timer mode, press the **6h** button on the remote control. The LED candles will flash once and then stay lit for **6 hours**. They will then switch off automatically for **18 hours**, then back on again for 6 hours, and so on.
- Press the **OFF** button on the remote control to deactivate the timer mode and switch the LED candles off prematurely.

Replacing the battery in the remote control

The battery must be replaced when the LED candles stop responding to the remote control. The battery compartment is located on the back of the remote control, at the bottom.

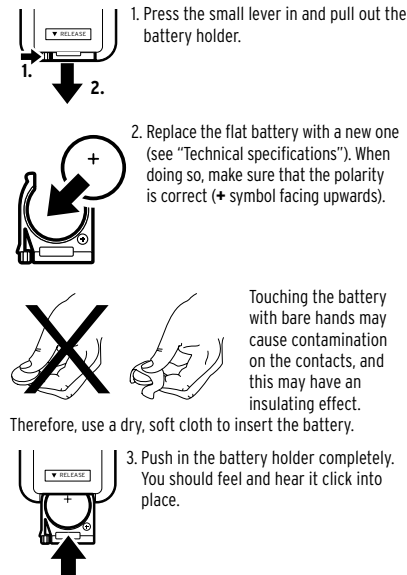

Technical specifications

Model:	718 140
Candles	
Single-use battery:	12x LR03 (AAA)/1.5 V (Zn/MnO ₂)
Bulb:	LED
Remote control	
Single-use battery:	1x CR2025/3 V (LiMnO ₂)
(tested as per UN 38.3)	Watt-hour rating: 0.45 Wh
Range:	5 m

Operating time: approx. 100 hours (with 1 set of batteries)

Ambient temperature: +10 °C to +40 °C

In the course of product improvement, we reserve the right to make technical and optical modifications to the product.

Disposal

The product, its packaging and the supplied batteries have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.

Devices, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste!

You are legally obliged to dispose of old devices separately from household waste. Electronic devices contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old devices can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

Product number:
718 140



www.tchibo.de/instructions
(Please enter the product number in the box labelled "Bedienungsanleitungssuche" and click on "Suchen".)

Information about the supplied batteries:

Manufacturer: CHANGZHOU JINTAN CHAOCHUANG BATTERY Co., Ltd., Xiyang Village, Maolu Town, Jintan, Jiang Su, China, www.chaochuang.com Email: marvelous@chaochuang.com

Model: CHAO CHUANG CR2025 3 V + CHAO CHUANG LR03 AAA 1.5 V Manufacturing date: 2025/04 Made in: China