


Cosmetic trimmer

en Instructions for use

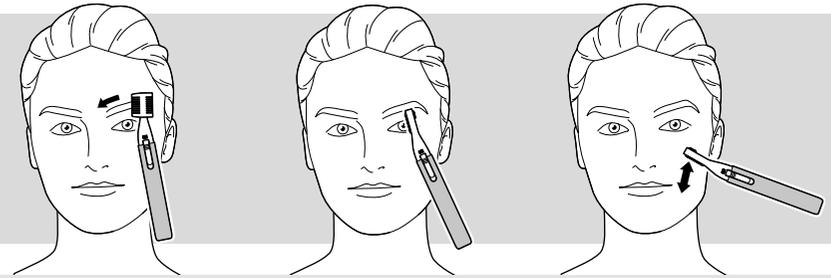

www.tchibo.de/instructions



Safety warnings

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Intended use

- This device is designed for trimming eyebrows as well as cutting body hair on your face and on other areas of the body.
- The product is designed for private use and is not suitable for commercial purposes, e.g. in beauty salons.
- Only use the product in dry indoor rooms.

Danger to children

- Do not use the device on children. Keep the device and all accessories out of the reach of children.
- Keep small parts and packaging materials out of the reach of children. They pose several risks, including the risk of suffocation and injury!
- Swallowing batteries can be fatal. If a battery is swallowed, it can cause severe internal chemical burns and even death within 2 hours. Therefore, keep both new and old batteries and the product out of the reach of children. If you think that a battery has been swallowed or has got into the body in any other way, seek medical advice immediately.

Risk of injury


- If batteries are exposed to extremely low air pressure (e.g. at high altitudes), they may explode or leak flammable liquids or gases.
- Do not insert the cutting head into your ear or nostril as doing so could injure your eardrum or the mucous membrane in your nose.

- When using the trimmer, make sure the cutting head is securely fitted.
- The device must not be used if the device or comb attachment show any sign of damage. Only use the original accessories.
- Single-use batteries must not be charged, disassembled or crushed, thrown into fire or a hot oven or short-circuited. Do not modify and/or deform/heat/disassemble batteries. Do not allow damaged batteries to come into contact with water. If the battery has leaked, avoid contact with skin, eyes and mucous membranes. If necessary, rinse the affected areas with water and consult a doctor immediately.

Material damage

- When inserting the battery, ensure that the polarity (+/-) is correct.
- The casing must be firmly locked into the cutting head when cleaning the device.
- Never immerse the device completely in water.
- Always replace the protective cap on the cutting head when not in use.
- Clean the contacts on the battery and device as required before inserting the battery. Risk of overheating!
- Protect the batteries and the product from excessive heat. Remove the battery from the product if it is flat or if you do not intend to use the product for a longer period of time. This will prevent damage caused by leakage.
- Do not use the device if it shows any visible signs of damage or has fallen down.
- Do not make any modifications to the product. Have repairs carried out only by a specialist workshop.

At a glance (contents)

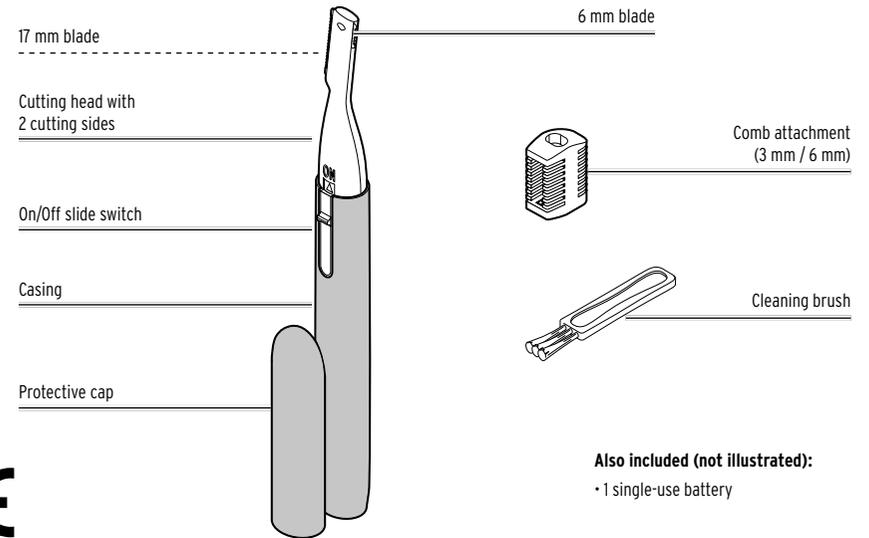

Also included (not illustrated):

- 1 single-use battery




Technical specifications

Model:	724 977
Single-use battery:	1x LR03 (AAA)/1.5 V (ZnMnO ₂)
Operating time:	90 minutes
Ambient temperature:	+10 to +40 °C
Made exclusively for:	Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany

In the course of product improvement, we reserve the right to make technical and optical modifications to the device.

Inserting the battery

1. Remove the protective cap from the cutting head.
2. Pull the casing off the device.

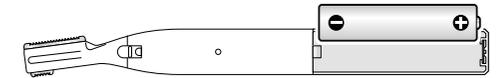

3. Insert the supplied battery in the battery compartment as illustrated, ensuring that the polarity is correct (+/-).
4. Slide the casing back onto the device. The casing must firmly click into place on the cutting head.
5. Place the protective cap back on the cutting head when not in use.


Use




- You should always use a mirror when using the device on your face.
- Always place the protective cap back onto the device when not in use. This ensures that the On/Off slide switch is covered and the device cannot be switched on accidentally.
- The cutting head has 2 different cutting sides with a blade length of 6 mm and 17 mm. The comb attachment has short teeth on one side for a cutting length of 3 mm and longer teeth on the other side for a cutting length of 6 mm. Select a cutting side and length depending on how you would like to use it.

- ▷ Slide the On/Off switch ...
 - ... forwards to switch the device on.
 - ... backwards to switch the device off.

Trimming eyebrows

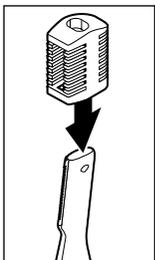

1. Slide the comb attachment onto the cutting head so that the teeth with the required cutting length - 6 or 3 mm - are on the cutting side that you would like to use.
When doing so, take note of the guide slots on the outside of the cutting head and in the comb attachment.
2. Slide the On/Off switch forwards to switch the device on.
3. Carefully guide the comb attachment on the device against the direction of hair growth along your eyebrows.

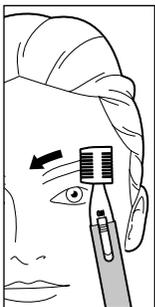

Information about the supplied battery

Manufacturer:
Naccon Power Technology Co. Ltd
6F, Block A, DongShanGang Industrial Park,
Xixiang St., Bao An District, Shenzhen, PRC
NACCON
www.naccon.com
aguogo@naccon.com
Manufacturing date: 2025/10
Made in: China

Shaping eyebrows

- ▷ Remove the comb attachment if necessary.



1. Slide the On/Off switch forwards to switch the device on.
2. Carefully guide the required cutting side of the cutting head along the contour of your eyebrows - both in and against the direction of hair growth.
This will precisely shave your eyebrows into the shape of your choice.

Removing facial hair

- ▷ Remove the comb attachment if necessary.



1. Slide the On/Off switch forwards to switch the device on.
2. Carefully guide the required cutting side of the cutting head over the skin against the direction of hair growth. When doing so, use your free hand to hold your skin taut and guide the device at a flat angle over the area you would like to shave.



You can also use the device in this way to shave neck hair or unwanted hair on other body parts.



WARNING - risk of injury

- Be careful when trimming nose hair: Do not insert the cutting head into your nostril as doing so could injure the mucous membrane in your nose. Only trim the hairs that stick out of the nose.
- Be careful when trimming ear hair: Do not insert the cutting head into your ear canal, as this could injure the eardrum. Only trim the hairs that stick out along the outside of the ear.


Cleaning

NOTICE - material damage


- Never immerse the device completely in water.
- The casing must be firmly locked into the cutting head when cleaning the device.
- Do not use abrasive or caustic cleaning agents or hard brushes, etc. for cleaning.

Cleaning the cutting head (after each use)

- ▷ Switch the device off and brush off the cutting head with the provided cleaning brush.
- ▷ Take the cutting head apart to clean it more thoroughly:

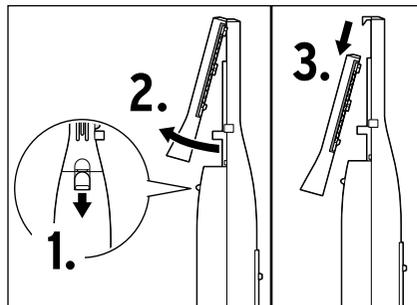

- ▷ Rinse off the blades under running water and let them dry completely.
- ▷ Brush out the inside of the casing with the provided cleaning brush as needed.
- ▷ Put the cutting head back together:

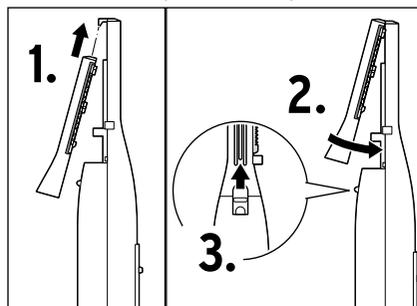

If the cutting head does not click into the white guide slot by itself in step 2, switch the device on and off briefly.

- ▷ Then you must press the small button upwards to lock the cutting head in place.

Oiling the blades in the cutting head

- ▷ If you regularly use the device, oil the blades in the cutting head from time to time. To do so, use a drop of an acid-free oil (e.g. oil for sewing machines).

Cleaning the comb attachment

- ▷ Remove the comb attachment from the device and lightly tap it out.
- ▷ Brush out the comb attachment with the provided cleaning brush or rinse it out under running water.

Cleaning the casing

- ▷ If necessary, wipe the device with a slightly dampened cloth. Do not under any circumstances clean the device under running water, as otherwise water may get through the casing into the device.

Disposal

This product, its packaging and the supplied battery have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment. Dispose of the **packaging** at a recycling point which sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Devices, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with normal household waste!

You are legally obliged to dispose of old devices separately from household waste. Electronic devices contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old devices can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

Product number: 724 977