

Product information

Small bowls

Product number: 714 916

Important information!

- These bowls are suitable for transporting and serving cold food.
- The bowls are not suitable for heating, cooking or baking. Do not use on the hob, in the microwave or in the oven!
- Do not cut food on the silicone lids and do not use pointed or sharp objects on them. Doing so will damage the lids.
- When the lids are properly closed, the bowls will not leak. Nevertheless, it cannot be completely ruled out that liquid foods, such as pureed fruit, may leak.
For this reason, always place or hold the bowls upright, especially during transport.
- Do not place anything on the closed bowls. This may cause the silicone lids to be pushed in and loosened!
- Clean the bowls thoroughly with hot water and a little washing-up liquid before using them for the first time and immediately after every further use. Do not use caustic cleaning products or pointed utensils for cleaning.
Then dry the bowls thoroughly to prevent stains.
The product is also dishwasher-safe.
However, do not place the lids directly above the heating elements.
- Clean the product as soon as possible after use while any remaining food is easier to remove.
- Dry the bowls and lids immediately after cleaning to prevent any stains from forming.
- Food with intense colours (e.g. carrots) may discolour the surface of the silicone lids.
This is neither harmful to your health nor does it impair the quality or function of the product.
- Store the bowls in a dry place and with the silicone lids open to prevent mould forming.