

Safety warnings

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Intended use

The product is designed as a removable wall light with a mount for sticking to suitable smooth surfaces. The product is suitable for use in dry, indoor areas. The product is designed for private use and is not suitable for commercial purposes.

DANGER to children

- Children are not aware of the risks involved in handling electronic appliances incorrectly. Therefore, keep children away from the product.
- Keep all small parts and packaging materials out of the reach of children. They pose several risks, including the risk of suffocation and choking!
- Swallowing batteries can be fatal. If a battery is swallowed, it can cause severe internal chemical burns and even death within 2 hours. Therefore, keep both new and old batteries and the product out of the reach of children. If you think that a battery has been swallowed or has got into the body in any other way, seek medical advice immediately.

Danger of chemical burns/fire/scalds

- If a battery has leaked, avoid contact with skin, eyes and mucous membranes. If necessary, rinse the affected areas with water and consult a doctor immediately.
- Batteries must not be taken apart, thrown into fire or short-circuited. In addition, single-use batteries must not be charged.
- Protect batteries / the battery compartment from excessive heat (radiators, direct sunlight). Remove the batteries from the product when they are flat or if you do not intend to use the product for a longer period of time. This will prevent damage caused by leakage.
- Always replace all batteries at the same time. Do not mix old and new batteries, different types or brands of batteries, or batteries with different capacities.
- If necessary, clean the battery and device contacts before inserting the batteries. Risk of overheating!
- Ensure that the polarity (+/-) is correct when inserting the batteries.
- Do not switch the product on while it is still in the packaging.
- Protect the product from dust, moisture, direct sunlight and extreme temperatures.

WARNING - danger due to improper use

- Do not make any modifications to the product. Have repairs to the product carried out only by a specialist workshop. Improper repairs can result in considerable danger to the user.
- Do not use the product if it shows any visible signs of damage or has fallen down.


Material damage

- Do not use the product outdoors or in damp rooms.
- Do not immerse the product in water or any other liquids. Protect the product from impacts, falls, dust, moisture, direct sunlight and extreme temperatures.
- Do not use caustic or abrasive agents or hard brushes, etc. for cleaning.
- The built-in LEDs cannot be replaced, otherwise the product would be destroyed.

Inserting/replacing the batteries

You will need 3 LR6 (AA) batteries..

1. Remove the switch from the mounting plate.
2. Remove the used batteries, if any are installed.
3. Insert the new batteries in the battery compartment on the back as shown.

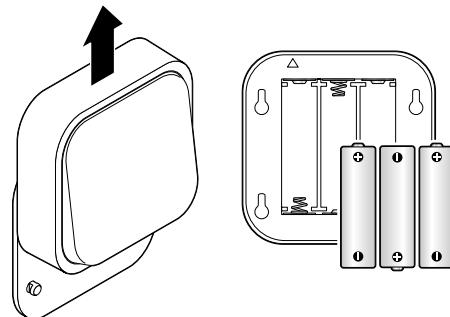

Attaching the light to the wall

You can stick the switch lamp to a suitable smooth surface using the adhesive pad.

Observe the following:


- Do not position the light directly above a sink, over a stove or in the vicinity of any other source of heat or moisture.
- Do not attach the light to round, curved or tubular objects. It could fall down and cause injury, or become damaged.

Attaching the wall mount

- The adhesive pad will adhere to all smooth and flat surfaces, e.g. mirrored or glass surfaces, tiles, etc. Do not attach the wall mount over joints and other uneven surfaces. The adhesive pad will not adhere to textured surfaces.
- The adhesive pad is intended for permanent attachment. Avoid attaching the wall mount to delicate surfaces if you want to remove it again later.
- 1. The surface must be free from dust, grease, silicone and limescale. Clean and degrease the surface with pure alcohol (isopropyl) or methylated spirit. Bathroom or all-purpose cleaners are not suitable.
- 2. Gently pre-dry the cleaned area and then leave it to dry completely.


Make sure that you attach the wall mount and switch lamp the right way round: the arrow should be facing upwards (see illustrations). The switch lamp can then be pushed onto the mount from above and the switch protrudes at the bottom when switched off (see illustration below).

3. Place the wall mount in the desired position and press it there firmly for approx. 10 seconds. After approx. 30 minutes, press it again for approx. 10 seconds.

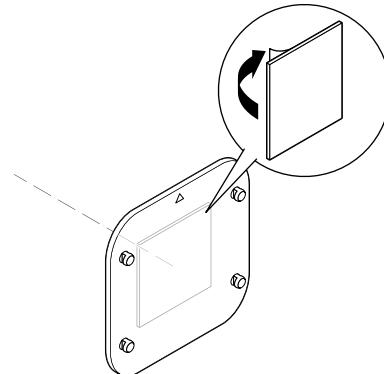


After 24 hours, the wall mount is ready for use.

- You will get the best hold at temperatures between 23 °C and 40 °C.
- ▷ Attach the lamp to the wall mount.

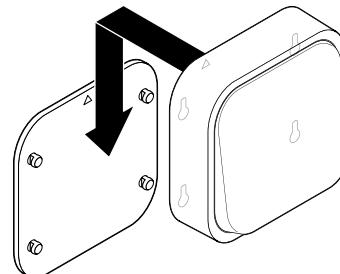

Use

- ▷ To switch on and off, use the rocker function of the switch.

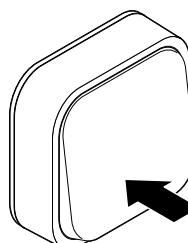

The LED inside the switch remains lit for a moment after switching off before it goes out.

Cleaning

- ▷ To clean the product, wipe it with a soft, slightly damp cloth.

Disposal

The product, its packaging and the supplied batteries have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Appliances, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste!

You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

Technical specifications

Model: 728 351

Single-use batteries: 3x LR6 (AA)/1.5 V (Zn/MnO₂)

Light duration
(with 1 set of batteries): approx. 100 hours

Bulb: LED

Ambient temperature: +10 to +40 °C

Made exclusively for: Tchibo GmbH, Überseering 18,
22297 Hamburg, Germany

Information about the supplied batteries

Manufacturer: CHANGZHOU JINTAN CHAOCHUANG BATTERY Co., Ltd.
Xiyang Industrial Zone, Xuebu Town, Jintan City, Jiangsu, PEOPLE'S REPUBLIC OF CHINA;
www.chaochuang.com

Email: marvelous@chaochuang.com

Model: CHAO CHUANG LR6 AA 1.5V

Manufacturing date: 2025/08

Made in: China

Product number: 728 351