


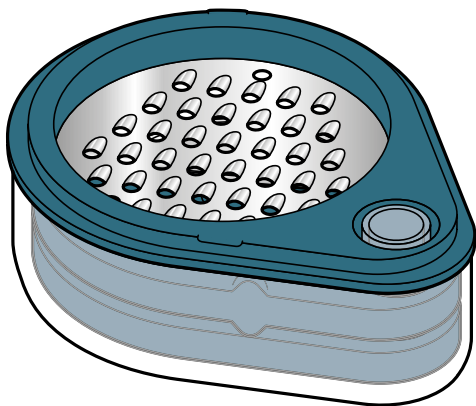

Kitchen utensil set



**Three compact kitchen utensils
for peeling, grating and cutting**

Product number: 733 699

Instructions for use
www.tchibo.de/instructions



Dear Customer

Your new compact set of kitchen utensils consists of a vegetable peeler, a grater and a pizza cutter. The box provides convenient storage for them but also acts as a collection box for the grater.

We hope you enjoy using this product.

Your Tchibo Team

For your safety



CAUTION - risk of injury


- Do not touch the sharp edges of the blades.
- Keep away from children.

NOTICE - material damage


- Do not use any caustic, aggressive or abrasive products for cleaning.
- Do not allow food remnants to remain on the kitchen utensils for longer periods. Always wash them immediately after use and only use a mild washing-up liquid to do so. To avoid injury, the dishwasher should be clear enough for you to see the blades as you rinse.
- The kitchen utensils and the box can also be cleaned in the dishwasher. Take them out of the dishwasher as soon as possible after cleaning and dry them thoroughly if they are still wet.

At a glance (contents)


Grater

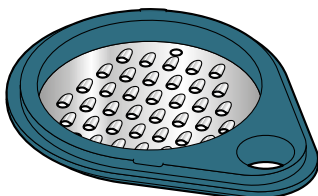


Vegetable peeler

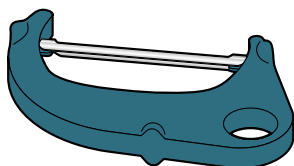



Pizza cutter

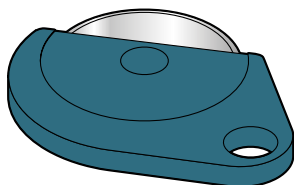

Storage box and
collection box

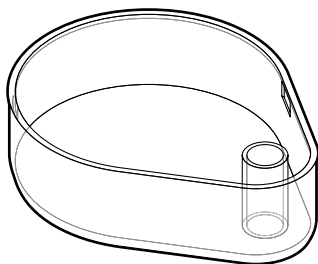


Using the grater

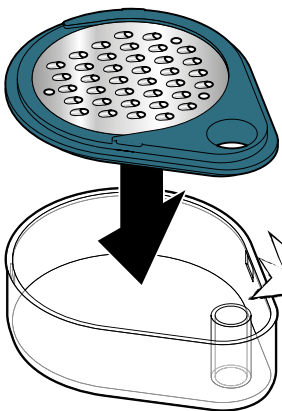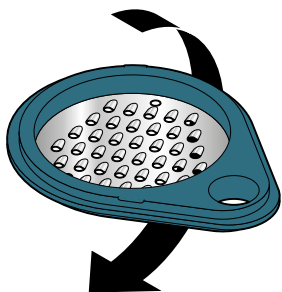


Click!




Using the vegetable peeler

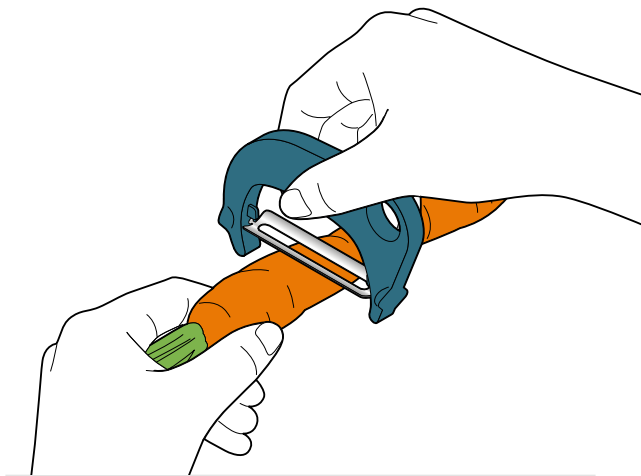

Using the pizza cutter

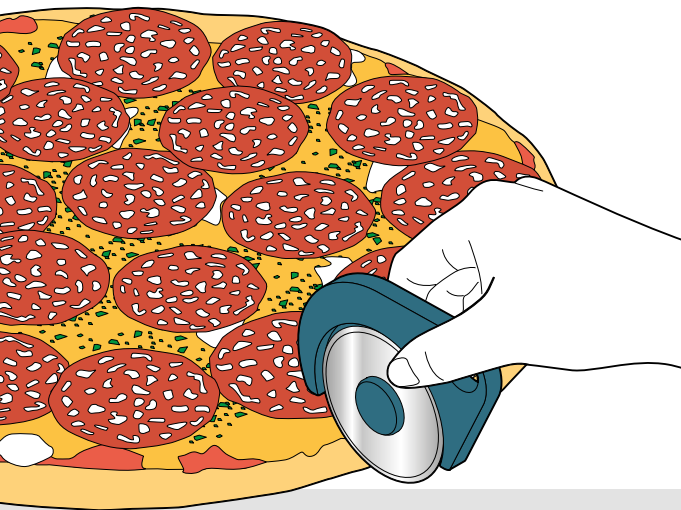

Storing the kitchen utensil set

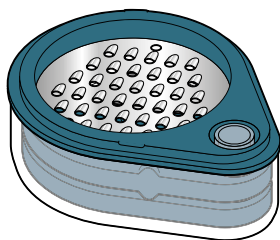

- ▷ Always place the grater with the blades facing downwards when not in use or when storing it.

Made exclusively for:
Tchibo GmbH, Überseering 18,
22297 Hamburg, Germany