


# Electric cleaning brush

en Instructions for use

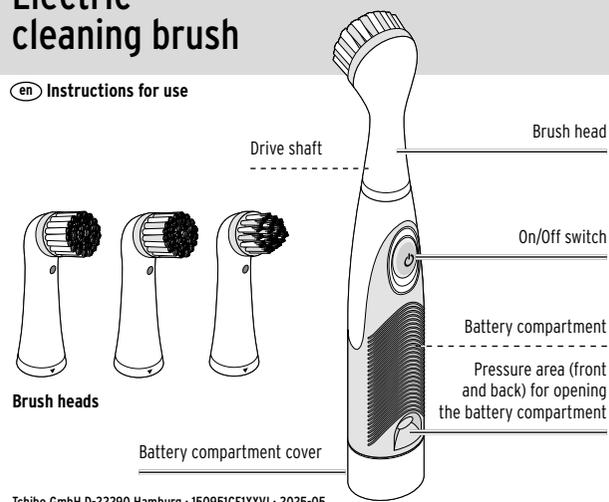

Tchibo GmbH D-22290 Hamburg · 15095ICE1XXVI · 2025-05

Product number: 726 682



www.tchibo.de/instructions  
(Please enter the product number in the box labelled "Bedienungsanleitungssuche" and click on "Suchen".)



## Safety warnings

This product is equipped with safety features. Nevertheless, read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

### Intended use

The electric cleaning brush is designed for cleaning suitable surfaces and objects. It is not suitable for personal care or pet grooming. In particular, never use the device as a toothbrush!

The product is designed for private use and is not suitable for commercial purposes.

### Danger to children

- The product is not a toy! Children are not aware of the risks involved in handling electronic devices incorrectly. Therefore, keep the product out of the reach of children.
- Keep the packaging materials out of the reach of children. They pose several risks, including the risk of suffocation and injury!
- Swallowing batteries can be fatal. If a battery is swallowed, it can cause severe internal chemical burns and even death within 2 hours. Therefore, keep both new and old batteries and the product out of the reach of children. If you think a battery has been swallowed or has entered the body in any other way, seek medical advice immediately.

### Risk of injury

- The oscillating brush heads may throw off dirt particles or cleaning products. Protect your eyes with protective eyewear if necessary! Do not use the device to apply bleach or any other dangerous chemicals.
- While in use, keep the device away from long hair, loose clothing, jewellery and similar. These may get caught in the oscillating heads.

- Single-use batteries must not be charged, taken apart, thrown into fire or short-circuited.
- If a battery has leaked, avoid contact with skin, eyes and mucous membranes. Rinse the affected areas with water if necessary and consult a doctor immediately.

### Material damage

- The cleaning brush corresponds to protection type IPX5 and is protected against jetting water from all directions when the battery compartment is properly closed. However, do not immerse the device in water or other liquids. Ensure that no water penetrates the device while the device is being used or cleaned.
- Do not use the device on sensitive surfaces which are not suitable to be treated with the cleaning brush. The hard bristles on the brush head can scratch or damage sensitive surfaces such as glass, car paint, stainless steel, copper, wood, etc. If in doubt, test the cleaning brush first on an inconspicuous part of the surface you wish to clean.
- Protect the batteries from excessive heat. Remove the batteries from the product when they are flat or if you do not intend to use the product for a prolonged period. This will prevent damage caused by leakage.
- Always replace all batteries at the same time. Do not mix old and new batteries and do not use different types or brands of batteries, or batteries with different capacities. When inserting the batteries, ensure correct polarity (+/-).
- Clean the contacts on the batteries and device as required before inserting the batteries. Risk of overheating!
- Do not use abrasive or caustic products, or hard brushes, etc. for cleaning the device.

## Dear Customer

Your new electric cleaning brush is ideal for cleaning small surfaces, both rough and smooth, joints and hard-to-reach places with ingrained dirt.


The four fast-oscillating brush heads can be interchanged to suit various types of surfaces and thus ensure fast and effective cleaning.

Thanks to the soft-grip handle, the device fits snugly in your hand at all times.


We hope you enjoy using your new cleaning brush.

Your Tchibo Team

## Inserting / replacing batteries

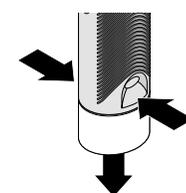

- Press the pressure areas on both sides and pull the battery compartment cover off the device.

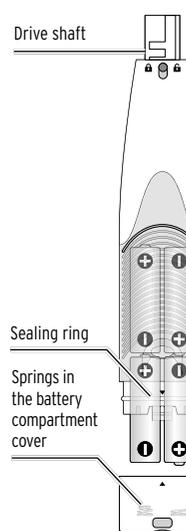

- Hold the cleaning brush as shown - with the On/Off switch facing away from you.
- Insert the batteries provided into the battery compartment as illustrated, ensuring that the polarity is correct (+/-). Check that the sealing ring is clean, undamaged and in the correct position.
- Push the battery compartment cover back in place - with the small arrows on the cover and the housing facing towards each other - until you feel it click into place on the device.

The batteries need replacing when the brush heads are only oscillating slowly or are not oscillating at all. Replace the used batteries with new ones of the same type (see "Technical specifications").

## Technical specifications


Model:	726 682
Single-use batteries:	4x LR6 (AA)/1.5 V (ZnMnO <sub>2</sub> )
Operating time with one set of batteries:	approx. 2 hours
IP code:	IPX5 (protection against jetting water from all directions)
Ambient temperature:	+10 to +40 °C
Made exclusively for:	Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany

### Additional information about the supplied batteries:

Manufacturer:	CHANGZHOU JINTAN CHAOCHUANG BATTERY CO., LTD Xiyang Industrial Zone, Xuebu Town, Jintan District, Changzhou City, Jiangsu Province, China
Trademark:	CHAOCHUANG
Website:	www.chaochuang.com
Email:	marvelous@chaochuang.com
Manufacturing date:	2025/04


## Attaching / changing the brush head

### Changing the brush head

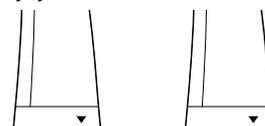

### Detaching

- To release the brush head, turn it to the right until the arrow on the brush head is opposite the "open lock" symbol on the device, then pull the brush head upwards to remove it.

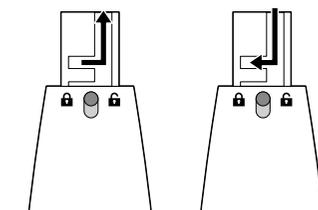

### Attaching

- Position the brush head so that the arrow on the brush head is opposite the "open lock" symbol on the device. Then turn the brush head to the left to lock it so that the arrow and the "closed lock" symbol are aligned.

This way, the brush head is firmly fitted in place.

### Selecting the right brush head

#### NOTICE - material damage


The hard bristles on the brush head can scratch or damage sensitive surfaces such as glass, car paint, stainless steel, copper, wood, etc. If in doubt, test the cleaning brush first on an inconspicuous part of the surface you wish to clean.




**Large, round brush head**  
hard bristles,  
for larger, resilient surfaces (e.g. tiles)



**Small, round brush head**  
hard bristles,  
for smaller, resilient surfaces

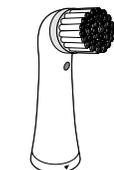

**Small, round brush head**  
soft bristles,  
for sensitive surfaces

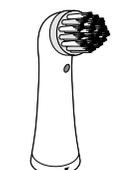


**Conical brush head**  
for narrow and hard-to-reach areas  
(e.g. fittings, joints)

## Using the cleaning brush

### CAUTION - risk of injury due to oscillating parts

- The oscillating brush heads may throw off dirt particles or cleaning products. Protect your eyes with protective eyewear if necessary!
- While in use, keep the device away from long hair, loose clothing, jewellery and similar. These may get caught in the oscillating heads.

- Moisten the bristles and apply a suitable cleaning product if required. Gel or powder cleaning products are better suited to use with the device than thin fluids. You can also spray the surface you wish to clean with a spray cleaner, for example.
- Place the device on the area that is to be cleaned.

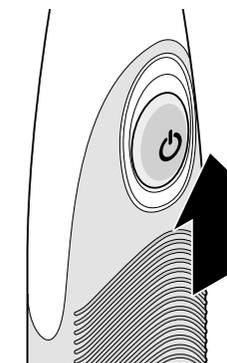


- To **switch** the device **on**, slide the On/Off switch upwards. The bristles will oscillate.
- Slowly move the cleaning brush over the surface.
- To **switch** the device **off**, slide the On/Off switch back downwards.

## Cleaning the device

### NOTICE - material damage

- When the battery compartment is properly closed, the device is protected against jetting water. However, do not immerse the device in water or other liquids. Ensure that no water gets into the drive shaft.
- Do not use abrasive or caustic products, or hard brushes, etc. for cleaning the device.

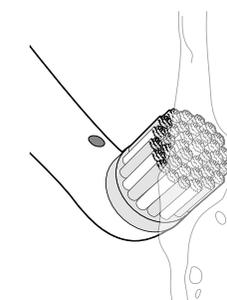

- Clean the **brush heads** with running warm water and a mild cleaning product as illustrated. Then rinse thoroughly with clean water.
- Allow the brush heads to dry completely before putting the device away.
- Wipe off the device with a slightly damp cloth.

## Disposal

The product, its packaging and the supplied single-use batteries have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



**Devices, single-use batteries and rechargeable batteries** marked with this symbol must not be disposed of along with household waste! You are legally obliged to dispose of old devices separately from household waste. Electronic devices contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old devices can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.