


# LED star

en Instructions for use

# Product number: 718 199

Made exclusively for: Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany



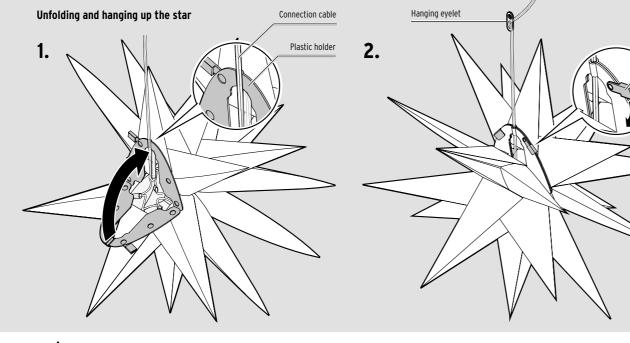




#### On/Off switch with a monitoring LED

Control box

- Briefly press once: to switch the product on
- Briefly press once each time to toggle through the colours and light effects on the remote control, which are displayed one after the other, starting with the colour or light effect last used. After the last light effect in the sequence, the product switches off
- Press & hold once (approx. 2 sec): to switch the timer function on (4 hours ON - 20 hours OFF or the sequence last set on the remote control)
- Press & hold once (approx. 2 sec): to switch the timer function off
- Press & **hold once** (approx. 5 sec): to switch the product off

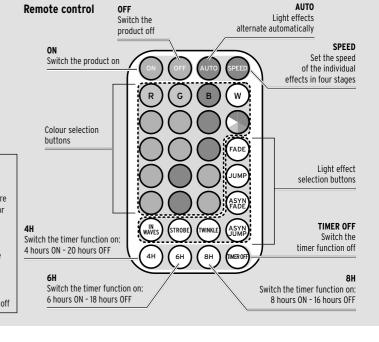

# Safety warnings 🔨

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

The product is only suitable for decoration and not for lighting whole rooms.

The product is suitable for use both indoors and outdoors. It is designed for private use and is not suitable for commercial purposes.

•This is not a children's toy! Use only under adult supervision.

Keep the product and packaging materials out of the reach of infants. Small swallowable parts pose several risks, including the risk of choking! Long cords pose a risk of strangulation! Risk of injury from the sharp points of the star!

#### The remote control contains a lithium battery (coin battery). There is a risk of leakage, gas emissions, explosion and fire:

- Swallowing batteries can be fatal. The remote control is fitted with a coin battery. Swallowing a coin battery can cause severe internal chemical burns and even death within 2 hours. Therefore, keep both new and old batteries and the product out of the reach of children. If the battery compartment does not close properly, discontinue use of the product and keep it out of the reach of children. If you think that a battery has been swallowed or has got into the body in any other way, seek medical advice immediately.
- Warning! Lithium batteries can explode if inserted incorrectly. Therefore, ensure
  that the polarity (+/-) is correct when inserting the battery. Use only batteries of
  the same or an equivalent type (see "Technical specifications").
- If necessary, clean the battery and device contacts before inserting the battery.
   Risk of overheating!
- Single-use batteries must not be charged, taken apart, thrown into fire or short-circuited. Do not modify and/or deform/heat/dismantle batteries. Do not allow damaged batteries to come into contact with water.
- Batteries must not be overdischarged. Keep unused batteries in the original packaging. Do not bring unpacked batteries (both new and partially/fully used) into contact with each other and keep them away from metal objects.
- Protect batteries from excessive heat (heaters, direct sunlight). Remove the battery from the product immediately when it is spent or if you do not intend to use the product for a prolonged period. This will prevent damage caused by leakage
- If a battery has leaked, avoid all contact with your skin, eyes and mucous membranes. Rinse the affected areas with plenty of clear water if necessary and consult a doctor immediately.
- Rapidly flashing lights can cause migraines. It can also cause seizures in persons
  with epilepsy or autism. Epileptic or fainting episodes or migraines can also occur
  in those who have previously never suffered such problems. You should not use
  the LED star if you or anyone in your family has a predisposition to such conditions. Parents should not leave children unsupervised with the LED star. Should
  any of the following symptoms occur, switch off the LED star immediately and
  consult a doctor: cramps, eye or muscle spasms, unconsciousness, involuntary
  movements or disorientation.
- The product is suitable for outdoor use and complies with protection type IP44. This means that the product is protected against contact with tools, wires and foreign objects with a diameter larger than I mm and splashes of water, such as rain. However, you should protect it from heavy rain and streams of water. Never use the product under water. This would immediately result in a short circuit and present the risk of an electric shock.
- Discontinue use of the product if the sealing ring in the protective cap is improperly mounted or damaged.
- Connect the product only to a properly installed power socket with a mains voltage that complies with the technical specifications of the mains adapter.
   The LEDs cannot be dimmed. Therefore, never connect the product to dimmable power sockets.
- · Do not use an extension cable.


- Always connect the connection cable to the mains adapter before you plug the mains adapter into the power socket. Always unplug the mains adapter from the power socket before disconnecting the connection cable from the mains adapter.
- Remove the mains adapter from the power socket ...
- ... if malfunctions occur during use,
- ... during thunderstorms,
- ... before cleaning the product.
- Always pull on the mains adapter, not on the connection cable.
- $\ensuremath{\bullet}$  The product must be used only with the mains adapter provided.
- The connection cable must not be kinked or crushed. Keep the connection cable away from hot surfaces and sharp edges.
- The product must not be electrically connected to other fairy lights or anything similar.
- The On/Off switch on the control box and the OFF switch on the remote control do not disconnect the product from the mains. The power supply can only be interrupted by unplugging the mains adapter. The power socket used must be easily accessible so that you can quickly unplug the mains adapter whenever necessary.
- Do not use the product if the product itself, the connection cable, the control box or the mains adapter show any visible signs of damage. Damage to the connection cable cannot be repaired. In the event of such damage, contact our customer care service and dispose of the product in accordance with the current regulations.
- Do not make any modifications to the product. Have repairs to the product carried out only by a specialist workshop or as arranged by our customer care service.
- Route the connection cable in such a way that it is not a tripping hazard.
   The cable is not suitable or certified for underground installation.
- The LEDs are built in and cannot and must not be replaced.
- Do not use any caustic, aggressive or abrasive products for cleaning.
- The product is suitable for outdoor use at temperatures above approx. -10 °C.
   In temperatures colder than this, keep the product indoors, as otherwise it may become damaged.
- $\bullet$  The product is not designed to withstand strong winds, storms, etc.! Take down the product in good time if strong winds or storms are forecast.
- Do not switch the product on while it is still in its packaging and do not cover it when it is in use.

#### Use

## Unfolding and hanging up the star


- Unfold the star by bringing the two plastic holders together. The connection cable must be positioned in the recess in the plastic holders (see detail illustration).
- 2. Secure the two plastic holders by sliding the clamps over them at the top right and left (see detail illustration).
- > Hang the star on a nail, hook or similar using the hanging eyelet.

#### Connecting the mains adapter

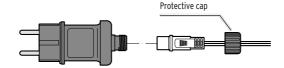

- Insert the plug on the connection cable into the port on the mains adapter and screw on the protective cap firmly.
- 2. Insert the mains adapter into a power socket.

#### Activating the remote control

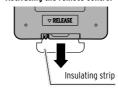

The remote control comes fitted with an insulating strip to protect the battery.

To activate the remote control, pull the insulating strip out of the battery compartment.

## Switching the product on/off, selecting colours and light effects

The product can be switched on and off and the colours and light effects can be selected both via the On/Off switch on the control box on the connection cable and via the remote control.



- The remote control has a range of 5 m and must be positioned at an angle of 110° from the infrared receiver on the control box for its signals to be received.
- Point the remote control towards the control box not the star!
   Ensure there are no objects blocking the space between the remote control and the control box.
- Avoid bright light, such as direct sunlight and bright neon light.
   This can interfere with the transmission of infrared rays.

#### > To switch the product on, ...

- $\dots$  briefly press the On/Off switch on the control box  $\mbox{\bf once}$  or
- $\dots$  the  $\mathbf{ON}$  button on the remote control  $\mathbf{once}.$

The star will light up in the colour last used or the light effect last used.

- > To select the various colours and light effects, ...
- ... **briefly** press the On/Off switch on the control box **once** the colours and light effects are displayed one after the other according to the sequence of the colour or light effect selection buttons on the remote control or
- ... press the respective colour or light effect selection button on the remote control **once**.
- hd To display the light effects automatically one after the other, ...
  - ... **briefly** press the On/Off switch on the control box to toggle through them until the star switches off. Now press it **once more briefly** this activates the AUTO function. The next time you press the button, colour selection will start again with the colour red, etc. or
- ... press the AUTO button on the remote control once.
- ▶ In addition, to change the speed of the individual light effects in four stages, press as follows when the light effect is active ...
- ... for each change, press the SPEED button on the remote control once. The speed of the light effect changes each time the button is pressed in the sequence 1-2-3-4-1; level 3 is the default.

You cannot set the speed of the light effects on the control box.

- > To switch the product off, ...
- ... briefly press the On/Off switch on the control box several times until the star switches off, or
- $\dots$  press & hold the On/Off switch on the control box  $\mathbf{once}$  (approx. 5 sec) or
- ... press the OFF button on the remote control once

# Switching the timer function on/off

The product has a timer function with three different ON/OFF time settings. All the three ON/OFF times can be set using the remote control.

> To switch the product on with the desired ON/OFF time, .

- ... press the **4H** button **once**: LEDs in the star flash twice and then light up in the following sequence: On: 4 hours -> Off: 20 hours -> On: 4 hours, and so on.
- ... press the **6H** button **once**: LEDs in the star flash twice and then light up in the following sequence: On: 6 hours -> Off: 18 hours -> On: 6 hours, and so on.
- ... press the **8H** button **once**: LEDs in the star flash twice and then light up in the following sequence: On: 8 hours -> Off: 16 hours -> On: 8 hours, and so on.
- ightharpoons To switch the timer function off again, ...

2 seconds.

... press the **TIMER OFF** button on the remote control **once**.

The LEDs in the star flash twice and then light up continuously.

You can also switch the timer function on and off on the control box.

To do this, proceed as follows:

➤ To switch the timer function on, press and hold the On/Off switch for approx.

The monitoring LED in the On/Off switch lights up green, and the LEDs in the star flash twice and then light up in the sequence last set on the remote control.

flash twice and then light up in the sequence last set on the remote control.

If you have not yet selected another ON/OFF time on the remote control, the default setting on the control box is a 4-20 sequence. You cannot change this setting on the control box.

To switch the timer function off again, press and hold the On/Off switch for approx. 2 seconds.

The green monitoring LED goes out and the LEDs in the star flash twice and then light up continuously again.

### Replacing the battery in the remote control $% \left( 1\right) =\left( 1\right) \left( 1\right) \left($

The battery must be replaced when the LEDs stop responding to the remote control. You need a single-use battery of type CR2025, 3 V.

The battery compartment is located on the back side of the remote control.




l. Press the small lever in and pull out the battery holder.



**▽ RELEASE** 

Replace the flat battery with a new one.
 Ensure that the polarity (+/-) is correct when doing so (+ symbol facing upwards).

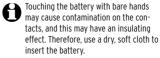

Push the battery holder back in completely. You must hear and feel it click into place.

# Cleaning

- 1. Remove the mains adapter from the power socket.
- 2. Wipe off the product and the remote control with a dry, soft and lint-free cloth.

## **Technical specifications**

Model: 718 199

Mains adapter

Input: 220-240 V ~ 50/60 Hz
Output: 4.5 V \_\_\_\_ 6 W

Protection class:

IP code: LED star

Bulb: 90 LEDs
Protection class: III

Protection class:
IP code:
Remote control

Single-use battery: 1x CR2025/3 V

IP44

IP44

Watt-hour rating: 0.42 Wh

(tested as per UN 38.3) Ambient temperature: -10 to +40  $^{\circ}\text{C}$ 

In the course of product improvements, we reserve the right to make technical and optical modifications to the product.

## Information about the supplied batteries

Model: ANYIDA CR2025 size 3V

Manufacturing date: 2025/03

and lightweight packaging

Manufacturer: CHANGZHOU ANYIDA POWER TECHNOLOGY Co., Ltd., No.1 East Road, Lou Xia Industrial Park, Rulin Town, Jintan District, Changzhou, Jiangsu Province, PEOPLE'S REPUBLIC OF CHINA www.anyidapower.com
Email: 20ey@anyida-power.com

## Disposal

The product, its packaging and the supplied battery have been manufactured from valuable materials that can be recycled.

Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type.

Make use of the local facilities provided for collecting paper, cardboard

Devices, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste!
You are legally obliged to dispose of old devices separately

from household waste. Electronic devices contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old devices can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

Tchibo GmbH D-22290 Hamburg · 150042CE55XXV · 2025-05