 
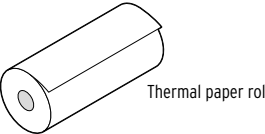 
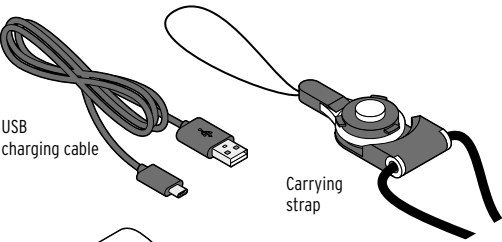 
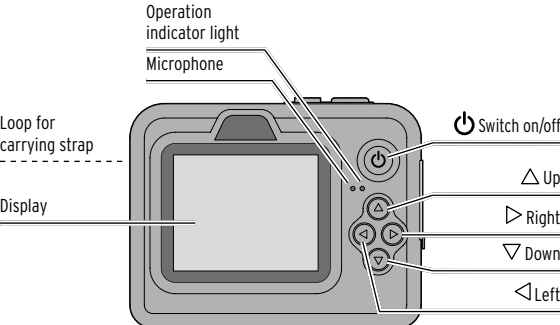 


Camera with printer

en Instructions for use

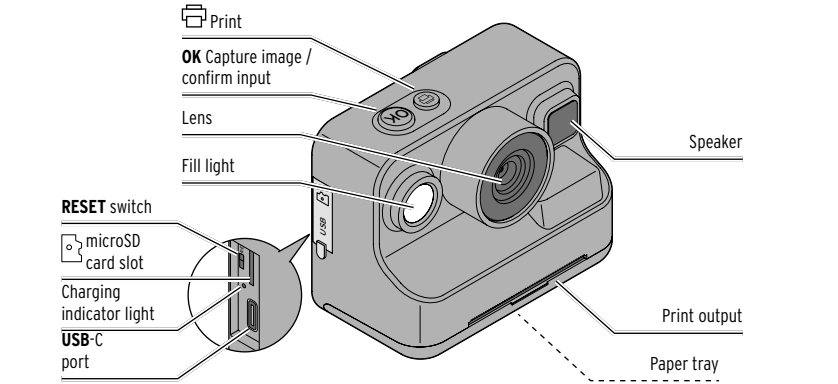

Not illustrated:

- Coloured pencils for colouring in the printed colouring pages
- Stickers for decorating the printed images

Product number: 721 350

Manufacturer: Commaxx BV,
Wiebachstraat 37, 6466 NG Kerkrade,
The Netherlands



Warning!
Safety warnings

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage.

Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Intended use

- The product is suitable for capturing digital photos and video sequences.
- The product is intended for private use and is not suitable for commercial purposes. Use the product only in moderate climatic conditions.

Respect the privacy of others!

- **Not suitable for children under 36 months. Small parts. Choking hazard.**
- Remove all packaging materials before giving the product to a child. Choking hazard.

Danger due to electricity

- Do not immerse the product in water or any other liquids.
- Do not use the device in damp or wet environments.
- Do not use the product if it shows visible signs of damage.
- Do not make any modifications to the product. Do not forcefully open the casing. Only have repairs to the product carried out by a specialist workshop or as arranged by our customer care service. Improper repairs may result in considerable risks to the user.

When charging the product, note the following:

- Rechargeable batteries must only be charged under adult supervision.
- Use only suitable mains adapters (see "Technical specifications"). The product cannot be charged with a USB-C PD mains adapter, for example.
- Do not use or attempt to repair faulty mains adapters.

- Only connect the mains adapter to a properly installed wall socket with a mains voltage that complies with the technical specifications of the device. The product must not be connected to the mains power in damp areas.
- Disconnect the mains adapter from the wall socket: if disturbances occur during use, after use, during thunderstorms and before cleaning the device. To disconnect the mains adapter from the socket, always pull the mains adapter itself, not the connection cable.
- Do not put any receptacles containing liquid, such as vases, on top of or within close proximity of the product, as the receptacle may tip over and the liquid may compromise electrical safety. There is a risk of electric shock.

Danger of explosion/fire/burns

- You cannot and must not attempt to replace the built-in rechargeable battery yourself. There is a risk of explosion if the battery is replaced incorrectly. It should be replaced only with an identical battery or one of the

- same type. If a rechargeable battery is defective, contact a specialist workshop or the customer care service.
- Do not place any naked flames, such as burning candles, near the product. The product must be kept away from candles and other naked flames at all times to prevent the spread of fire.
- The product contains rechargeable lithium batteries. These must not be taken apart, thrown into a fire or short-circuited.
- Do not modify and/or deform/heat/dismantle rechargeable batteries. Do not allow damaged rechargeable batteries to come into contact with water.
- Avoid storing, charging and using the product at extreme temperatures and in areas of extremely low air pressure (e.g. at high altitudes).

WARNING – risk of eye injury

- Do not look directly into the camera light. Do not shine the light directly into anyone's eyes – especially those of children.

Material damage

- Do not immerse the product in water or other liquids. You should also protect it from splashes and drops of water.
- Taking the product from a cold place to a warm place may cause condensation to form inside. In this case, leave the device switched off for a few hours.
- Do not drop the product or subject it to other forms of severe physical shock.
- Never open or remove any part of the casing. Do not insert any objects into the openings in the casing.
- Protect the product from intense heat (direct sunlight, heaters, etc.) as well as from dust and moisture.
- When inserting or removing the memory card, ensure that the camera, your hands and the memory card are completely dry.
- Before cleaning the camera, disconnect it from the computer.
- Do not use any caustic, aggressive or abrasive products for cleaning.

Caution – loss of data

- Never disconnect the camera from the computer when data is being read, written or deleted. This can result in the loss of data. First disconnect the camera from the computer before switching it off or removing the memory card.
- Do not expose the camera or memory cards to magnets or magnetic fields. A magnetic field can damage or completely erase stored data. It may also cause permanent damage to the storage media. Damage to the camera and repairs performed by customer service or others may also result in an unavoidable loss of data.

Note

- The camera and memory card may feel warm after prolonged continuous use. This is perfectly normal and does not constitute a malfunction.

Note the following when printing:

- When printing at medium or high resolution, allow a short pause between prints to prevent the camera from overheating.


When you connect the camera to the power supply, it will switch on. During charging, the charging indicator light will light up red. Depending on the selected mode, the charging battery icon appears on the display. Once the battery is fully charged, the indicator light turns off.

4. Disconnect the cable from the mains adapter and the camera. Close the cover.

Information on rechargeable batteries

- Charge the rechargeable battery as soon as a low charge level is indicated. If the rechargeable battery is completely flat and the camera can no longer be switched on, allow it to charge for a minimum of 30 minutes.
- To preserve the full capacity of the rechargeable batteries for as long as possible, you should fully recharge the batteries every 2 to 3 months, even if you do not use the product.
- Charge the batteries in an environment between +10 and +40 °C.
- The batteries will best hold their charge at room temperature. The lower the surrounding temperature, the shorter the playback time.

If you connect the product to a PC for charging, take all the usual precautions regarding backing up your data.

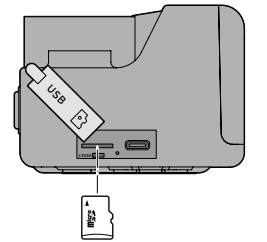

Inserting the microSD card

To store your photos and videos, you can use the camera with a microSD card (not included).

1. Turn off the camera and, if necessary, disconnect it from the power supply.
 2. Open the cover above the USB-C port and the microSD card slot.
 3. Insert the card into the slot as shown until it clicks into place. You can only insert the card in one orientation. If the card doesn't slide in easily, do not force it – check the orientation.
 4. Close the cover.
- ▷ Gently press the card to release it – it will then spring out. Remove it completely.


Information about the microSD card

Instructions for formatting the microSD card can be found on the reverse side under Settings > Format.

The microSD card must be formatted in the camera. Three folders are created: VIDEO, PHOTO and MP3. The camera saves captured files in the Video and Photo folders. You can add MP3 files to the MP3 folder from your computer to play music using the camera.

Note the following:



Without a microSD card, you cannot record videos, and photos can only be printed directly.

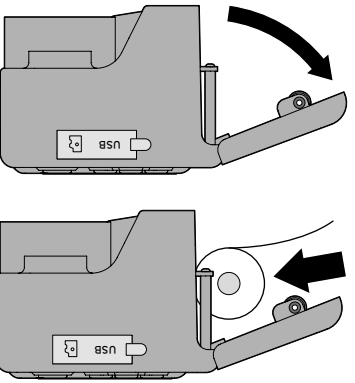

Insert printer paper

To print your photos directly, insert one of the paper rolls.

1. Fold down the paper tray cover.
2. Insert the paper roll. **Pay attention to the orientation:** Unroll the roll from the top as shown.
3. Pull the beginning of the paper slightly out of the camera.
4. Press down the paper tray cover so that the paper is clamped between the cover and the serrated edge of the paper tray.
5. Pull the paper taut.

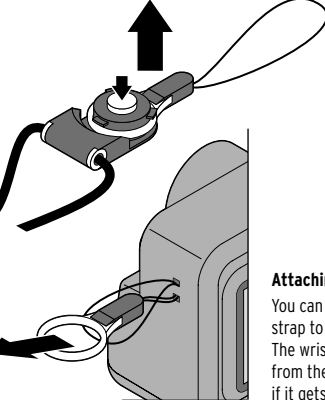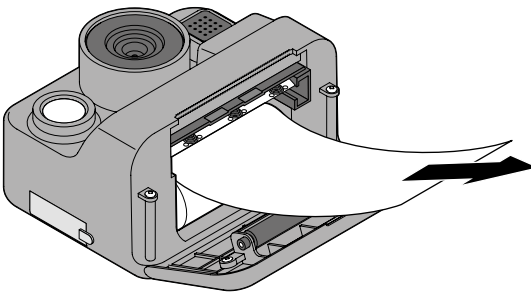

Attaching the carrying strap

You can attach the included carrying strap to the camera. The wrist strap can easily be detached from the ring at the press of a button if it gets in the way.

1. To remove the wrist strap from the ring, press the button down and take off the ring.
2. Attach the ring to the camera.
3. Place the ring over the button on the wrist strap, press the button, and then slide the ring downwards.



Switching on and off

On - Press and hold until the operation indicator light turns blue. A melody sounds and the display switches on.

Off - Press and hold until a melody sounds. The display switches off and the operation indicator light goes out.

After approximately 3 minutes without any button being pressed, the camera enters standby mode. The display turns off, but the operation indicator light remains on.

To reactivate the camera, **briefly** press **On**.

After a further 2 minutes, the camera switches off completely.

Navigating the menu


Use the arrow keys to navigate between the individual menu items. If multiple menu items are visible, the currently selected item pulses.

Confirm your selection by pressing **OK**.

Briefly press this button to cancel and return to the previous menu level

Operating modes

After switching on, a welcome screen appears, followed by the start menu with the operating modes: **Camera** - **Video** - **Music** - **Playback** - **Games** - **Settings**.

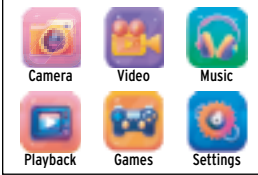

Camera mode

To save photos permanently, you must insert a microSD card (see the section on the reverse side). The memory card icon appears on the display.

To print a photo immediately, press the print button on top of the camera **before** taking the photo.

The printer icon appears on the display. Photo functions:

Briefly press to cycle through various filters, effects, frames, print templates for games or colouring pages, on-screen stickers and more.

Briefly press when the print function is deactivated to cycle through the following functions (the icons appear in the top left corner of the display):

Music mode

To load music onto the camera, insert a microSD card - MP3 folders will be created automatically. Connect the camera to a computer to transfer music from your computer to the camera.

Playing music from a list

To show or hide the list of available tracks, press the print button on top of the camera.

Press **briefly** to switch between music tracks.

Press **briefly** to start and stop playback.

Press **briefly** to exit the list.

Playing music without displaying the list

Press **briefly** to select music tracks directly.

Press **briefly** to adjust the volume.

Press **briefly** to start and stop playback.

Press **briefly** to return to the start menu.

Playback mode

Playback mode can only be used when a microSD card is inserted. Photos (JPG) and videos (AVI) taken with the camera can be accessed here.

Press **briefly** to scroll through saved photos and videos.

Press **briefly** to start and stop video playback.

Deleting photos/videos

Press **briefly** to open the Delete menu.

Press **briefly** to switch between deleting a single file and "Delete All".

Press **briefly** to confirm.

Printing photos

To print photos, press the print button on top of the camera.

The printer icon appears on the display.

Press **briefly** to select a photo for printing.

Press **briefly** to confirm.

Games mode

Here you will find various computer games.

Press **briefly** to select a game.

Press **briefly** to confirm.

Press **briefly** to navigate left, right, up or down in the game.

Press **briefly** to exit the game.

Settings

Here you can adjust various settings for your camera.

Press **briefly** to select a menu item.

Press **briefly** to confirm.

Language

Press **briefly** to select a language.

Press **briefly** to confirm.

Press **briefly** to exit the menu item without making changes.

Printing

Press **briefly** to select between Low, Medium and High.

Press **briefly** to confirm.

Press **briefly** to exit the menu item without making changes.

Date/Time

Press **briefly** to increase or decrease the value.

Press **briefly** to move to the next entry.

Press **briefly** to confirm.

Press **briefly** to exit the menu item without making changes.

Volume

Press **briefly** to increase or decrease the volume (for both signal beeps and MP3 files).

Resolution (Video)

Press **briefly** to switch between 720P and 1080P video resolution.

Press **briefly** to confirm.

Press **briefly** to exit the menu item without making changes.

Camera Resolution (Photo)

Press **briefly** to switch between 3M, 5M, 10M and 12M photo resolution.

Press **briefly** to confirm.

Press **briefly** to exit the menu item without making changes.

Format (microSD card)

Here you can format the inserted microSD card.

Press **briefly** to select **OK** or **Cancel**. Warning: If you confirm with **OK** in step 2, there is no further prompt - the card will be formatted immediately

Press **briefly** to confirm.

Press **briefly** to exit the menu item without making changes.

Auto Power Off

Here you can set whether the camera switches off when not in use and after how long.

Press **briefly** to select between One Min, Three Min, Five Min and Off.

Press **briefly** to confirm.

Press **briefly** to exit the menu item without making changes.

Screen Savers

Here you can set whether the display switches off when not in use and after how long.

Press **briefly** to select between One Min, Three Min, Five Min and Off.

Press **briefly** to confirm.

Press **briefly** to exit the menu item without making changes.

Loop Recording

Here you can set the duration for continuous recording.

Press **briefly** to select between One Min, Five Min, Ten Min and Off.

Press **briefly** to confirm.

Press **briefly** to exit the menu item without making changes.

Frequency (Video)

Press **briefly** to switch between 50Hz and 60Hz.

Press **briefly** to confirm.

Press **briefly** to exit the menu item without making changes.

Default Setting

Here you can reset all settings to the default settings. Data on the microSD card is not affected.

Press **briefly** to select **OK** or **Cancel**. Warning: If you confirm with **OK** in step 2, there is no further prompt - the camera settings will be reset immediately.

Press **briefly** to confirm.

Press **briefly** to exit the menu item without making changes.

Version

Here you can check the current software version.

Tracking label

Here you can set whether the date and time are displayed on the photo.

Press **briefly** to switch between On or Off.

Press **briefly** to confirm.

Press **briefly** to exit the menu item without making changes.

Connecting to the computer ...

... **with** a microSD card inserted in the camera

1. Connect the powered-on camera to the computer using the supplied USB cable.

The memory card icon appears on the display.

2. Open the newly displayed folder for your camera.

3. You can copy MP3 files from your computer into the camera's MP3 folder.

4. You can copy photos or videos from the camera's **PHOTO** and **VIDEO** folders to your computer.

... **without** a microSD card inserted in the camera

The webcam icon appears on the display.

You can now use the camera as a webcam.

Problems / solutions

Camera not charging or won't switch on:

- Is the rechargeable battery flat? Charge the rechargeable battery for at least 30 minutes before switching on the camera.
- Check whether the mains adapter is suitable: **5V 2A**. The rechargeable battery cannot be charged with other mains adapters.
- Checking the charging indicator light: if it lights up red, the battery is charging; when it goes out, the battery is fully charged.
- When the rechargeable battery is fully charged ... remove the microSD card and then reinsert it.
- ... slide the **RESET** switch down, then back up.

The printouts are blank or streaky

- Has the paper been inserted the wrong way round?

- Is the paper tray cover properly closed, and is the paper feeding straight during printing?
- Has the print head come loose in the paper tray?
- Is the microSD card full? The camera requires free storage space to print. Delete any unneeded files to free up space.

The printout appears blurry or out of focus.

- Check the selected print density (Settings > Printing). Select a higher print density to achieve a sharper image.

Paper jam/paper not feeding correctly from the tray


- Remove the paper roll from the tray and wind the paper tightly around the roll. Reinsert it correctly. When closing the tray, make sure a small amount of paper is sticking out.

- Use a new paper roll.
- Colour distortion on the display
- Slide the **RESET** switch down, then back up.

If the camera becomes unresponsive

1. Perform a reset by sliding the

RESET switch ...

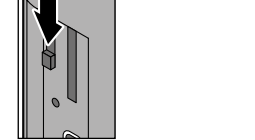

... then back up. "Up" is the switch's normal position during operation.



2. Next, switch on the camera by pressing and holding the **On** button.

Cleaning

- Blow dust off the lens or display using a small air blower designed for cameras. Alternatively, use a soft brush.
- If necessary, you can gently wipe the casing with a damp cloth.

Disposal

The product, its packaging and the supplied batteries have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment. Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.

Devices, single-use batteries and rechargeable batteries marked with this symbol

must not be disposed of along with household waste!

You are legally obliged to dispose of old devices separately from household waste. Electronic devices contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points

where old devices can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

Warning! This device contains a rechargeable battery that, for safety reasons, is firmly built into the device and cannot be removed without destroying the casing. Improper disassembly leads to safety hazards. For this reason, take the device intact to a collection point where the device and batteries will be disposed of properly.

Model:	721 350
Weight:	193 g
Dimensions:	102.5 * 59.1 * 79.4 mm
Rechargeable battery:	Lithium-ion 3.7 V 2000 mAh
Watt-hour rating:	7.4 Wh (tested as per UN 38.3)
Manufacturer:	Shenzhen Shengbang Power Source Technology Co., Ltd. Room 413, Building 19, Huayuan New Village, Longyuan Community, Longhua Street, Longhua District, Shenzhen, CHINA 535225562@qq.com
Email:	535225562@qq.com
Manufacturing date:	06/2025
Input:	5 V/2 A USB
Charging time:	approx. 2.5 hours
Operating time with fully charged battery:	approx. 3.5 minutes (continuous recording; may vary depending on environmental conditions - battery drains faster in cold temperatures)
Sensor:	1.3 MP CMOS
Photo resolution:	12M (4000 x 3000), 10M (3648 x 2736), 8M (3264 x 2448), 5M (2592 x 1944), 3M (2048 x 1536)
Video resolution:	1080P@30fps (HD), 720P@30fps

Technical specifications

Lens:	fixed focus
Field of view:	100°
Aperture:	F2.8 / f = 3.56 mm
Digital zoom:	16x
Display:	LCD
Size:	2.4" IPS
Resolution:	480x320
Ambient temperature:	+10 to +40 °C
Ambient humidity:	20% to 85%
Card slot for:	microSD up to 32 GB (8 GB included)
Photo format:	JPG
Video format:	AVI
Music format:	MP3
Connections:	microSD card slot, USB-C port
Compatible with:	Windows XP / Vista / 7 / 8 / 8.1 / 10 OS X
Printer:	thermal printer
Print quality:	black-and-white
Thermal paper roll:	25*56 mm (Ø*B)

