



Rechargeable LED Floor Lamp

(en) Instructions for use and warranty



Made exclusively for:

Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany



Safety warnings

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference.

If you give this product to another person, remember to also include these instructions.

The product is only intended for decoration in private homes and is not suitable for lighting whole rooms. The product has been designed for both indoor and outdoor use. The product has been designed for private use and is not suitable for commercial purposes.


- Keep the packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!
- Children are not aware of the risks involved when handling electronic appliances incorrectly. Therefore, never allow children to use electronic appliances unsupervised.
- When the connection socket is closed or when the mains adapter is connected, the product is suitable for outdoor use and complies with protection type IP44. This means that the product is protected against contact with tools, wires and foreign objects with a diameter larger than 1 mm and splashes of water, such as rain. However, you should protect it from heavy rain and streams of water. Never use the product under

water; this would cause an immediate short circuit and poses the risk of electric shock.

- Only connect the product to a properly installed power socket with a mains voltage that complies with the technical specifications of the mains adapter.
- Do not connect the product to a dimmable power socket.
- Do not use an extension cable.
- Always plug the connector into the connection socket and connect the connection cable to the mains adapter before you plug the mains adapter into the power socket. Always unplug the mains adapter from the power socket before pulling the connector out of the connection socket or removing the connection cable from the mains adapter.
- The product must not be electrically connected to fairy lights or anything similar.
- Remove the mains adapter from the power socket ...
 - ... if malfunctions occur during use,
 - ... during thunderstorms,
 - ... before cleaning the product.
- To unplug, always pull on the mains adapter, not on the connection cable. Ensure that the power socket used is easily accessible so that you can quickly disconnect the mains adapter whenever necessary.

- The product must only be operated using the connection cable and mains adapter provided.
- The connection cable must not be kinked or crushed. Keep the connection cable away from hot surfaces and sharp edges.
- The rechargeable battery is firmly built into the product and cannot and must not be replaced or removed. There is a risk of explosion if the battery is replaced incorrectly. It should be replaced only with an identical rechargeable battery or one of equivalent type. If the rechargeable battery is defective, contact a specialist workshop.
- Warning! Lithium batteries can explode ...
 - ... if they are exposed to extreme heat, such as sun-light, fire, etc., or extremely low air pressure during use, storage or transport. Use the product only in moderate climatic conditions.
 - ... if they are taken apart, thrown into fire or short-circuited. Do not place any naked flames such as burning candles near the product. The product must be kept away from candles and other naked flames at all times to prevent the spread of fire.
- Do not modify and/or deform/heat/dismantle rechargeable batteries and do not immerse them in water.
- Do not use the product if the product itself, the connection cable or the mains adapter show any visible signs of damage.
- Do not make any modifications to the product. Have repairs to the product carried out only by a specialist workshop or our customer care service.
- Route the connection cable in such a way that it cannot be tripped over. The cable is not suitable/approved for burying underground.
- Do not position the product in hollows or depressions where puddles might form.
- The built-in LEDs cannot and must not be replaced.
- The rechargeable battery is firmly built into the lampshade and cannot be replaced. You must not attempt to replace it yourself. If the rechargeable battery or the lampshade itself becomes damaged, get in touch with our customer care service or dispose of the product.
- Do not use any caustic, aggressive or abrasive products for cleaning.
- The product is suitable for outdoor use from a minimum temperature of approx. -10 °C. In temperatures colder than this, keep the product indoors; it may otherwise become damaged.
- The product is not made to withstand strong winds, storms, etc.! Dismantle the product in good time or stow it in a sheltered location if strong winds or storms are forecast.


Setting up and connecting to the mains

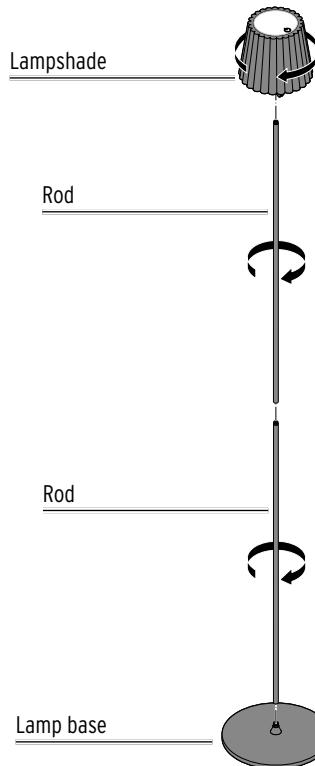

1. Assemble the lamp as illustrated above.
2. Insert one end of the connection cable into the connection socket on the bottom of the lampshade and the other end into the connection socket on the mains adapter. Screw the protective cap tight.

▷ Insert the mains adapter into a power socket.

Switching on and off

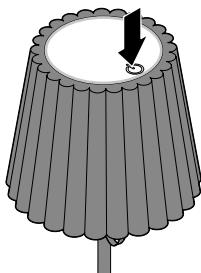

▷ To switch on the LEDs permanently, briefly press the On/Off switch once.

The LEDs will light up at the light intensity last set before the lamp was switched off.

▷ To switch on the LEDs with timer function, briefly press the On/Off switch twice. The LEDs flash twice before they light up permanently.

Timer function: The LEDs are switched on and off as follows:

on: 4 hours,
off: 20 hours,
on: 4 hours and so on.

▷ To change the light intensity, press and hold the On/Off switch.

The light intensity will change as follows:
100% > 50% > 25% > 100% > 50% > 25%, etc.

▷ To switch the LEDs off, briefly press the On/Off switch 3 times.

NOTICE - material damage

Always cover the connection socket with the protective cap after charging or whenever you remove the connection socket from the lamp to ensure that the socket is protected from moisture.



To preserve the rechargeable battery's full capacity for as long as possible, you should recharge the battery every 2 months, even if you do not use the lamp. The battery will best hold its charge at normal room temperature. The lower the temperature, the shorter the battery life. If the battery does not charge, remove the charging cable for a minute and then try again.

Cleaning

1. If necessary, disconnect the mains adapter and the connection cable.
2. Wipe down all parts of the lamp with a slightly damp sponge.

Charging the battery

i You can operate the lamp in battery mode or by connecting it directly to the mains power supply.

- The rechargeable battery comes in a half-charged state. This is to prevent damage to it. Charge the rechargeable battery prior to first use.

When empty, the battery takes approx. 4 hours to charge; when the battery is fully charged, the product can be operated for ...

... min. 4 hours (100% light intensity)
... min. 8 hours (50% light intensity)
... min. 16 hours (25% light intensity).

- You can turn the lamp on while it is charging. However, it will take significantly longer for the rechargeable battery to be fully charged.
- During charging, the charging indicator light is red; once the battery is fully charged, the light turns green.

Technical specifications

Model:

black: 730 914
sage: 730 913

Mains adapter

Input: 220-240 V ~ 50/60 Hz
Output: 5 V ____ max. 10 W 2 A
(the ____ symbol indicates direct current)

Protection class: II

IP code: IP44

Lamp

Rechargeable

battery: 1x lithium-ion rechargeable battery, 2500 mAh Watt-hour rating: 9.25 Wh (tested as per UN 38.3)

Input: DC 5 V/2 A

Output: 4.2 V/350 mA

Charging time: approx. 4 hours

Operating time: min. 4 hours
(100% light intensity)
min. 8 hours
(50% light intensity)
min. 16 hours
(25% light intensity)

Bulb: 12x 0.2 W light emitting
diodes (LEDs)
3x 0.2 W light emitting
diodes (LEDs)

IP code: IP44

Ambient

temperature: -10 to +40 °C

Disposal

The product, its packaging and the built-in rechargeable battery have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and light-weight packaging.



Appliances, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with normal household waste!

You are legally obliged to dispose of old appliances separately from household waste.

Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment.

Information about collection points where old appliances can be disposed of free of charge is available from your local authorities.

Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

Warning! This appliance contains a rechargeable battery that, for safety reasons, is firmly built into the appliance and cannot be removed without destroying the casing. Improper disassembly leads to safety hazards. For this reason, take the appliance intact to a collection point where the appliance and battery will be disposed of properly.

Warranty

Tchibo GmbH grants a **three-year warranty** from the date of purchase.

Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany

We will remedy all defects in workmanship or materials **within the warranty period**. In order for the warranty to be granted, all warranty claims must be accompanied by proof of purchase from Tchibo or from an authorised Tchibo distribution partner. This warranty is valid within the EU, Switzerland and Turkey.

The warranty does not cover worn parts, consumables, or damage resulting from improper use or inadequate descaling. Parts and consumables can be ordered from our customer care service. This warranty does not restrict **statutory warranty rights**. Statutory warranty rights can be asserted free of charge.

Service and repair

If, contrary to our expectations, a defect is found, please contact our customer care service. Our customer consultants will be happy to advise you on further procedure.

If you have any questions relating to product information, ordering accessories or servicing, please contact our customer care service. Please have the product number to hand in case of any queries.

Customer care service

Email: service@tchibo.de

Product number: **730 914** (black) + **730 913** (sage)
