 




[www.tchibo.de/instructions](http://www.tchibo.de/instructions) (Please enter the product number in the box labelled "Bedienungsanleitungssuche" and click on "Suchen".)

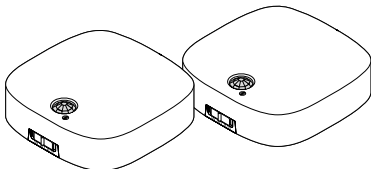

## Safety warnings

- The multifunctional LED lights are intended for use in dry indoor rooms as an auxiliary light and orientation aid when it is dark. They are only intended for decoration in private homes and are not suitable for lighting whole rooms.
- Keep the packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!
- Swallowing batteries can be fatal. If a battery is swallowed, it can cause severe internal chemical burns and even death within 2 hours. Therefore, keep both new and old batteries, and the product itself, out of the reach of children. If you think that a battery has been swallowed or has got into the body in any other way, seek medical advice immediately.
- Batteries must not be taken apart, thrown into fire or short-circuited. In addition, single-use batteries must not be charged.
- Protect batteries from excessive heat. Remove the batteries from the product when they are flat or if you do not intend to use the product for a longer period of time. This will prevent damage caused by leakage.
- Always replace all the batteries at the same time. Do not use different types or brands of batteries, or batteries with different capacities. Ensure that the polarity (+/-) is correct when inserting the batteries.
- If necessary, clean the battery and device contacts before inserting the batteries. Risk of overheating!
- Do not immerse the LED lights in water or any other liquids.
- Do not look directly at the LED lights.
- Do not stick the LED lights to sensitive surfaces that would be prone to damage when you later remove the lights.
- Do not stick anything to, cover or paint the motion sensor.

- Due to the extremely long service life of the LEDs, it is not necessary to replace them. They cannot and must not be replaced.
- To ensure that the tesa® adhesive strips adhere well, the surface must be sufficiently firm, clean, dry, and free of dust and grease.

## Technical specifications

Model:	718 153
Single-use batteries:	2x 3 LR03 (AAA)/1.5 V (Zn/MnO <sub>2</sub> )
Light duration (with one set of batteries):	approx. 60 hours
Automatic switch-off after:	approx. 30 seconds
Coverage angle of the sensor:	approx. 120°
Range of the sensor:	3 m
Made exclusively for:	Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany



## Disposal

The product, its packaging and the supplied batteries have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point which sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



**Devices, single-use batteries and rechargeable batteries** marked with this symbol must not be disposed of along with household waste! You are legally obliged to dispose of old devices separately from household waste. Electronic devices

contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old devices can be disposed of free of charge is available from your local authorities.

Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

### Information about the supplied batteries

#### Manufacturer:

New Leader Battery Industry Ltd., No. 10,  
Chuangye Road, Industrial Park, Dinghu  
District, Zhaoqing, PEOPLE'S REPUBLIC OF  
CHINA, [www.newleader.com.hk](http://www.newleader.com.hk)

 
**Email:** [sz@newleader.cn](mailto:sz@newleader.cn)

**Model:** NEW LEADER LR03 AAA 1.5V


**Manufacturing date:** 04/2025

**Made in:** China


## Inserting the batteries

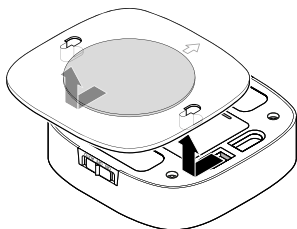

 1. Remove the wall bracket on the back by pushing it to the side (as illustrated).

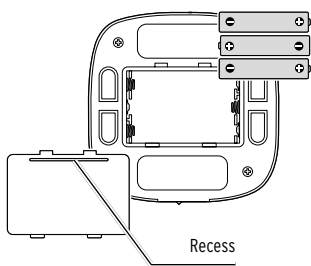

 2. Use the recess in the battery compartment cover to gently pry the cover up and off.
3. Insert the batteries into the battery compartment as illustrated. Ensure correct polarity (+/-).
4. Replace the battery compartment cover correctly.

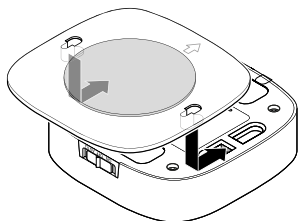

5. Reaffix the wall bracket by placing it onto the back of the light and sliding it sideways (as illustrated). You must feel it click into place.


## Affixing the light




 
Keep in mind that the adhesive pads may be difficult to remove later on. The removal process may cause paint, wallpaper, etc. to come away from the wall and the pads may leave stains on the surfaces they were stuck to. Where wood or other solid surfaces are concerned, any adhesive residue left can be removed with thinners (benzine or similar). Also observe the manufacturer's instructions when using thinners, and always test them beforehand on an inconspicuous area of the surface in question.



1. Remove the protective film from the adhesive pad. Position the pad centrally and press it firmly onto the back of the wall bracket.

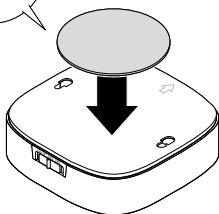

  2. Remove the protective film from the back of the adhesive pad.

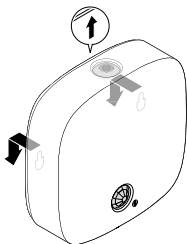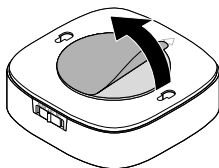


3. Press the light firmly onto the desired location.

When mounting the light on the wall, make sure that the **arrow** on the wall bracket is pointing **upwards**.

The light can be pulled up and off the bracket and pushed down and back on.

## Use

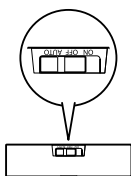 


**ON** Slide the switch to **ON** to switch the light on continuously.

**OFF** Slide the switch to **OFF** to switch the light off.

**AUTO** Slide the switch to **AUTO** to use the motion sensor.

 If someone enters the motion sensor's range at dusk or in the dark, the light will switch on and then automatically switch off again after approx. 30 seconds.

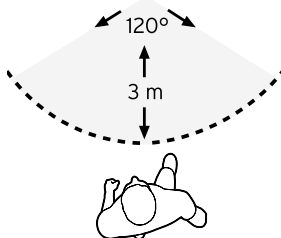

**Product number: 718 153**