


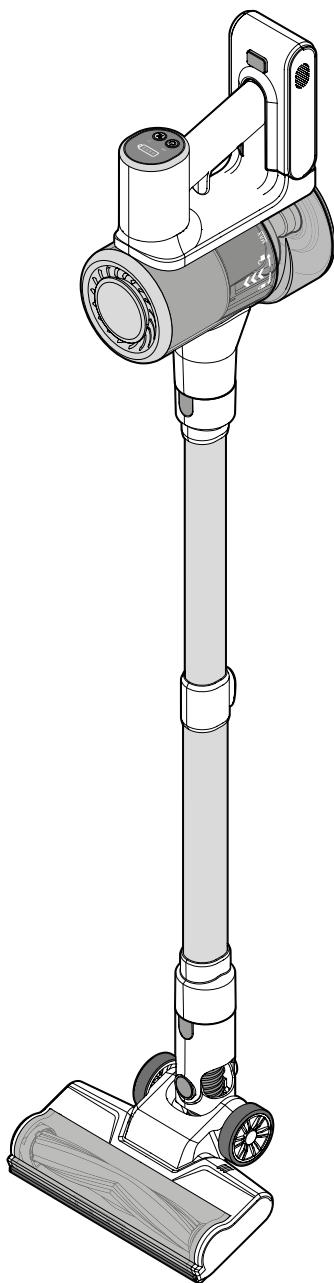

Cordless Vacuum Cleaner



en Instructions for use and warranty

Dear Customer

Your new cordless vacuum cleaner is equipped with a high-performance motor. It is the ideal tool whenever you need to do some interim cleaning. The suction power can be adjusted in three stages. The brush/crevice nozzle is suitable for hard-to-reach areas, such as spaces in upholstery. The brush itself is gentle on sensitive surfaces.

We hope you enjoy using your new vacuum cleaner.

Your Tchibo Team



www.tchibo.de/instructions (Please enter the product number in the box labelled "Bedienungsanleitungssuche" and click on "Suchen".)

Contents

2	About these instructions	9	Use
3	Safety warnings	9	Switching the vacuum cleaner on and off
5	At a glance (contents)	9	Setting the suction power
6	Prior to first use	10	Cleaning the appliance
6	Removing protective films	10	Emptying the dust collector
	and packaging materials	10	Cleaning the brush roller of the floor head
6	Charging the battery	10	Cleaning the filters
7	Assembling the vacuum cleaner	12	Cleaning the housing of the handheld unit, suction pipe and nozzles
7	Direct connection to the handheld unit	13	Disposal
8	Connection to the handheld unit with the suction pipe as an extension	14	Technical specifications
8	Extending the telescopic tube	15	Problems / solutions
9	Mounting the wall bracket	16	Warranty
		16	Service and repair
		16	Customer care service

About these instructions

This product is equipped with safety features. Nevertheless, read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage.

Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.



This indicates additional information.

Safety warnings

Intended use

The product is suitable for picking up dust, dirt, crumbs, etc. in dry indoor locations.

It is not intended for cleaning larger areas or for extended use.

The product is designed for private use and is not suitable for commercial purposes.

Use the product under moderate climatic conditions only.

Danger to children and to people with limited ability to operate appliances

- This appliance may be used by children aged 8 and over, and by persons with reduced physical, sensory or mental capacities or a lack of sufficient experience and/or knowledge, provided they are supervised or have been trained in the safe use of the appliance and understand the potential dangers.

Cleaning and maintenance must not be carried out by children without supervision. Children must not be allowed to play with the appliance.

- Keep the packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

Danger due to electricity

- Never immerse the appliance or mains adapter in water or other liquids as this poses a risk of electric shock. Do not touch the mains adapter while your hands are wet.
- Only use the mains adapter provided so as not to damage the appliance.
- Only connect the appliance to a properly installed power socket with a mains voltage that complies with the technical specifications of the mains adapter.

- The power socket must be easily accessible so that you can disconnect the mains adapter quickly whenever necessary. Route the connection cable in such a way that it is not a tripping hazard.
- If the vacuum cleaner is not in use for a prolonged period of time (e.g. during a holiday), disconnect the mains adapter from the power socket.
- Do not operate the appliance if the appliance itself, its mains adapter or connection cable show any visible sign of damage or if the appliance has been dropped.
- Do not disassemble the appliance any more than instructed in this manual. Do not make any modifications to the product. Only have repairs to the appliance, mains adapter or connection cable carried out at a specialist workshop, or contact our customer care service.
- We have included material for mounting the wall mount (screws and dowels). The screws and dowels provided are suitable for standard, solid walls. Before mounting, enquire about which mounting materials are suitable for your wall. Make sure there are no pipes or cables running through where you intend to drill the holes!

When charging the battery, note the following:

- Do not put any containers filled with liquid, such as vases, within close proximity of the rechargeable battery or the handheld unit. The container could tip over and the liquid impair the electrical safety of the product. There is a risk of electric shock.

Warning - hazards resulting from misuse

- Never vacuum up the following:
 - glowing ash, cigarette butts, matchsticks, etc.: risk of fire!
 - toner for printers: risk of fire or explosion!

- caustic or toxic substances (e.g. acid, asbestos or asbestos dust, etc.): danger to health!
- liquids (in particular liquid carpet cleaners): danger of short circuit!
- pointed, hard or sharp objects (splinters of glass, nails etc.):
These can destroy the filter.
- plaster, cement, dust from drilling, construction waste, make-up, etc.: These substances may block the filter and thus damage the appliance.
- cables, wiring, etc.: Their insulating material can become damaged or become wound around the brush roller and damage the appliance.
- Do not use the appliance to vacuum up small objects.

Warning – risk of injury

- Never use the vacuum cleaner on people or animals. Always keep hair, body parts and items of clothing such as shoe laces and scarves well away from the suction opening. Never attempt to remove a blockage when the vacuum cleaner is in operation.
- Always turn the appliance off before removing and attaching the suction tube or one of the nozzles.
- The appliance must be disconnected from the mains during use, when being cleaned, and when having its dust collector removed.
- The appliance's metal parts will get very hot during use. Do not touch them.
- Take extra care when using the appliance on stairs.
- Put the appliance away after use so that it cannot be tripped over.
- Do not attempt to open the battery casing. If the rechargeable battery is faulty, dispose of the entire battery casing (using the proper waste disposal method).
- The cordless vacuum cleaner may only be used when fully assembled.

Danger of fire


- Do not use the appliance in the vicinity of highly flammable materials. Do not vacuum up highly flammable substances such as matches or ashes.

Material damage


- Do not overheat the vacuum cleaner. Switch it off after max. 40 minutes and let it cool to room temperature. Ensure that the airing vents on the appliance are not covered by dust or similar substances.
- If there is anything obstructing the rotating brush in the floor head, such as carpet tassels or a piece of fabric, switch the appliance off immediately and remove the obstructing object.
- The appliance must not be operated outdoors or in rooms with high humidity. Do not store it in rooms exposed to moisture such as cellars or garages.
- Do not insert any objects into the openings on the appliance.
- Always use the vacuum cleaner with the filters inserted.
- Only use original accessories.
- Do not use caustic or abrasive agents or hard brushes, etc. for cleaning.
- Protect the appliance from knocks, falls, dust, moisture, direct sunlight and extreme temperatures. Protect the rechargeable battery in particular from excessive heat.

At a glance (contents)


Handheld unit

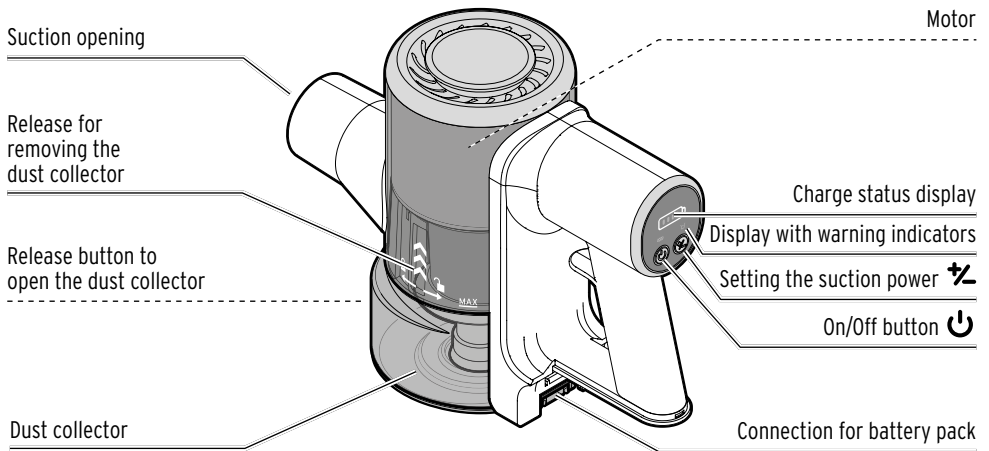


Floor head

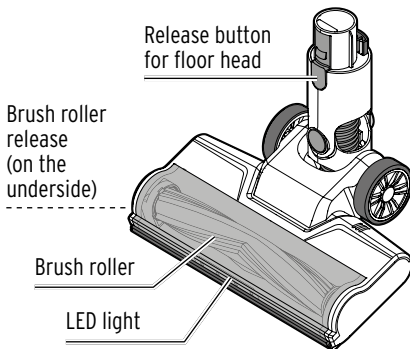


Rechargeable battery

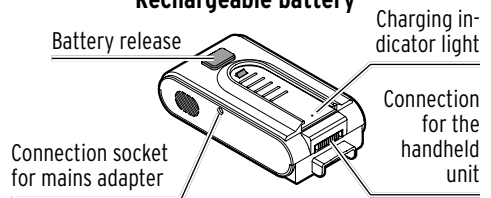


Brush/crevice nozzle

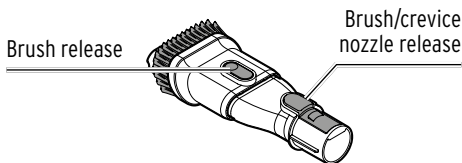

Wall bracket

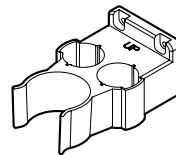

Suction tube

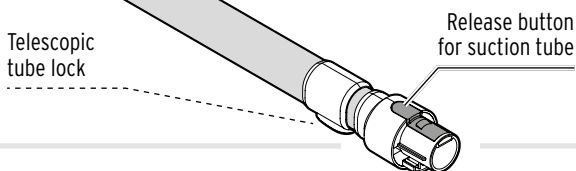

Other accessories (not illustrated):

- Mains adapter with connection cable
- Mounting material for wall bracket

Prior to first use

Removing protective films and packaging materials

 
1. Carefully remove all the parts from the packaging.
2. Peel off all the protective film and remove all the packaging material.


Charging the battery


The rechargeable battery is not fully charged upon purchase. To reach the battery's maximal charging capacity, charge the appliance fully before using it for the first time.

The maximum charging time is approx. 5 hours.


When its battery is fully charged, the cordless vacuum cleaner has an operating time of: approx. 40 minutes (at low suction power), approx. 25 minutes (at normal suction power) and approx. 15 minutes (at maximum suction power).

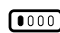 When the battery's capacity is nearly exhausted, the leftmost indicator light in the battery symbol flashes red.


 To preserve the rechargeable battery's full capacity for as long as possible, you should recharge the battery every 3 months, even if you do not use the vacuum cleaner. The battery will best hold its charge at normal room temperature. The lower the temperature, the shorter the operating time.

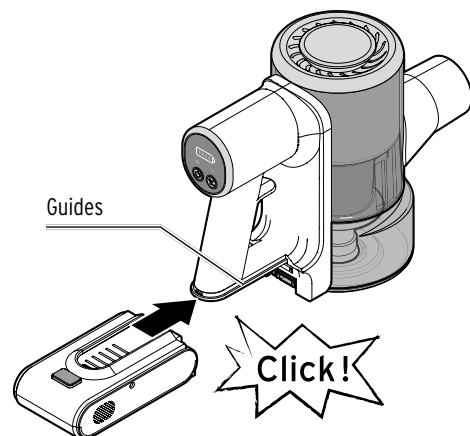



1. Slide the battery onto the guides as shown. Press it onto the connection on the handheld unit as far as it will go until you hear and feel it click into place.

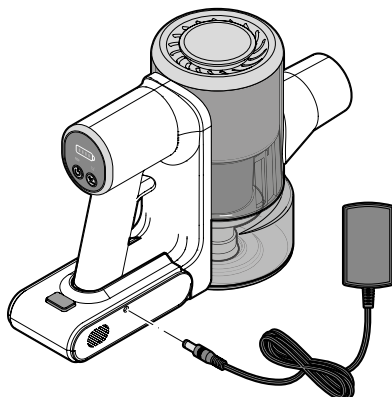

 2. Connect the mains adapter to the battery.
3. Insert the mains adapter into a power socket.

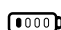 25%

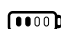  50%

 75%

 100%

During the charging process, the indicator lights on the charging status display show the current capacity of the vacuum cleaner.

The indicator light is lit up continuously blue

- fully charged

The indicator light is flashing blue - charging


The vacuum cleaner is fully charged when all four indicator lights light up continuously blue.

4. Charge the battery fully.
5. Then unplug the mains adapter from the power socket.

Assembling the vacuum cleaner


Charging the battery separately

You can also remove the battery for charging:

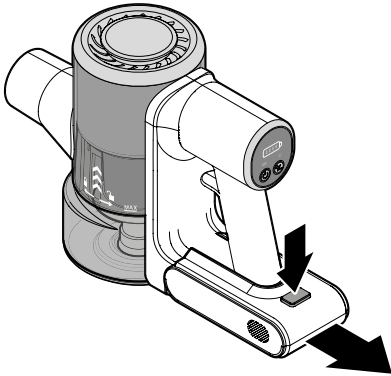

1. Press the release button for the battery and pull off the battery.


Charging indicator light

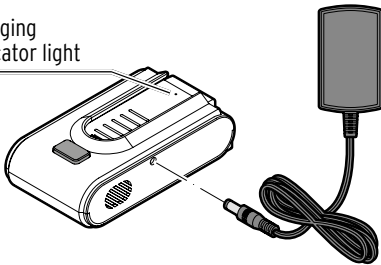


2. Connect the mains adapter to the battery.
 3. Insert the mains adapter into a power socket.
- The charging indicator light flashes red while the battery is charging. Once the battery is fully charged, the charging indicator light will light up continuously in green.
4. Charge the battery fully.
 5. Then unplug the mains adapter from the power socket.

Direct connection to the handheld unit

Floor head

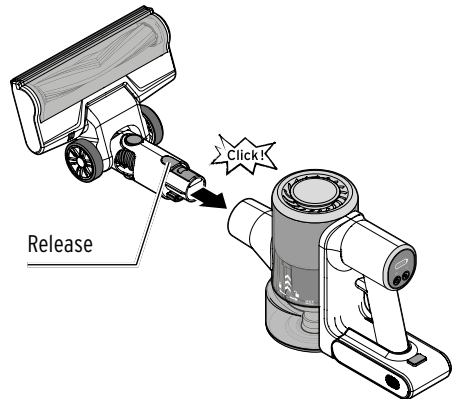

Brush/crevice nozzle

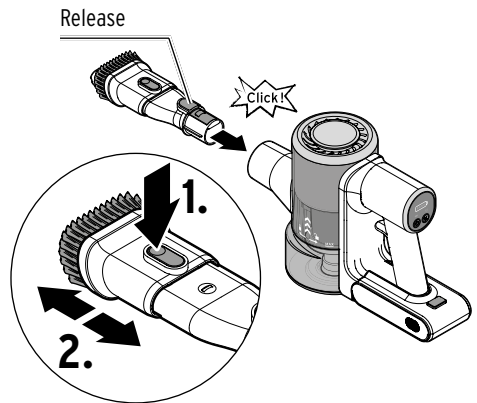


The brush on the retractable crevice nozzle can be pushed either forwards or backwards as required.

- ▷ To separate the parts, press the respective release button and pull off the nozzle.


Connection to the handheld unit with the suction pipe as an extension

Floor head

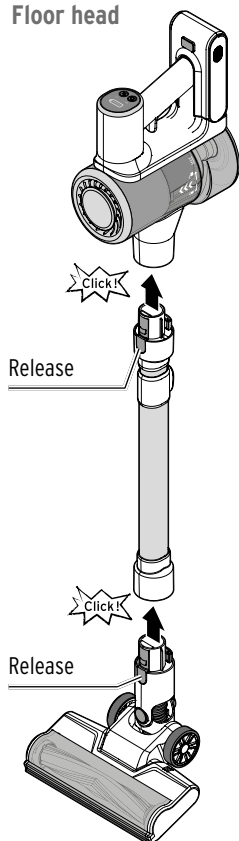

The floor head with its LED light gently cleans hard floors and carpets. The LED light enables dirt to be localised more effectively.


Brush/ crevice nozzle

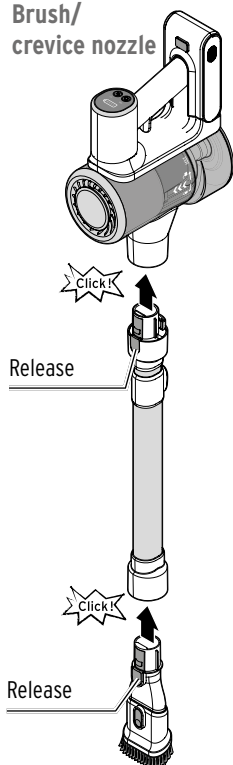

The retractable crevice nozzle is ideal for hard-to-reach, sensitive areas such as the gaps between cushions.

The brush is suitable for use on upholstery and other sensitive surfaces.

Extending the telescopic tube

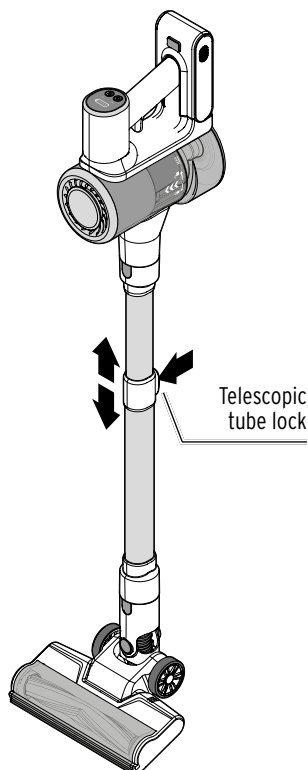


Press the lock on the telescopic tube and pull it out to the required length.

While you are pulling out the tube, release the locking mechanism. The telescopic tube engages audibly.


- ▷ To separate the parts, press the respective release button and pull off the nozzle or tube.

Mounting the wall bracket

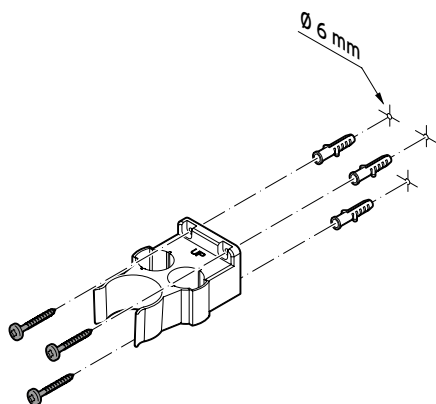

1. Attach the wall bracket to the wall as shown using the enclosed screws and plugs.

i Use the wall bracket as a template to mark the drill holes.

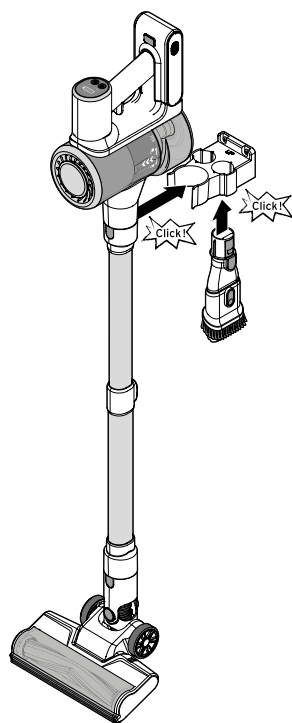


2. Place the cordless vacuum cleaner and the brush/crevice nozzle in the wall bracket for storage as shown.


i If you do not wish to use the vacuum cleaner for an extended period of time, store it in a cool, dry location.

Use

Switching the vacuum cleaner on and off

- ▷ Press the on/off button  to switch the cordless vacuum cleaner on or off.

Setting the suction power

- ▷ Press the  button repeatedly until you have set the desired suction power.

You can select between low, medium and high suction power.


The charge status display shows the remaining battery capacity.

Cleaning the appliance

Emptying the dust collector

When the dust collector is filled to the **MAX** mark, it must be emptied.

1. If necessary, remove the suction pipe or the respective nozzle from the handheld unit.

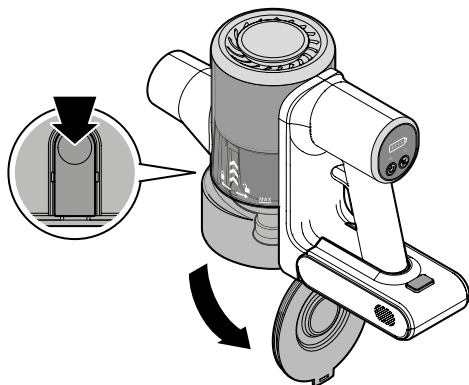


2. Hold the dust collector over a waste bin and press the release button to open the dust collector.

The lid will open and the dust will fall out.

3. Close the lid again. You must hear and feel it click into place.

Cleaning the brush roller of the floor head

- ▷ Remove the floor head from the vacuum cleaner.

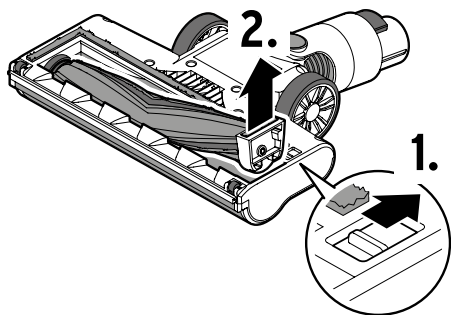


1. Push the release to the side.

2. Lift one side of the brush roller and pull it out of the holder.

3. Remove the dirt from the brush roller by hand.


4. Wipe the inlet of the brush roller using a slightly damp, lint-free cloth.

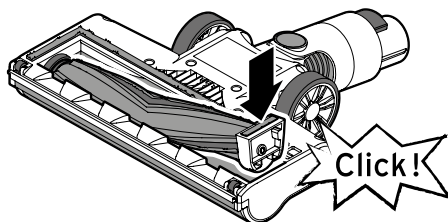


5. Replace the brush roller properly and press it all the way down. You must hear and feel it click into place.


Cleaning the filters


If the suction power of the vacuum cleaner starts to diminish, you will need to clean the filters in the dust collector.

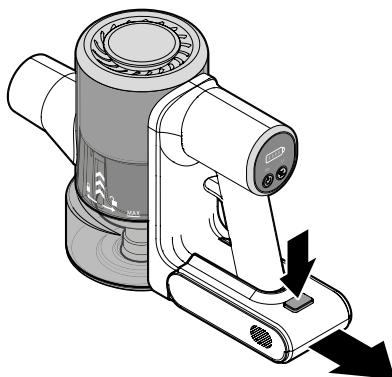


1. Press the release button for the battery and pull off the battery.

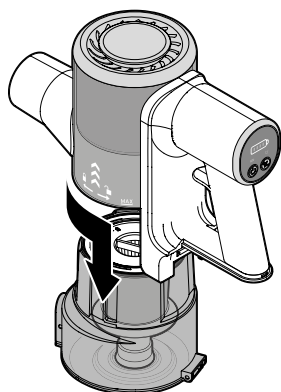


2. To remove the dust collector, grasp it at the bottom and turn it anti-clockwise towards the  symbol.

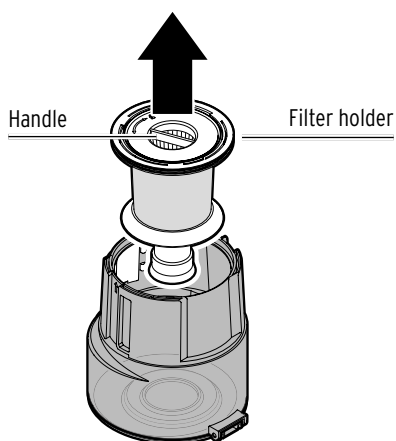


3. Grasp the handle on the filter holder and pull it out of the dust collector **in a straight line**.

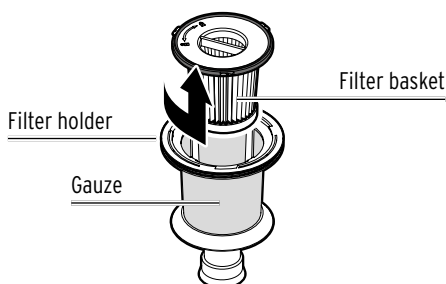


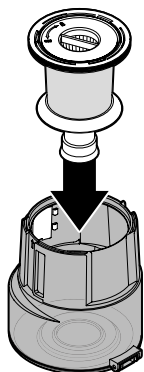
4. To remove the filter basket, grasp it by the handle and turn it anti-clockwise towards the  symbol.
5. Tap on the filter basket and filter holder. You can also brush out the filter holder or wipe it down with a damp cloth. However, be careful when doing this so that you do not damage the gauze.
6. Allow all the parts to dry completely before reassembling. Do not place the parts on a radiator or any other kind of heater to dry them and do not use a hairdryer.

If you are no longer able to clean the filter to a satisfactory level, or if the suction is decreasing due to the filter, you can order a new filter from our customer care service (see chapter "Customer care service").


For hygiene reasons, the filter should be replaced at regular intervals.

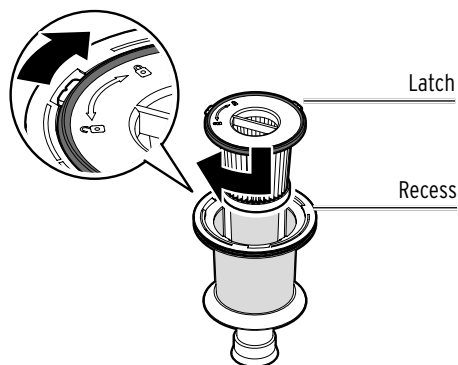


7. Replace the filter basket in the filter holder. **The latches on the edge of the filter basket must locate in the recesses on the edge of the filter holder.** Twist the filter basket clockwise towards the  symbol to lock it in place.



8. Replace the filter holder in the dust collector as far as it will go.

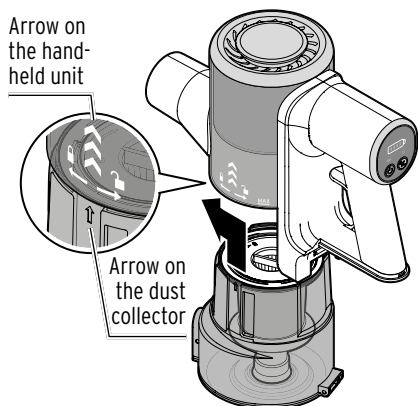

9. Slide the dust collector into the handheld unit. The arrow on the dust collector must align with the arrow on the handheld unit. Turn the dust collector clockwise towards the  symbol to fix it in place.

Cleaning the housing of the handheld unit, suction pipe and nozzles

- ▷ Clean the housing of the handheld unit, the suction pipe, the floor head and the brush/crevice nozzle with a slightly damp, lint-free cloth.
- ▷ Remove any dirt (dust bunnies, etc.) that has collected on the brush/crevice nozzle by hand.
- ▷ Clean the brush roller in the floor head as described in the section "Cleaning the brush roller of the floor head".

Disposal

The product, its packaging and the supplied battery have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment. Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.

 
 



Appliances, single-use batteries and rechargeable batteries marked with

this symbol must not be disposed of



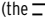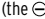

along with household waste! You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

Technical specifications

Model:	690 888
Mains adapter:	
Model:	CZH013265050EUWP
Manufacturer:	Shenzhen CHANZEHO Technology Co., Limited, 9144030300695576136X CHANZEHO Technology Park, 114-1 Longxing North Road, Longtian Community, Longtian street, Pingshan District, Shenzhen, Guangdong
Input:	100 - 240 V ~ 50/60 Hz
Output:	26.5 V 0.5 A 13.25 W (the  symbol stands for direct current) (the  symbol shows the polarity of the plug)
Average efficiency	
in operation:	86.69% (115 V), 86.42% (230 V)
on stand-by (10%):	84.22% (115 V), 79.37% (230 V)
No-load power consumption:	0.063 W (100 V), 0.094 W (230 V)
Protection class:	II 
IP code:	IP20
Rechargeable battery:	
Type:	rechargeable lithium-ion battery
Model:	DSV801B
Voltage, capacity:	22.2 V, 2200 mAh
Battery element:	6 x 3.7 V, 2200 mAh
Charging time:	approx. 5 hours
Watt-hour rating:	48.84 Wh (tested as per UN 38.3)
Cordless vacuum cleaner:	
Suction power:	max. 44.7 W
Suction:	max. 15.71 kPa
Operating time:	approx. 15 min. at highest suction power approx. 25 min. at medium suction power approx. 40 min. at low suction power
Sound level:	approx. 85 dBA
Storage capacity of dust collector:	approx. 600 ml
Ambient temperature:	+10 to +40 °C
Made exclusively for:	Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany



Problems / solutions

Not working.	<p>Is the battery flat?</p> <p>▷ Charge the battery.</p>
Poor suction.	<p>Is the dust collector full?</p> <p>▷ Empty the dust collector.</p> <p>Are the filters very dirty?</p> <p>▷ Clean the filters.</p> <p>Is the battery sufficiently charged?</p> <p>▷ Charge the battery.</p> <p>Is the suction opening blocked?</p> <p>▷ Switch the appliance off and remove the obstructing object.</p>
Dust leakage.	<p>Is the dust collector full?</p> <p>▷ Empty the dust collector.</p> <p>Has the dust collector been inserted correctly?</p> <p>▷ Insert the dust collector correctly.</p> <p>Is the filter holder damaged?</p> <p>▷ Replace it with a new one.</p> <p>Has no air vent filter been fitted?</p> <p>▷ Fit the air vent filter.</p>
 appears on the display and the appliance stops.	<p>The brush roller is blocked.</p> <p>▷ Switch the appliance off and remove the obstructing object. Remove the brush roller if necessary, as described in "Cleaning the appliance".</p>
The appliance stops and  flashes 5x on the display.	<p>The dust collector is full.</p> <p>▷ Empty the dust collector. Clean it and, if necessary to do so, remove it from the appliance as described in "Cleaning the appliance - Cleaning the filters".</p> <p>The suction opening is obstructed.</p> <p>▷ Switch the appliance off and clean the suction opening. To do so, remove all attachments.</p>
During the charging process, the leftmost and rightmost indicator lights in the battery symbol  are lit up continuously blue.	<p>You are using the wrong mains adapter.</p> <p>▷ Use only the supplied mains adapter or an adapter with the same "Technical Specifications".</p>
The indicator light in the battery symbol  flashes blue 5x.	<p>Short circuit in the brush roller.</p> <p>▷ Switch off the appliance and contact customer care service.</p>

Warranty

Tchibo GmbH grants a **three-year warranty** from the date of purchase.

Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany

We will remedy all defects in workmanship or materials **within the warranty period**. In order for the warranty to be granted, all warranty claims must be accompanied by proof of purchase from Tchibo or from an authorised Tchibo distribution partner. This warranty is valid within the EU, Switzerland and Turkey.

The warranty does not cover worn parts, consumables, or damage resulting from improper use or inadequate descaling. Parts and consumables can be ordered from our customer care service.

This warranty does not restrict **statutory warranty rights**. Statutory warranty rights can be asserted free of charge.

Service and repair

If, contrary to our expectations, a defect is found, please contact our customer care service. Our customer consultants will be happy to advise you on further procedure.

If you have any questions relating to product information, ordering accessories or servicing, please contact our customer care service. Please have the product number to hand in case of any queries.

Customer care service

Email: **service@tchibo.de**

Product number: **690 888**
