

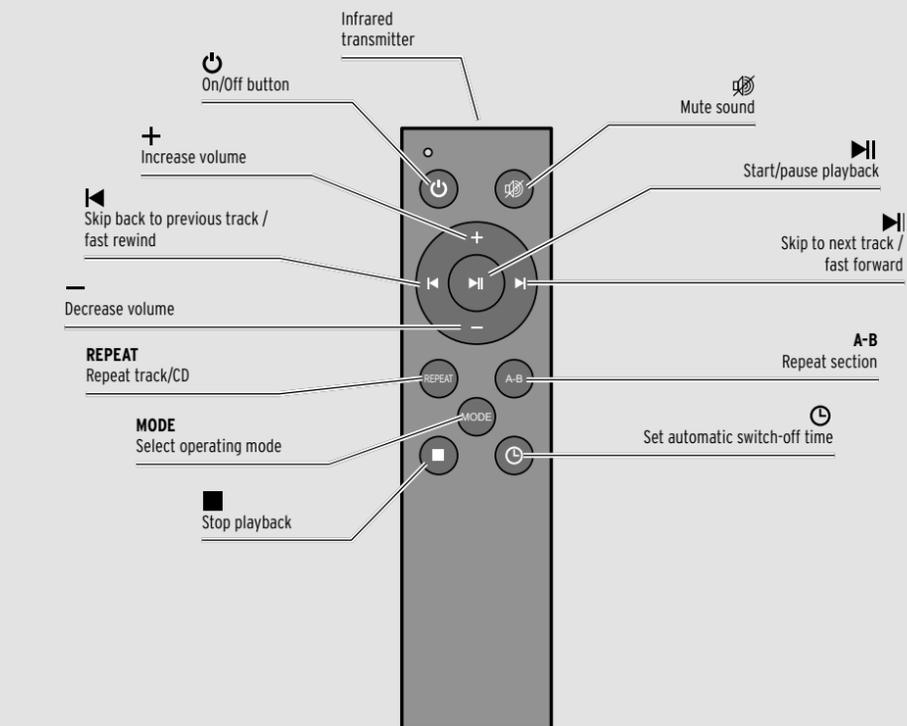


# CD player/Bluetooth® speaker

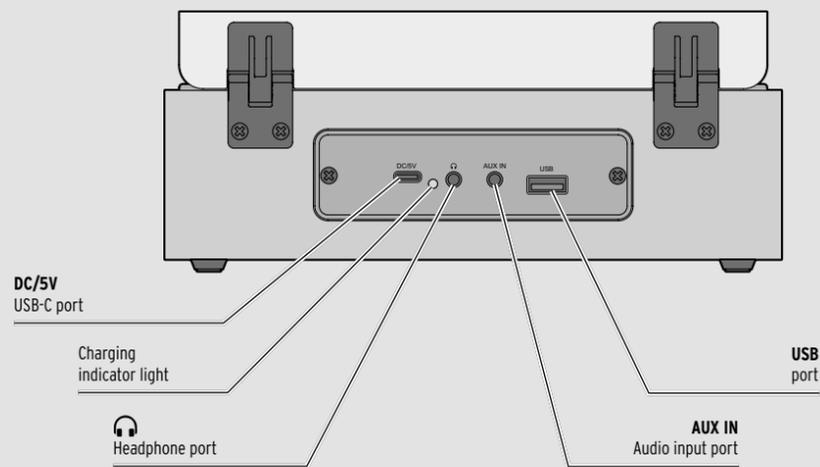

en Instructions for use

Additional contents  
(not shown):  
USB-C charging cable

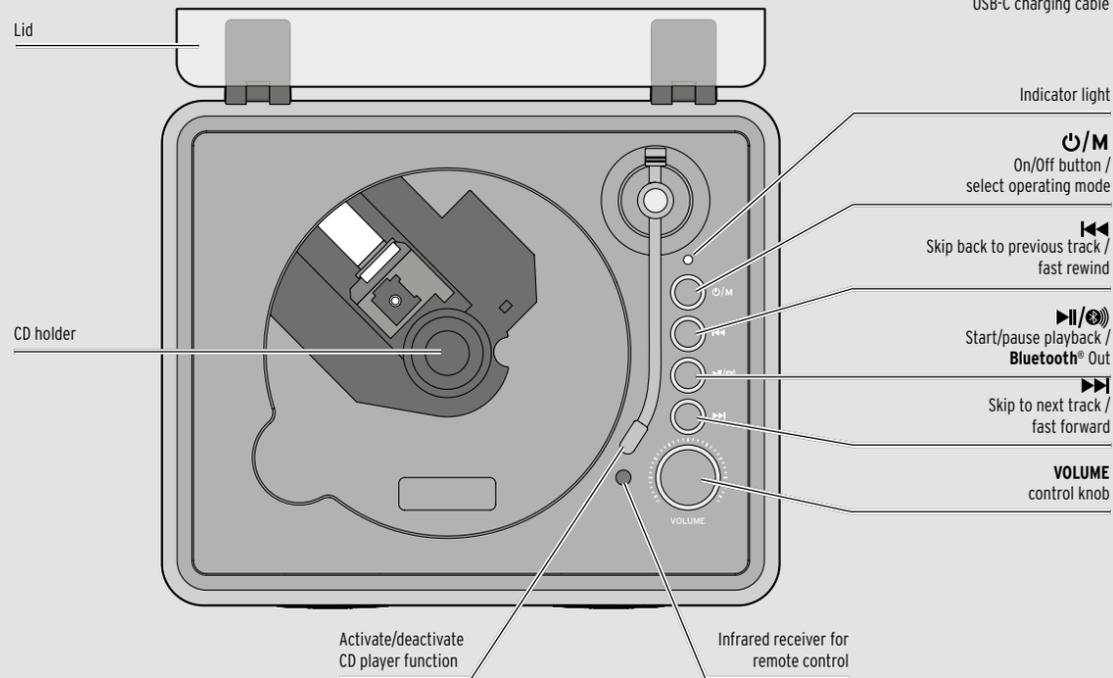

## For your safety ⚠

This product is equipped with safety features. Nevertheless, read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

### Intended use

The CD player/Bluetooth® speaker is intended for playing CDs and also functions as an audio output device via Bluetooth® for external mobile playback devices such as smartphones, tablets, laptops, etc. Additional input ports also allow you to play music from other devices that do not have Bluetooth® (e.g. MP3 players) or from USB sticks.

The product is designed for private use and is not suitable for commercial purposes.

Only use the product in moderate climatic conditions.

### Danger to children and people with limited ability to operate devices

- This product must not be used by children or by people who do not have the physical, sensory or mental capabilities, or the requisite knowledge and/or experience, to use it safely. Children must be supervised to ensure that they do not play with the device.
- Keep the device out of the reach of children.
- Keep the packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

### Danger due to electricity

- Do not use the speaker if it shows visible signs of damage or if it has previously been dropped or fallen from a height.
- Do not make any modifications to the product. Have repairs carried out only by a specialist workshop or as arranged by the customer care service. Improper repairs can result in considerable danger to the user.
- When connecting the device to the mains power for charging, observe the following:
  - Only charge the product in dry indoor rooms.
  - Do not put any receptacles containing liquid, such as vases, on top of or within close proximity of the product, as the receptacle may tip over and the liquid may compromise electrical safety. There is a risk of electric shock.
  - To charge the product, use only the provided USB-C charging cable and a suitable USB mains adapter (not included) that complies with the "Technical specifications".
  - Do not use a faulty USB mains adapter and do not attempt to repair a faulty USB mains adapter.
- To fully disconnect the device from the power supply, unplug the USB charging cable from the mains adapter, and remove the mains adapter from the wall socket.
- Do not open or remove any part of the housing under any circumstances. Do not insert any objects into the openings in the housing.

### Danger due to loud music

- Listening to music at a high volume on a regular basis can lead to hearing damage. Always set the volume to a low setting before starting to play music. Then you can set the volume higher if you wish.

### Warning - risk of eye injury

- The built-in laser beam can be harmful to the eyes if looked at directly. Therefore, do not attempt to disassemble the housing. Only switch on the CD player when a disc is in the tray, as the laser beam is activated when the device is powered on.

### Danger of fire/burns

- You cannot and must not attempt to replace or remove the built-in rechargeable battery yourself. There is a risk of explosion if the batteries are changed incorrectly. Batteries should be replaced only with an identical battery or a battery of the same type. If the product is faulty or cannot be charged, contact a specialist workshop or the customer care service.
- Do not place any naked flames, such as burning candles, near the product. The product must be kept away from candles and other naked flames at all times to prevent the spread of fire.
- The product contains a lithium-ion rechargeable battery. This must not be taken apart, thrown into a fire or short-circuited.
- Do not modify and/or deform/heat/dismantle rechargeable batteries. Do not allow damaged rechargeable batteries to come into contact with water.
- Do not place the product in closed cupboards or shelves without adequate ventilation. The air circulation must not be impaired by newspapers, tablecloths, curtains, etc. covering the ventilation slots. The product must have at least 5 cm free on all sides.

### Material damage

- Place the product on a solid, level surface.
- Do not immerse the product or the USB-C charging cable in water or other liquids. Do not use or charge the product outdoors or in locations with high humidity.
- Taking the product from a cold place to a warm place may cause condensation to form inside the speaker. In this case, leave the speaker switched off for a few hours.
- Avoid storing, charging and using the product at extreme temperatures and in areas of extremely low air pressure (e.g. at high altitudes).
- Protect the product from intense heat (direct sunlight, heaters, etc.) as well as from dust and moisture.

- Do not drop the product or subject it to other forms of severe physical impact.
- Before switching on the product, ensure that the connected audio source is set to no more than a moderate volume level (typical household noise level) to avoid overloading and damaging the speaker.
- Avoid direct contact between the speaker and any magnetised ID cards, phone cards, credit cards, etc. as well as audio tapes, watches, etc. These items could become damaged by the built-in magnets in the speaker.
- Do not touch the lens inside the CD compartment, and do not attempt to clean it. This could damage the lens and may result in the device no longer working properly.
- Do not use any caustic, aggressive or abrasive products for cleaning.
- It cannot be fully ruled out that some varnishes, synthetic substances and furniture polishes may react adversely with the material of the speaker's non-slip feet and soften them. To avoid unwanted marks on furniture, place a non-slip mat underneath the speaker if necessary.

## Removing protective films and packaging materials

1. Take the product out of the packaging.
2. Open the lid.
3. Remove all protective films and adhesive strips from the product and remove all packaging materials.
4. Close the lid again.


## Inserting batteries in the remote control

1. Slide the battery compartment lid off the remote control in the direction of the arrow.
2. Insert the batteries (not included) as illustrated inside the battery compartment. Ensure that the polarity (+/-) is correct when doing so.
3. Place the battery compartment lid back on correctly and slide it into place, opposite to the direction of the arrow.

## Connecting to the mains power and charging the rechargeable battery

The product can be powered either directly via mains power or independently via the built-in rechargeable battery.

The built-in rechargeable battery comes in a half-charged state. This is to prevent it from becoming damaged. Charge the battery fully before using the product for the first time. You will need a suitable USB mains adapter (not included; see "Technical specifications").

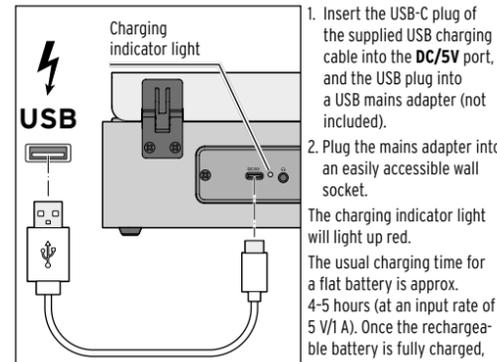

1. Insert the USB-C plug of the supplied USB charging cable into the DC/5V port, and the USB plug into a USB mains adapter (not included).
2. Plug the mains adapter into an easily accessible wall socket. The charging indicator light will light up red. The usual charging time for a flat battery is approx. 4-5 hours (at an input rate of 5 V/1 A). Once the rechargeable battery is fully charged, the indicator light will go out.

**i** You can continue to use the speaker while it is charging. However, this will slightly extend the charging time.


3. After you have finished charging/using the device, remove the mains adapter from the wall socket and disconnect the USB-C charging cable from the mains adapter.

### Information on the rechargeable battery

- Depending on environmental conditions, volume level, playback mode and other factors, the playback time is approximately 4-6 hours (at 60% volume with a fully charged battery).
- To preserve the rechargeable battery's full capacity for as long as possible, you should fully recharge the battery every 2 to 3 months, even if you do not use the product.
- Charge the battery in environments with a temperature of between +10 and +40 °C.
- The battery will best hold its charge at room temperature. The lower the ambient temperature, the shorter the playback time.

## Switching on/off

### Switching on

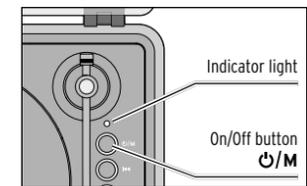

Press and hold the On/Off button **⏻/M** on the speaker for approx. 3 seconds to switch it on. You will hear a beep.

The speaker is now in Bluetooth® Mode. The operation indicator light flashes blue.

If the speaker is already paired with a mobile playback device (e.g. a smartphone), you will hear another beep. The indicator light will light up blue continuously.

### Switching off

Press and hold the On/Off button **⏻/M** on the speaker for approx. 3 seconds to switch it off again. You will hear a beep.

### Automatic switch-off feature

To avoid unnecessary power usage, the speaker comes with an automatic switch-off feature:

- The speaker will switch off automatically if playback has been stopped for more than 15 minutes or if the CD has finished.
- If the speaker is switched off by pressing the **⏻** button on the remote control, it will initially go into standby mode; the speaker can be switched back on again from standby mode for the next 15 minutes. If it is not used again during this time, the speaker will automatically switch off completely.

## Adjusting the volume

On the speaker:

- ▷ Turn the **VOLUME** control knob ...
- ... clockwise to increase the volume.
- ... anti-clockwise to decrease the volume.

With the remote control:

- ▷ Press and hold the ...
- ... **-** button to decrease the volume.
- ... **+** button to increase the volume.

### Muting the sound (MUTE)

- ▷ Briefly press the **⏻** button once to mute the sound.
- ▷ Press the **⏻** button again to unmute the sound.

## Selecting the operating mode

You can switch between Bluetooth® Mode, CD playback (when the CD function is activated; see "Operating mode: CD Mode"), AUX and USB stick playback.

**i** If CD playback is not activated, you can only switch between Bluetooth®, AUX and USB stick playback.

On the speaker:

- ▷ Briefly press the On/Off button **⏻/M** as many times as necessary to select the desired mode.

With the remote control:

- ▷ Briefly press the **MODE** button as many times as necessary to select the desired mode.

## Operating mode: Bluetooth® Mode

**Establishing a Bluetooth® connection with a mobile playback device**  
Observe and note the following:

- Some devices require longer to establish a connection; this is not a fault.
  - In each case, observe the instructions for use of your playback device.
  - As a rule, it is only possible to connect one playback device to the speaker at a time.
  - You may be required to enter a password. If so, enter **0000**.
1. Press and hold the On/Off button **⏻/M** on the speaker for approx. 3 seconds to switch it on. You will hear a beep and the indicator light will flash blue.
  2. Activate Bluetooth® on your mobile playback device (e.g. smartphone) and start the device search.
  3. Select **TCM 721365** from the list and confirm your selection if necessary. Once a connection has been successfully established, you will hear a beep. The indicator light will now light up blue continuously.
- Note the following:
- If you switch the speaker off, it will automatically connect to the last connected mobile playback device when switched back on, provided this device is in the vicinity, switched on and has Bluetooth® activated.

Bluetooth® functions	
Start/pause/resume playback	On the speaker: ▷ Briefly press the <b>⏻/⏸</b> button once each time. With the remote control: ▷ Briefly press the <b>⏻</b> button once each time. Or: ▷ On the mobile playback device itself.

Skip to next track	On the speaker: ▷ Briefly press the <b>▶▶</b> button once. With the remote control: ▷ Briefly press the <b>▶</b> button once. Or: ▷ On the mobile playback device itself.
Skip back to previous track	On the speaker: ▷ Briefly press the <b>◀◀</b> button once to skip back to the previous track. With the remote control: ▷ Briefly press the <b>◀</b> button once to skip back to the previous track. Or: ▷ On the mobile playback device itself.
Fast forward	On the speaker: ▷ Press and hold the <b>▶▶▶</b> button. With the remote control: ▷ Press and hold the <b>▶▶</b> button.
Fast rewind	On the speaker: ▷ Press and hold the <b>◀◀◀</b> button. With the remote control: ▷ Press and hold the <b>◀◀</b> button.

#### Resetting

Electromagnetic interference around the speaker could lead to malfunctions. If the devices do not connect via **Bluetooth®**, perform a reset:

1. Remove the speaker from the area with electromagnetic interference.
2. Then switch the speaker off and on again (see "Switching on/off").

#### Disconnecting a Bluetooth® connection

It is only possible to connect the speaker via **Bluetooth®** with one mobile playback device at a time. If you would like to connect the speaker to another mobile playback device, you must first disconnect the currently connected mobile playback device ...

... by pressing and holding the **▶||/📶** button on the speaker for approx. 2 seconds or ...

... on the mobile playback device itself.

To confirm, a beep will sound.


The indicator light will start flashing blue rapidly again.

If you now want to connect a different mobile playback device, follow the instructions from Step 2 in the section "Establishing a **Bluetooth®** connection with a mobile playback device".


### Operating mode: CD Mode

1. Open the lid.


▷ If this is your first time using the device, remove the cardboard insert.

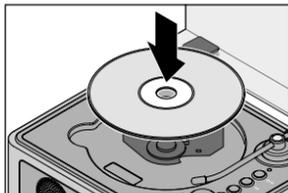


2. Insert a CD with the printed side facing up. Press the CD down over the retaining clips on the spindle so that it locks securely into place.

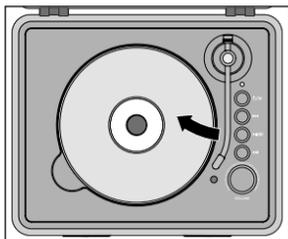

3. To activate the CD function, move the tonearm to the left past the point of resistance until it clicks into place automatically. Once the tonearm is correctly positioned, the CD begins to spin. After a brief moment, the first track will begin to play.

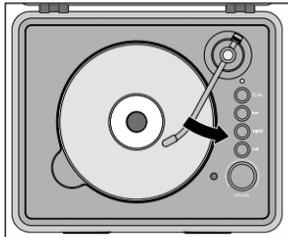

▷ To deactivate the CD function, move the tonearm to the right past the point of resistance until it clicks into place automatically.

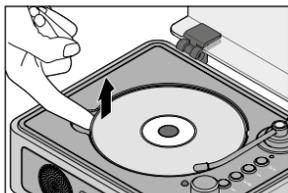

▷ To remove the CD, lift it carefully as shown - overcoming the resistance of the retaining clips.

CD functions	
Start/pause/Resume playback	On the speaker: ▷ Briefly press the <b>▶  /📶</b> button once each time. With the remote control: ▷ Briefly press the <b>▶  </b> button once each time.
Stop playback	With the remote control: ▷ Briefly press the <b>■</b> button once.
Skip to next track	On the speaker: ▷ Briefly press the <b>▶▶</b> button once. With the remote control: ▷ Briefly press the <b>▶</b> button once.
Skip back to previous track	On the speaker: ▷ Briefly press the <b>◀◀</b> button once to skip back to the previous track. With the remote control: ▷ Briefly press the <b>◀</b> button once to skip back to the previous track.
Repeat track/entire CD	With the remote control: ▷ Press the <b>REPEAT</b> button ... ... once = repeat current track continuously; one beep will sound, ... again = repeat entire CD continuously; one beep will sound, ... again = return to normal playback; three beeps will sound.
Repeat section	With the remote control: 1. Briefly press the <b>A-B</b> button once to set the start point of the section. 2. Press the <b>A-B</b> button a second time to set the end point of the section. The selected section will now repeat continuously. 3. To cancel the function, press the <b>A-B</b> button once more.
Automatic switch-off feature	You can pre-select a time after which the speaker will automatically switch off (10, 20, 30, 45 or 60 minutes). With the remote control: ▷ Briefly press the <b>🕒</b> button as many times as necessary. Each time the button is pressed, the indicator light flashes a different number of times to indicate the current setting: One flash = 10 minutes, two flashes = 20 minutes, and one more flash for each additional increment - up to five flashes for a maximum of 60 minutes. After the <b>🕒</b> button is pressed for the sixth time, the automatic switch-off feature is deactivated again.
<b>Bluetooth®</b> Out - play CDs through an external <b>Bluetooth®</b> speaker, headphones or similar device.	On the speaker: 1. Start CD playback. 2. Press and hold the <b>▶  /📶</b> button for approx. 3 seconds. You will hear a short melody. 3. Activate <b>Bluetooth®</b> on the external <b>Bluetooth®</b> device.  The external <b>Bluetooth®</b> device must not be paired with another device and must be placed close to the speaker to establish a connection. 4. The speaker will automatically connect to the external <b>Bluetooth®</b> device after a few seconds.  Audio will now be played through the external <b>Bluetooth®</b> device.


### Operating mode: AUX Mode

#### NOTICE - material damage

- Do not connect the speaker to the speaker output of a separate power amplifier, as this may cause damage.
- Ensure you also consult the instructions for use of any external device that you connect to this device.

Using an audio cable (not included), you can connect other audio devices with a headphone output - such as an MP3 player - to the speaker via the **AUX IN** port on the back of the speaker.

1. Turn off this device and the external audio device before connecting them.

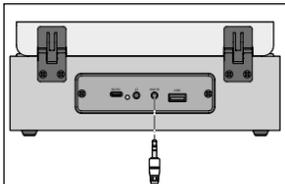

2. Using an audio cable (not included), connect the **AUX IN** port on the device to the headphone port of the audio device (usually marked with a headphone symbol or "PHONE").


3. Switch on both this device and the external audio device.
4. Briefly press the On/Off button **🔌/M** or the **MODE** button on the remote control as many times as necessary until you hear a beep.
5. Start playback on the audio device.

 Audio devices connected to the speaker via the **AUX IN** port cannot be controlled using the speaker. You can only adjust the volume using the speaker.

- ▷ Turn off both the speaker and the audio device before disconnecting the cable.

### Operating mode: Music Play Mode (USB)

You can play MP3 files from a USB stick.

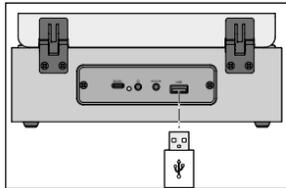

- ▷ Insert a USB stick into the **USB** port on the back of the device. You will hear a beep. After a brief moment, playback will start automatically.

USB functions	
Start/pause/Resume playback	On the device: ▷ Briefly press the <b>▶  /📶</b> button once each time. With the remote control: ▷ Briefly press the <b>▶  </b> button once each time.
Skip to next track	On the device: ▷ Briefly press the <b>▶▶</b> button once. With the remote control: ▷ Briefly press the <b>▶</b> button once.
Skip back to previous track	On the device: ▷ Briefly press the <b>◀◀</b> button once to skip back to the previous track. With the remote control: ▷ Briefly press the <b>◀</b> button once to skip back to the previous track.

### Problems / solutions

#### No Bluetooth® connection

- Is **Bluetooth®** deactivated on the mobile playback device? Check the settings on your smartphone. Activate **Bluetooth®** if necessary. Check whether the device appears in the list of detected devices. If not, reconnect the device as described in "Operating mode: **Bluetooth®** Mode". Place the devices close to each other. Remove other **Bluetooth®**-enabled devices from the surrounding area.
- Do you require a password for your playback device? Check the settings.

#### Distorted sound or interference

- The mobile playback device and the speaker are too far apart.

#### No sound

- Is the volume set too low?
- **Bluetooth®** connection lost? Check the connection on your mobile playback device. If necessary, reconnect the speaker (see "Operating mode: **Bluetooth®** Mode").
- Rechargeable battery flat or very low on charge? Charge the speaker (see "Connecting to the mains power and charging the rechargeable battery").

#### Audio device or USB stick not recognised / no music playback

- Is the speaker in the wrong operating mode? Change the speaker's operating mode (On/Off button **🔌/M** on the speaker / **MODE** button on the remote control).
- Are the songs not in a suitable format (mp3)? Try using other files.

#### Audio playback from the USB stick is very quiet or has poor sound quality

- Some audio files may have low sound quality. To check, play another file that you know has good sound quality.

#### Bluetooth® Out - external Bluetooth® device not connecting to the speaker

- Are the devices too far apart?
- Is the mobile **Bluetooth®** device connected to another device?

### Declaration of Conformity

Commaxx BV hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU at the time of its being placed on the market.


The complete Declaration of Conformity can be found at [https://commaxx-certificates.com/doc/721365\\_doc.pdf](https://commaxx-certificates.com/doc/721365_doc.pdf).

The product is suitable for sale and use in the following countries: Germany, Austria, Switzerland, Czech Republic, Poland, Slovakia, Hungary.

### Technical specifications

Model:	721 365
<b>Speaker</b>	
Rechargeable battery: (tested as per UN 38.3)	lithium-ion 7.4 V DC 2000 mA Watt-hour rating: 14.8 Wh (not replaceable)
Charging voltage:	5 V  1 A (the  symbol indicates direct current)
Charging time:	approx. 4-5 hours
Playback time:	approx. 4-6 hours (at 60% volume with a fully charged battery)
Connections:	USB-C ( <b>DC/5V</b> power input port) USB-A (USB stick) AUX (audio connection), 3.5 mm jack
Impedance:	4 Ω
Power:	5 W
<b>CD Mode</b>	
Supported formats:	Audio CD, CDR/CDRW, MP3/WMA CD
Manufactured by:	Commaxx BV, Wiebachstraat 37, 6466 NG Kerkrade, The Netherlands

The power output of the charger must cover a range from 5 watts (minimum output required by the radio equipment) to 10 watts (required for the maximum charging speed).

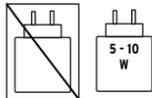

#### Bluetooth® Mode

Version: V6.0 / earlier versions (from 1.1) are compatible, but may not support every function

Range:	max. 10 m (in open spaces)
Frequency range:	2.402 GHz to 2.480 GHz
Max. transmission power:	2.5 mW
Device standards:	HFP V1.6 / HSP V1.2 / A2DP V1.2 / AVRCP V1.4
Ambient temperature:	+10 to +40 °C

#### Compatible with

**Bluetooth®**-enabled smartphone or tablet

Android with version 4.3 or higher

iOS phones (iOS 7.0 and higher);

iOS tablets (iOS 7.0 and higher)

The **Bluetooth®** word mark and logos are registered trademarks of Bluetooth SIG, Inc. and any use of such marks by Commaxx BV is under license.

### Information about the built-in rechargeable battery

Manufacturer:	Guangdong Julang Energy Industrial Co., LTD 3rd Floor, Building 4, No.110 Tanglong West Road, Tangxia Town, Dongguan City, Guangdong Province, China
Rechargeable battery:	JL 18650, 2000 mAh, 7.4 Wh -(Black) 3.7 V 1ICPI9/66 250705 +(Red)
Email:	julanglibattery@163.com
Manufacturing date:	August 2025, Made in China

### Disposal

The product, its packaging and the built-in rechargeable battery have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



**Devices, single-use batteries and rechargeable batteries** marked with this symbol must not be disposed of along with household waste! You are legally obliged to dispose of old devices separately from household waste. Electronic devices contain

hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old devices can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

**Warning!** This device contains a rechargeable battery that, for safety reasons, is firmly built into the device and cannot be removed without destroying the casing. Improper disassembly leads to safety hazards.

For this reason, take the device intact to a collection point where the device and battery will be disposed of properly.

**Product number: 721 365**

Manufactured by:  
Commaxx BV, Wiebachstraat 37,  
6466 NG Kerkrade, The Netherlands