 


Tchibo
Electric
cheese grater

en Instructions for use

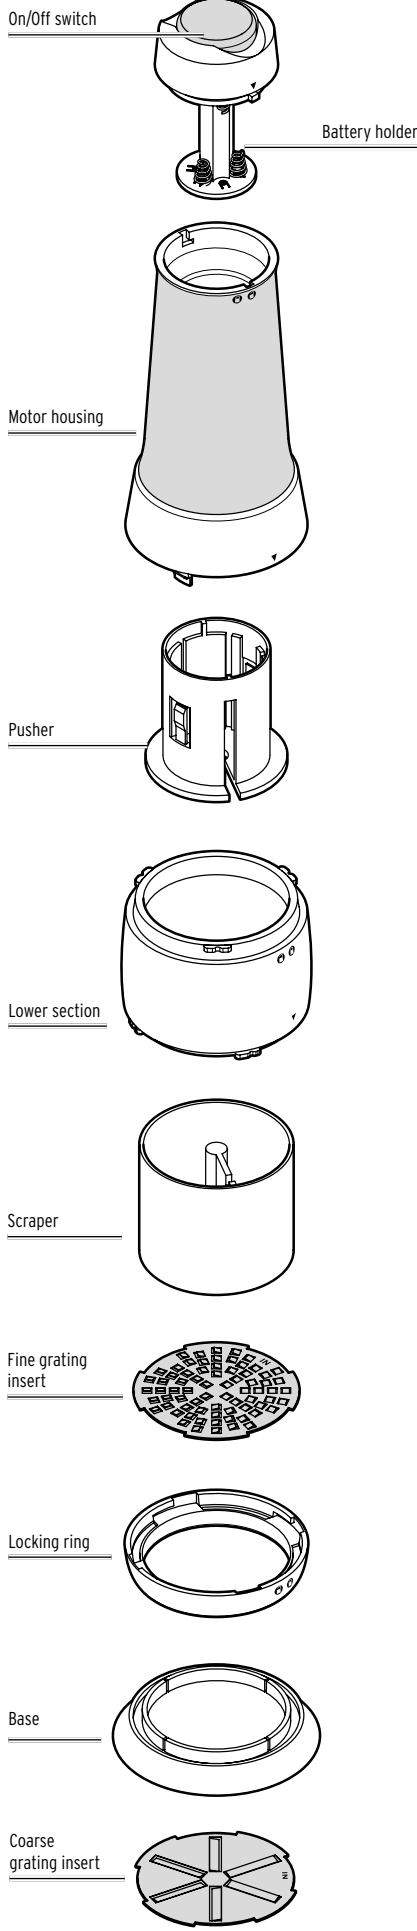

Safety warnings

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Intended use

The electric cheese grater is suitable for grating various types of cheese. It is not suitable for grating other foods such as vegetables, fruit or similar items. It is designed for quantities typically encountered in a private household and is not intended for commercial use.

Danger to children and people with limited ability to operate appliances

- This appliance can be used by children aged 8 and over and by people with reduced physical, sensory or mental capabilities or a lack of experience and/or knowledge, provided they are supervised or have been trained in the safe use of the appliance and understand the potential dangers. Children must not be allowed to clean the appliance unless they are over 8 years of age and supervised while doing so. This appliance is maintenance-free.
- Swallowing batteries can be fatal. If a battery has been swallowed, it can cause severe internal chemical burns and even death within 2 hours. Therefore, keep both new and old batteries and the product out of the reach of children. If you think that a battery has been swallowed or has got into the body in any other way, seek medical advice immediately.
- Children must not play with the appliance. Keep children under the age of 8 away from the appliance, especially the grating inserts.
- Keep packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

Risk of injury

- If a battery has leaked, avoid contact with skin, eyes and mucous membranes. If this does happen, rinse the affected areas with water and consult a doctor immediately.
- The blades of the grating inserts are sharp. Take care when inserting, removing and cleaning the grating inserts.

Danger of explosion/fire

- Batteries must not be taken apart, thrown into fire or short-circuited. In addition, single-use batteries must not be charged.

Material damage




- The appliance is designed to operate for short periods of maximum 45 seconds. Let the appliance cool down to room temperature for at least 3 minutes before switching it on again. Otherwise, the motor will be overloaded.
- Ensure that the polarity (+/-) is correct when inserting the batteries.
- Protect the batteries from excessive heat. Remove the batteries from the product when they are flat or if you do not intend to use the product for a longer period of time. This will prevent damage caused by leakage.
- Always replace all batteries at the same time. Do not mix old and new batteries, different types or brands of battery, or batteries with different capacities.
- Do not use modified or damaged batteries.
- The contact terminals in the battery compartment and the battery poles must not be short-circuited, e.g. due to metal objects.
- If necessary, clean the battery and appliance contacts before inserting the batteries. Risk of overheating!
- Never immerse the motor in water or other liquids.
- Do not use caustic or abrasive agents or hard brushes, etc. for cleaning.

Information about the supplied batteries

Manufacturer Maxell Asia, Ltd.	Model LR03 (GD)
Address Unit Nos.03B-06,13/F, 909 Cheung Sha Wan Road, Kowloon, Hong Kong	Manufacturing date 2025/06
Email tomas@maxell.net.cn	Made in China







































Initial setup

   Inserting batteries

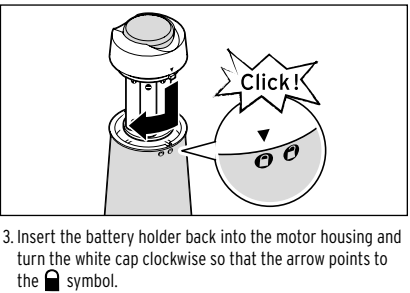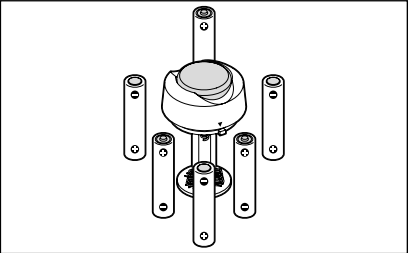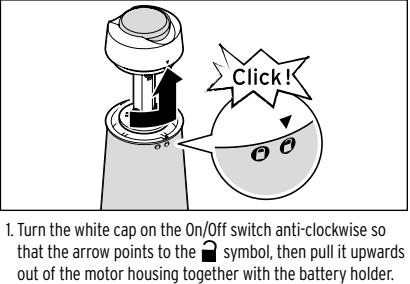

Prior to first use

                                      - ▷ Disassemble the cheese grater and clean all parts that come into contact with the cheese. Proceed as follows:

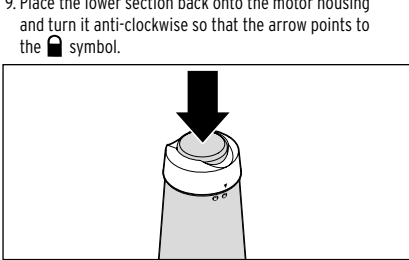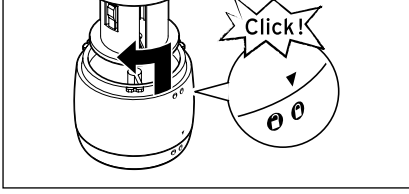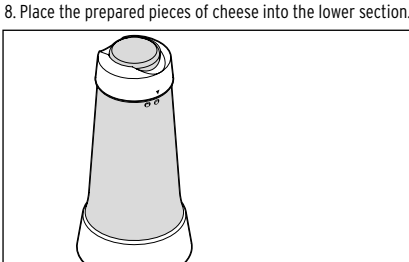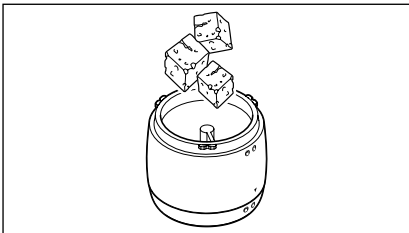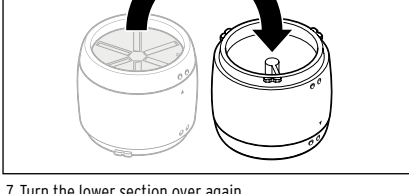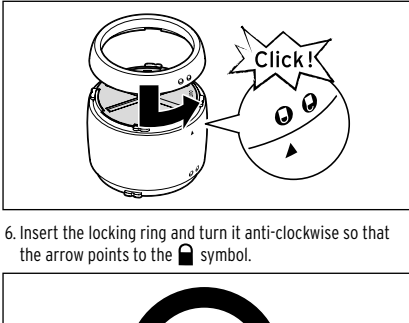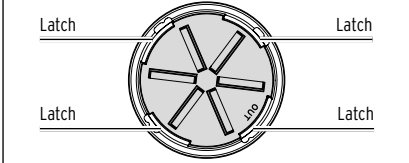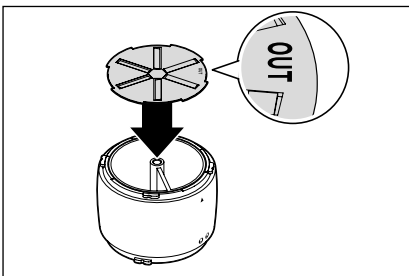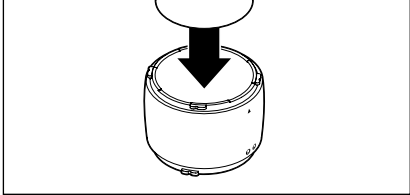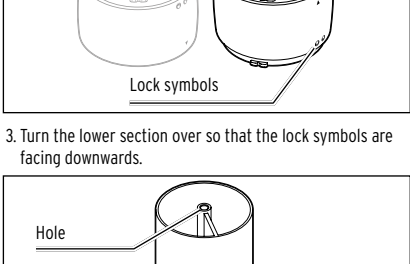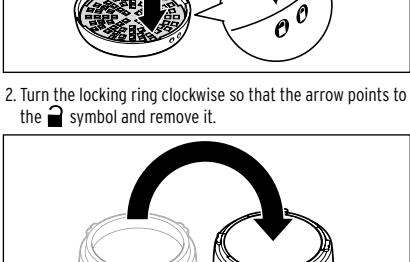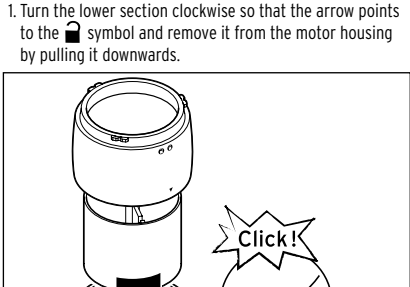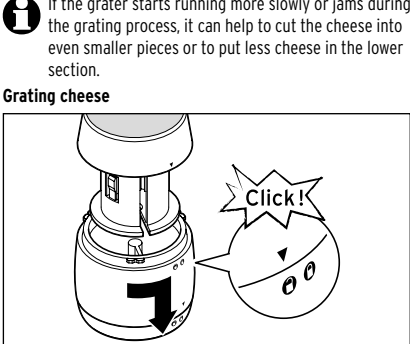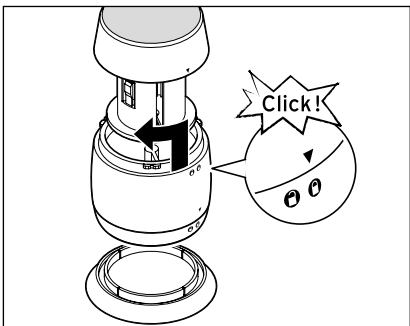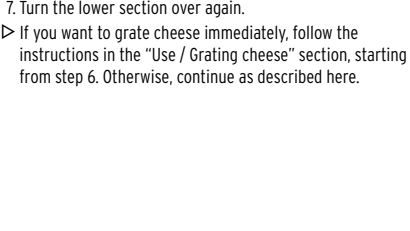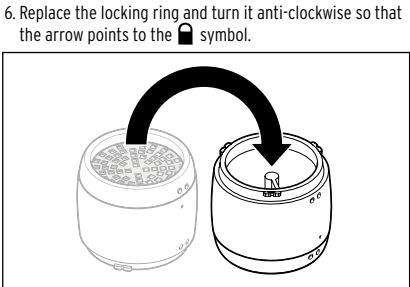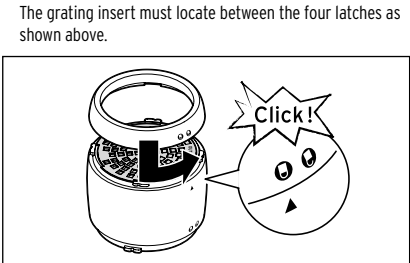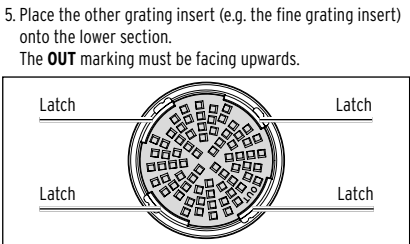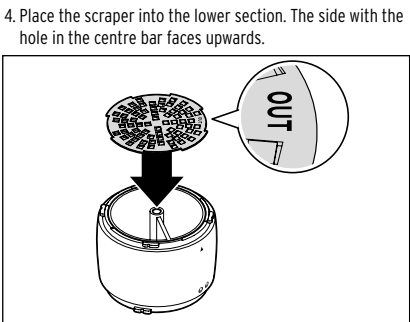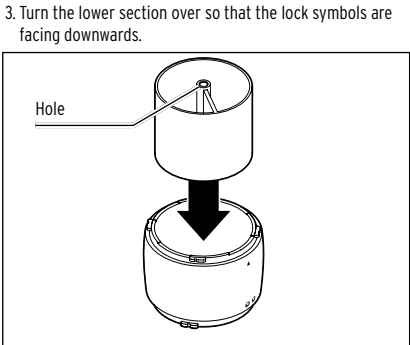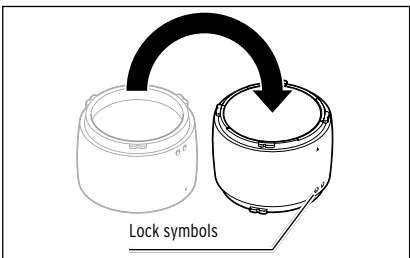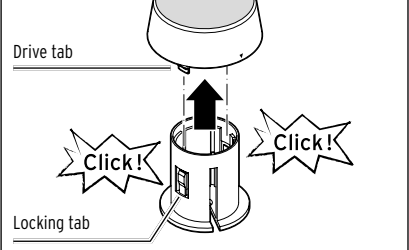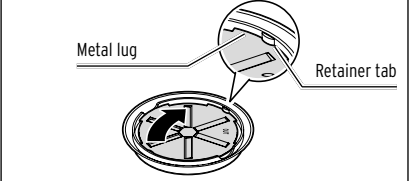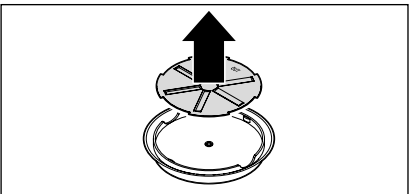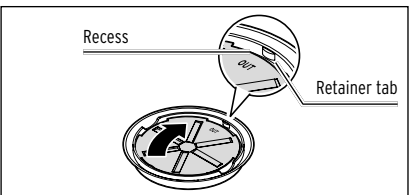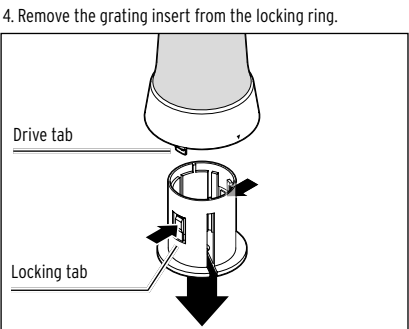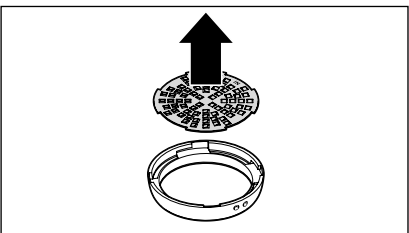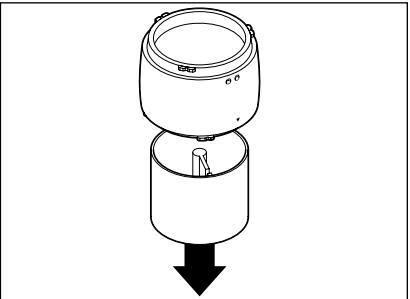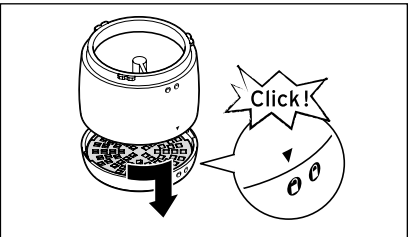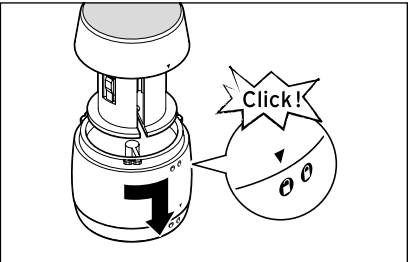

10. Press the On/Off switch at the top of the appliance to start processing the cheese. The appliance will stop as soon as you release the On/Off switch.

- During the grating process, it may sometimes be necessary to remove the lower section temporarily to tap off any cheese that has stuck to it.

Cleaning

- WARNING - risk of injury**
 - The blades of the grating inserts are sharp. Do not place them into dishwater with too much soap foam, so you don't have to feel around for them in the sink.

- When processing cheese with an intense natural colour (e.g. cheddar), discolouration may occur on the plastic parts. Therefore, whenever possible, clean the appliance immediately after use to remove any discolouration. Any colouring that occurs does not affect the function of the appliance.

1. Disassemble the cheese grater as described in the "Prior to first use" chapter.
2. Wipe the motor housing from the outside with a slightly damp cloth. Make sure that no moisture gets into the inside of the appliance. Then wipe with a dry cloth.
3. Wash all the parts (except the motor housing and battery holder) by hand with warm water and standard washing-up liquid.
4. Let all parts dry thoroughly before reassembling and storing the appliance.

Technical specifications

Model: 709 859
Single-use batteries: 6x LR03 (AAA)/1.5 V (Zn/MnO₂)
Ambient temperature: +10 to +40 °C
Made exclusively for: Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany

In the course of product improvement, we reserve the right to make technical and optical modifications to the product.



Disposal

The product, its packaging and the supplied batteries have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point which sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.

Devices marked with this symbol must not be disposed of along with household waste! You are legally obliged to dispose of old devices separately from household waste. Electronic devices contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old devices can be disposed of free of charge is available from your local authorities.

Single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste! Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

www.tchibo.de/instructions
(Please enter the product number in the box labelled "Bedienungsanleitungssuche" and click on "Suchen".)

Product number: 709 859