



Tips for use in a commercial setting, such as an office or small business

In an office or work environment, it is particularly important that your coffee machine is **always ready for use**. When drinks are ready quickly, this means that the team has to spend **less time waiting** for them. For quick and easy preparation of your favourite coffee drinks throughout the day, we recommend the following settings:

1. Immediate availability thanks to optimised standby time

To avoid having to wait for the machine to rinse and heat up when it restarts, we recommend setting the **standby time to 120 minutes**. That way, you can choose and prepare your drinks straight away whenever you want them.

- ▷ In the menu:  **Settings** >  **Standby Time** > **Standby time (min)** > **120 minutes** (preset to 15 minutes; see also chapter "Setting the standby time").

Note: Extending the time until the machine goes into standby mode increases the energy consumption of the machine.

2. Quick drink dispensing thanks to deactivation of brew group preheating

Brew group preheating ensures consistent coffee quality if there are longer breaks between the preparation of drinks because the machine cools down slightly during this time, but is not necessary if the machine is in frequent use. To reduce the amount of time that you wait for your coffee to be dispensed, we recommend **deactivating preheating**.

- ▷ In the menu:  **Settings** >  **Maintenance Settings** > deactivate **Brew Group Preheating**  (see also chapter "Adjusting the maintenance settings").


3. Hygienic milk connection thanks to automatic milk system rinse

For optimal hygiene, we recommend keeping the filled milk container in the fridge at all times and only removing it to prepare milk-based drinks. Place the milk container straight back in the fridge again afterwards.

To prevent any germs forming, the milk system must be rinsed promptly after the last milk-based drink is dispensed. In a commercial environment, it is particularly important to ensure that this happens automatically.

We therefore recommend setting the **Milk Rapid Rinse Setting to Immediate**. This ensures that the milk system is consistently kept clean and reminds the user to **immediately put the milk back in the fridge**.

- ▷ In the menu:  **Settings** >  **Maintenance Settings** > **Milk Rapid Rinse Setting** > **Immediate** (see also chapter "Adjusting the maintenance settings").

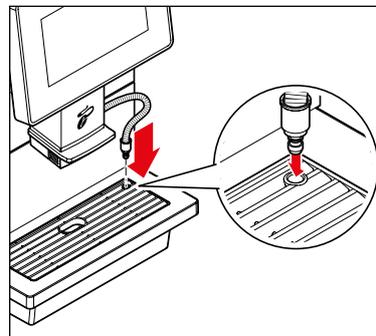

Do not forget:

Always remove the milk tube from the milk container so that no liquid flows back into the milk during the rinse process! Insert the end of the milk tube into the opening in the drip grid.



Read the instructions - especially the safety warnings - carefully before use. Disregarding the safety warnings can result in serious injuries.

