 


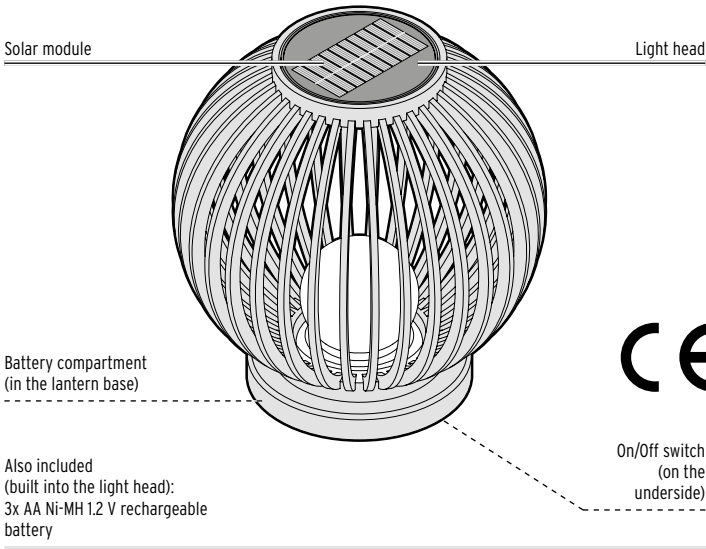

Solar lantern

en Instructions for use



Safety warnings 

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Intended use

The solar lantern is suitable for decoration and not as lighting. It is designed for permanent outdoor use. However, you should take it inside in the event of strong winds.

It is designed for private use and is not suitable for commercial purposes.

Danger to children

- Swallowing rechargeable batteries can be fatal. If a rechargeable battery is swallowed, it can cause severe internal chemical burns and even death within 2 hours. Therefore, keep both new and old rechargeable batteries as well as the product itself out of the reach of children. If you think that a battery has been swallowed or has got into the body in any other way, seek medical advice immediately.
- Keep packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

Risk of injury

- Do not operate the product using standard, non-rechargeable batteries. Risk of explosion!
- Rechargeable batteries must not be taken apart, thrown into fire or short-circuited.
- If a rechargeable battery has leaked, avoid contact with skin, eyes and mucous membranes. Rinse the affected areas with water and consult a doctor immediately.

Material damage

- Do not use the product if it shows any visible signs of damage.
- Due to the extremely long service life of the LEDs, it is not necessary to replace them. They cannot and must not be replaced. The LEDs are firmly fitted in the light head. Attempting to remove the LEDs will damage the product.
- Remove the rechargeable battery from the product when it is flat or if you do not intend to use the product for a longer period of time. This will help prevent damage caused by leakage.
- Do not make any modifications to the product. Have repairs carried out only by a specialist workshop or as arranged by our customer care service.
- Do not stick anything to, cover or paint the solar module.
- Do not use any caustic, aggressive or abrasive products for cleaning.
- The product is suitable for outdoor use and complies with protection type IP44. This means that the product is protected against contact with tools, wires and foreign objects with a diameter larger than 1 mm and splashes of water from all sides, such as rain. However, protect the product from heavy rain and streams of water and do not immerse it in water.
- The product is suitable for outdoor use at temperatures above approx. -10 °C. If the temperature falls below this level, store the product inside, otherwise it may become damaged.
- It cannot be fully ruled out that some varnishes, synthetic substances and furniture polishes may react adversely with the non-slip material of the feet and soften them. To avoid unwanted marks on furniture, place a non-slip mat underneath the product if necessary.

Use

Choosing a location

 
The light works independently of any external power supply. However, since the product depends on light from the sun, you should consider and observe the following:

- Place the light in a sunny location during the day. Choose a spot where the light will be exposed to direct sunlight for as long as possible. The rechargeable battery can only recharge if the solar module is in a sunny location.
- Avoid positioning the light in a fully or mostly shady location (beneath trees, roof ridges, etc.). Do not place the light on the north side of a building, as it will not receive enough sunlight during the day.
- The solar module should not be continuously exposed to other sources of light during the night, for example strong spotlights in a driveway or garage entrance, etc. Keep in mind that many light sources only switch on at night, such as those activated by a timer or motion sensor.

Switching on/off

The rechargeable battery is already inserted upon delivery.


1. Turn the lantern upside down.

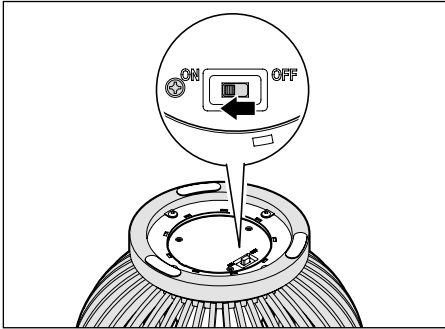

2. Slide the On/Off switch on the bottom to **ON** to activate the lantern.

In this position the light works fully automatically:

 - The light switches on at dusk.
- The light switches off at dawn.

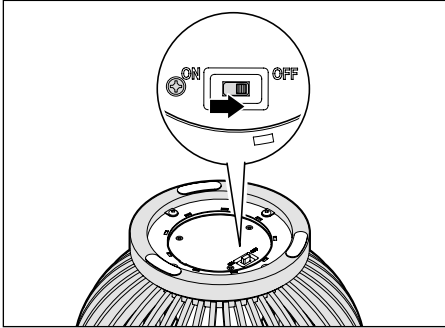

- If you need to deactivate the light, slide the On/Off switch to **OFF**.

The light is now switched off permanently. The rechargeable battery will continue to charge once there is sufficient light.

Charging the rechargeable battery

- The rechargeable battery can only be charged if the light is placed in a sunny spot with the solar module facing upwards.
- Depending on the weather and intensity of the sun, it can take a few hours for the solar module to fully charge the rechargeable battery.
- During the winter or after several cloudy days in a row, you may find that the rechargeable battery is not sufficiently charged. If this happens, slide the On/Off switch on the underside of the light head to **OFF** to deactivate the light. The rechargeable battery will charge even when the light is switched off.

Cleaning

NOTICE - material damage

Do not use any caustic, aggressive or abrasive products for cleaning.

- Wipe the light with a soft, slightly damp cloth.

Problems / solutions

The light is very dim or not lighting up at all.

- Are the surroundings too bright?
Check whether other sources of light (e.g. street lights or outdoor lights controlled by a timer or motion sensor) are shining onto the light. If necessary, change the location.
- Is the rechargeable battery not fully charged?
Switch the solar light off for a few days so that the rechargeable battery can be fully recharged.
- Is the rechargeable battery worn out?
Replace the rechargeable battery as described in the chapter titled "Removing / replacing the rechargeable battery".

The LEDs are faulty.

- The LEDs cannot be replaced.

Performance varies depending on the season.

- This is due to weather conditions and is not a fault. Weather conditions are best during the summer and less favourable in the winter or after several cloudy days in a row.

Technical specifications

Model:	730 177
Energy supply	
Solar module:	5.5 V / 0.8 W
Rechargeable battery:	3x HR6 (AA) Ni-MH 1.2 V / 1000 mAh

Protection class:	III 
IP code:	IP44
Ambient temperature:	-10 to +40 °C
Made exclusively for:	Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany

In the course of product improvement, we reserve the right to make technical and visual modifications to the product.

Disposal

The **product**, its **packaging** and the inserted **rechargeable battery** have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Appliances, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste!

You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

For instructions on how to remove the rechargeable battery, see the chapter titled "Removing / replacing the rechargeable battery".

Removing / replacing the rechargeable battery

 


WARNING - risk of injury


Do not operate the product using standard, non-rechargeable batteries. Risk of explosion!

The rechargeable battery is designed for long-term operation. However, after a long period of use it may need to be replaced. Rechargeable batteries are subject to standard wear and tear, and their performance may decrease over time.

1. Turn the lantern over and slide the On/Off switch on the underside of the light head to **OFF** to deactivate the lantern.

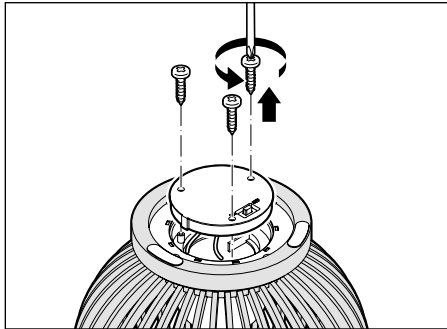

 2. Loosen the three screws on the underside of the lantern using a Phillips screwdriver.
3. **Carefully** remove the battery compartment cover so that you do not damage the cables.

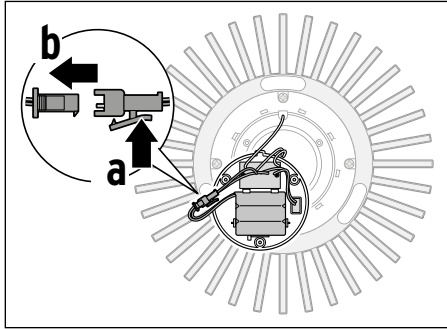

4. Press the latch on the plug socket (a) to release it and disconnect the plug (b).
5. Insert the plug of the new battery. You can order a new rechargeable battery by contacting our customer care service (see the insert titled "Warranty").
6. Replace the battery compartment cover and tighten the screws.
7. Slide the On/Off switch on the underside of the lantern to **ON** again to activate the light.

Product number: 730 177