

Safety warnings

Please read the safety warnings carefully and only use the product as described in these instructions in order to avoid accidental injury or damage.

Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.



This light has been designed for use in dry, indoor areas.

It should not be used outdoors or in rooms exposed to high levels of humidity.

- Children are not aware of the hazards involved in handling electrical devices incorrectly. Therefore, keep the light away from children.
- Keep the packaging materials away from children. They pose several risks, including the risk of suffocation!
- Protect the light from moisture. You should also protect it from drips and splashes of water, as this poses a risk of electric shock.
- Only connect the light to a properly installed wall socket with a voltage that complies with the technical specifications in these instructions.
- Unplug the light from the socket: If a malfunction occurs during use, if you do not intend to use the light for a while and before cleaning it.
- Do not use the light if it shows visible signs of damage or if it has been dropped.
- Do not make any modifications to the product. Only have repairs carried out by a specialist workshop.
- The LEDs are firmly built into the product. They cannot and must not be replaced. In case of defective LEDs, dispose of the product completely.
- Never connect more lights or sockets to the product's original socket. Do not insert any needles or other metallic objects into the socket.

- The light can become very hot during use. Do not touch it. Do not cover the light and never hang anything over it.
- Do not connect the light to a dimmer. The LEDs cannot be dimmed.
- Devices that are left plugged in during thunderstorms may become damaged. For this reason, you should always unplug the light in the event of a storm.
- Never use caustic, aggressive or abrasive products for cleaning.

Disposal

The product and its **packaging** have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and helps to preserve the environment. Dispose of the packaging at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.




Appliances marked with this symbol must not be disposed of along with normal household refuse!

You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities

en

Technical specifications

Model:	728 949
Mains voltage:	230 V ~ 50/60 Hz
Protection class:	I 
IP code:	IP 20
Power:	max. 4.5 watts
Socket:	250 V ~, 16 A
Ambient temperature:	+10 to +40 °C

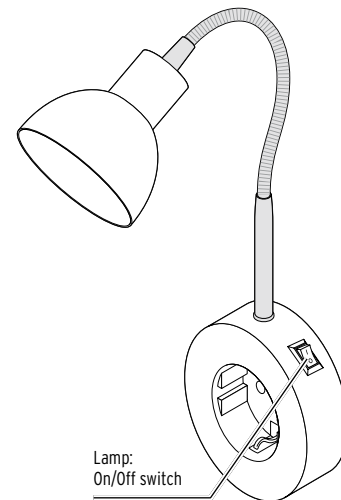

Lamp:
On/Off switch