 


Tchibo Solar Light

en Instructions for use

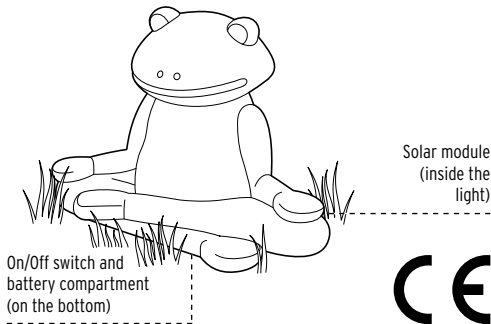

For your safety ⚠

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Intended use

The product is only suitable for decoration and not for lighting whole rooms or outdoor areas. This product is designed for permanent outdoor use. It is designed for private use and is not suitable for commercial purposes.

Danger to children

- Keep small swallowable parts (e.g. screws) and packaging materials out of the reach of children. They pose several risks, including the risk of suffocation/choking!
- The product is not a toy! Keep the light away from children.

Danger of injury

- Do not operate the product using standard, non-rechargeable batteries. Risk of explosion!
- Rechargeable batteries must not be taken apart, thrown into fire or short-circuited.
- If a rechargeable battery has leaked, avoid contact with skin, eyes and mucous membranes. If necessary, rinse the affected areas with water and consult a doctor immediately.

Material damage

- Do not position the light in hollows or depressions where puddles might form.
- Do not use the product if it shows any visible signs of damage.
- Due to the extremely long service life of the light-emitting diodes (LEDs), it is not necessary to replace them. They cannot and must not be replaced. The LEDs are firmly built into the light. Taking apart the light would damage the light and the LEDs.
- Remove the rechargeable battery pack from the product when it is spent or if you do not intend to use the product for a long period of time. This will prevent damage caused by leakage.
- Do not make any modifications to the product. Have repairs carried out only by a specialist workshop or as arranged by our customer care service.
- The solar module is inside the light. Do not stick anything to, cover or paint the light.
- Make sure that the water outlets on the bottom remain clear so that condensation can escape.
- If you set up the light outdoors, bring it inside if a storm is forecast.
- Do not use any caustic, aggressive or abrasive products for cleaning.
- The product complies with protection type IP44 and is protected against the ingress of solid foreign objects with a diameter larger than 1 mm and splashes of water, but must not be immersed in water. Nor should the product be exposed to direct, heavy rain. The product must be correctly assembled and the battery compartment closed.
- The product is suitable for outdoor use from a minimum temperature of approx. -10 °C. Keep it indoors at colder temperatures, otherwise it may become damaged.

 
Use

Unpacking

- ▷ Carefully take the product out of its packaging and remove all packaging materials.

Switching the light on and off

The On/Off switch and battery compartment are located on the bottom of the light.

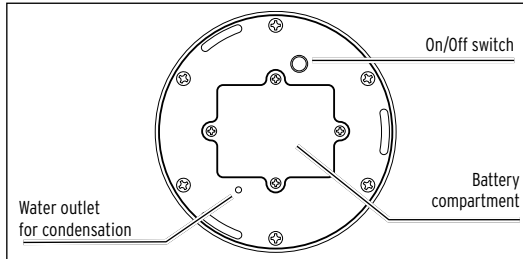

- ▷ Press the On/Off switch to switch the light on. In this position the light works fully automatically:
 - The light switches on at dusk.
 - The light switches off at dawn.
- ▷ Press the On/Off switch again to switch the light off.

The rechargeable battery pack will continue to charge whenever there is sufficient light.

Choosing a location

The outdoor solar light works independently of any electric power source. However, since it depends on light from the sun, you will need to take the following points into consideration:

- Set up the light in a place where the solar module is exposed to direct sunlight for as long as possible throughout the day.
- Avoid positioning the light in a fully, or mostly shady location (under trees, roof ridges, etc.). Do not place the light on the north side of a building as this would not attract sufficient sunlight during the day.
- The light should not be continuously exposed to other sources of light during the night, for example strong spotlights in a driveway or garage entrance, etc. Keep in mind that many light sources only switch on at night if activated by a time-switch or motion sensor.

Charging the battery

- The rechargeable battery pack can only be charged if the light is placed in a sunny spot with the solar module facing upwards.
- Depending on the weather and intensity of the sun, it can take a few hours for the solar module to fully charge the rechargeable battery pack.
- During the winter or after a successive number of cloudy days, you may find that the rechargeable battery pack is not sufficiently charged. Press the On/Off switch to switch the light off. The rechargeable battery pack will charge even when the light is switched off.

Cleaning

NOTICE - material damage

Do not use any caustic, aggressive or abrasive products for cleaning.

- ▷ If necessary, wipe the light with a slightly damp cloth.

Problems / solutions

The light is not lighting up or is producing only a dim light.

- Is the rechargeable battery pack worn out or not fully charged? Switch the light off for a few days so that the rechargeable battery pack can be fully recharged. If there is no improvement, try replacing the rechargeable battery pack. See chapter titled "Removing / replacing the rechargeable battery pack".
- Are the surroundings too bright? Check whether other sources of light (e.g. street lights or time or motion sensor-controlled outdoor lights) are shining onto the light. If necessary, change the location.


The light shines with different brightness depending on the season.

- This is due to the weather and is not a fault. Weather conditions are at their best during the summer, and at their worst in the winter.

Technical specifications

Model:	700 020
Power supply	
Solar module:	6 V, 1.5 W
Rechargeable battery:	3 x 1.2 V NiMH, 3.6 V / 1000 mAh
Protection class:	III ⚡
Splashwater protection:	IP44
Bulb:	16 LEDs
Ambient temperature:	-10 to +40 °C

 Removing / replacing the rechargeable battery pack

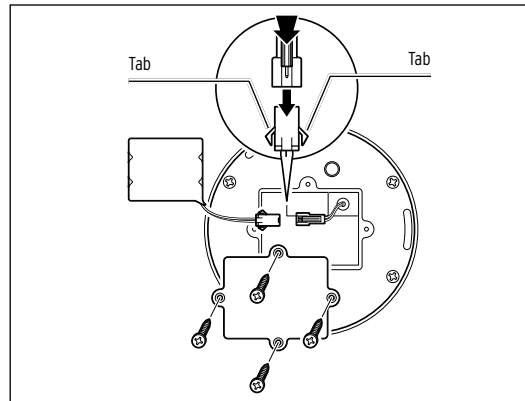

WARNING - risk of injury

Do not operate the solar light using standard, non-rechargeable batteries. Risk of explosion!

The rechargeable battery pack is designed for long-term operation. However, after a long period of use it may need to be replaced. Rechargeable batteries are subject to standard wear and tear, and performance can diminish.

1. Undo the four screws of the battery compartment lid using a Phillips screwdriver.
2. Remove the battery compartment lid.
3. Squeeze the tabs together on the plug of the old rechargeable battery pack and pull off the plug. Use flat pliers if necessary.
4. Insert the plug of the new rechargeable battery pack. You can order a new rechargeable battery pack by contacting the customer care service (see warranty, chapter "Customer care service").
5. Put the battery compartment lid back on correctly.
6. Retighten the four screws.

Disposal

The product, its packaging and the built-in rechargeable battery pack have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Appliances, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste!

You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

Product number: 700 020

Made exclusively for:
Tchibo GmbH, Übersering 18, 22297 Hamburg, Germany