

Safety warnings

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Intended use

The product is intended for use as a removable wall light - with a bracket for screw attachment to rough, textured surfaces (e.g. wallpaper or similar) and for sticking to smooth surfaces (e.g. tiles, mirrors or similar).

The product is suitable for use in dry, indoor areas. The product is designed for private use and is not suitable for commercial purposes.

DANGER to children

- Children are not aware of the risks involved in handling electronic appliances incorrectly. Therefore, keep children away from the product.
- Keep all small parts and packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

Danger due to electricity when charging the battery

- Do not charge the product outdoors or in damp rooms.
- Use only suitable mains adapters for charging the product. Do not use a faulty mains adapter or attempt to repair a faulty mains adapter.
- Only connect the appliance to a properly installed power socket with a mains voltage that complies with the technical specifications of the mains adapter used.
- The power socket used must be easily accessible so that you can quickly unplug the mains adapter whenever necessary. Route the charging cable in such a way that it cannot be tripped over.
- Remove the mains adapter from the power socket if malfunctions occur during charging, during thunderstorms and before cleaning the product.

Danger due to explosion/fire/burns

- The rechargeable battery is firmly built into the product and cannot and must not be replaced or removed. There is a risk of explosion if the battery is replaced incorrectly. It should be replaced only with an identical battery or one of the same type. If the rechargeable battery is defective, contact a specialist workshop.
- **Warning!** Lithium batteries can explode ...
 - ... if they are exposed to extreme heat, such as sunlight, fire, etc., or extremely low air pressure during use, storage or transport. Use the product under moderate climatic conditions only.
 - ... if they are taken apart, thrown into fire or short-circuited. Do not place any naked flames such as burning candles near the product. The product must be kept away from candles and other naked flames at all times to prevent the spread of fire.

- Do not modify and/or deform/heat/dismantle rechargeable batteries. Do not immerse them in water either.

WARNING – danger due to improper use

- The LEDs are very bright. Do not look directly into the light, especially at the brightest setting, to avoid eye damage.
- Do not make any modifications to the product. Have repairs to the product carried out only by a specialist workshop. Improper repairs can result in considerable danger to the user.
- Do not use the product if it shows any visible signs of damage or has fallen down.

Material damage


- Do not use the product outdoors or in damp rooms.
- Never immerse the product in water or other liquids. Protect the appliance from impacts, falls, dust, moisture, direct sunlight and extreme temperatures.
- Do not use caustic or abrasive agents or hard brushes, etc. for cleaning.
- The built-in LEDs cannot be replaced, otherwise the product would be destroyed.
- We have included wall mounting materials (screws and wall plugs).

The mounting materials provided are suitable for standard solid walls. Enquire about which mounting materials are suitable for your wall before mounting the product. Make sure there are no pipes or cables running through where you intend to drill the holes!

Charging the battery

The rechargeable battery comes in a half-charged state. This is to prevent it from becoming damaged. Charge the battery fully by connecting a USB mains adapter (not included) to the power supply before using the product for the first time.

i You cannot use the light while the battery is charging. As soon as the charging cable is plugged into the connection socket, the light switches off automatically.

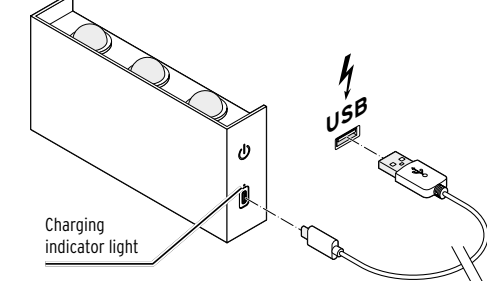

▷ Connect the supplied USB-C charging cable to the USB-C socket on the side of the light and to a suitable USB mains adapter (see “Technical specifications”). Insert the mains adapter into a power socket. The charging indicator light lights up red while the battery is charging. The usual charging time for a flat battery is approx. 5 hours. Once the charging indicator light lights up green, the battery is fully charged. The appliance is ready for use.

Information on rechargeable batteries

- You cannot use the product while the battery is charging.
- To preserve the rechargeable battery's full capacity for as long as possible, you should fully recharge the battery every 2 to 3 months, even if you do not use the product.
- Charge the battery in an environment between +10 and +40 °C.
- The battery will best hold its charge at room temperature. The lower the ambient temperature, the shorter the operating time. Depending on the ambient conditions, the operating time is approx. 50 hours (at 100% light intensity).
- To save power, unplug the USB mains adapter from the power socket after charging.

Cleaning

▷ If necessary, wipe the product with a soft, slightly damp cloth.

Use

- ▷ Tap the On/Off button  1x to turn the light on or off.
- ▷ To activate the timer, tap the On/Off button  again. The LEDs flash 2x for confirmation. The light switches off after 4 hours and switches on again after 20 hours for 4 hours and so on.
- ▷ To switch the light off permanently, tap the On/Off button  again.

▷ To adjust the light intensity gradually, press and hold the On/Off button  while the light is switched on.

Disposal

The product, its packaging and the built-in rechargeable battery have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment. Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.


 **Appliances, single-use batteries and rechargeable batteries** marked with this symbol must not be disposed of along with household waste! You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

Warning! This appliance contains a rechargeable battery that, for safety reasons, is firmly built into the appliance and cannot be removed without destroying the casing. Improper disassembly leads to safety hazards. For this reason, take the appliance intact to a collection point where the appliance and battery will be disposed of properly.

Technical specifications	
Model:	718 178
Rechargeable battery:	1x lithium-ion battery, 2500 mAh/3.7 V Watt-hour rating: 9.25 Wh (tested as per UN 38.3)
Input:	DC 5 V/1 A
Protection class:	III 
Charging time:	approx. 5 hours
Operating time:	up to 50 hours (depending on the light intensity setting)
Bulb:	6 LEDs
Ambient temperature:	+10 to +40 °C
Made exclusively for:	Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany

 www.tchibo.de/instructions
(Please enter the product number in the box labelled “Bedienungsanleitungssuche” and click on “Suchen”).

Product number: 718 178

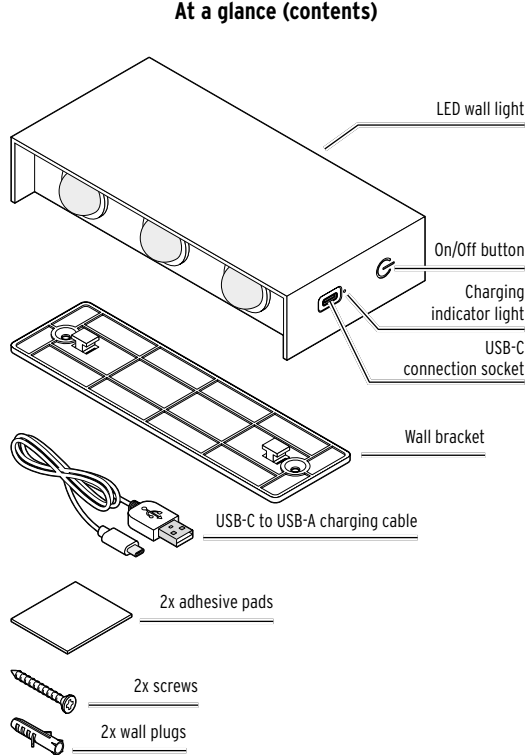

At a glance (contents)

Attaching the light to the wall

You can use the wall bracket to stick or screw the light to a suitable wall.

1. Attach the wall bracket to a suitable wall (steps 1.-3.).
2. Then place the light onto the wall bracket (step 4.). You must feel it click into place.

Observe the following:

- Do not position the light directly above a sink, over a stove or in the vicinity of any other source of heat or moisture.
- Do not attach the light to round, curved or tubular objects. It could fall down and cause injury, or become damaged.

Important instructions for attaching the wall bracket with adhesive pads:

- The adhesive pads adhere to all smooth and flat surfaces, e.g. mirrored or glass surfaces, tiles, etc. Do not attach the wall bracket over joints and other uneven surfaces. The adhesive pads do not adhere to textured surfaces.
- The adhesive pads are intended for permanent attachment. Avoid attaching the wall bracket to delicate surfaces if you want to remove it again later.

1. The surface must be free from dust, grease, silicone and limescale. You should therefore clean and degrease the surface **with pure alcohol (isopropyl) or methylated spirit**. Bathroom or all-purpose cleaners are not suitable.
2. Gently pre-dry the cleaned area and then leave it to dry completely.
3. Place the wall bracket in the desired position and press it there firmly for approx. 10 seconds. After approx. 30 minutes, press it again for approx. 10 seconds. After 24 hours, the wall bracket is ready for use.

• You will get the best hold at temperatures between 23 °C and 40 °C.

