



 
en Instructions for use

Mini piano

Dear Customer

With the mini piano, you can play easy melodies and sound sequences when out and about. We hope you enjoy using this product.

Your Tchibo Team

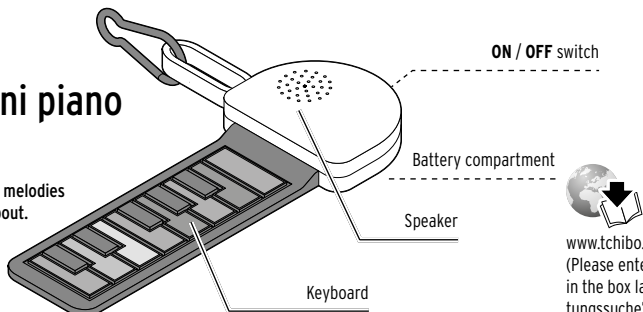

www.tchibo.de/instructions
(Please enter the product number in the box labelled "Bedienungsanleitungssuche" and click on "Suchen".)

For your safety

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Intended use

The product is designed for private use and is not suitable for commercial purposes.

Recommended for children aged 3 and over.

Warning! The enclosed snap hook is only intended for attaching smaller objects. It is **not** suitable for securing people or heavy loads, e.g. when climbing.

WARNING:

• Not suitable for children under 36 months. Small parts. Choking hazard.

• Remove all packaging material before giving the product to a child. Risk of suffocation.



WARNING. The product is equipped with a lithium coin battery. Dispose of used batteries immediately. Swallowing batteries can be fatal. If a battery is swallowed, it can cause severe internal chemical burns and even death within 2 hours. Keep both new and used batteries out of the reach of children. If the battery compartment does not close correctly, stop using the product and keep it out of the reach of children. If you think that a battery has been swallowed or has got into the body in any other way, seek medical advice immediately.

• Batteries must only be inserted or replaced by adults.

The product contains a lithium battery (coin battery).

There is a risk of leakage, gas emissions, explosion and fire:

• **Warning!** Lithium batteries can explode if inserted incorrectly. Therefore, ensure that the polarity (+/-) is correct when inserting the batteries. Use only batteries of the same or of equivalent type (see the technical specifications).

• Batteries must not be taken apart or crushed, thrown into fire or a hot oven or short-circuited. In addition, single-use batteries must not be charged. Do not modify and/or deform/heat/dismantle batteries. Do not allow damaged batteries to come into contact with water.

• Single-use batteries must not be overdischarged. Keep unused batteries in the original packaging. Unpacked batteries (either new or partially/fully used) must be stored in an orderly fashion so that their contacts cannot touch each other. Also keep them away from metal objects.

• Batteries that are exposed to excessive heat, direct sunlight, extremely low air pressure (e.g. at high altitudes) or extreme temperatures may explode or leak flammable liquids or gases. Protect batteries from excessive heat, direct sunlight and extreme air pressure and temperatures.

 
• Remove the battery from the product when it is flat. This will prevent damage caused by leakage.

• If a battery has leaked, avoid contact with skin, eyes and mucous membranes. If necessary, rinse the affected areas with water and consult a doctor immediately.

• Do not use the product if it shows any visible signs of damage. Do not attempt to repair the product yourself. Do not make any modifications to the product.

- Do not immerse the product in water and protect it from moisture.
- Do not place containers filled with liquid (e.g., flower vases, coffee cups) directly next to or on top of the device.
- Do not place any naked flames such as burning candles in the vicinity of the device.
- Protect the product from impacts, falls, dust, moisture, direct sunlight and extreme temperatures.
- Keep pointed and sharp objects away from the product.
- Do not place anything on the keyboard. Do not roll, bend, pull or twist the keyboard as this can damage the electronic circuitry.
- Keep the product away from strong electromagnetic radiation, as this can stop the product from working properly.
- Do not use any caustic, aggressive or abrasive products for cleaning.


Activating/replacing the battery

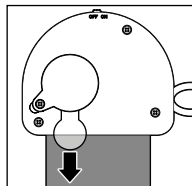

Upon delivery, the battery is protected with an insulating strip.


► To activate the battery, pull out the insulating strip.

 Replace the battery when the sound fades or the device no longer works.

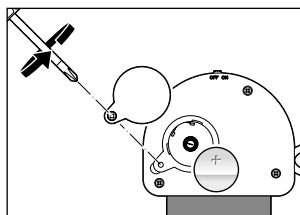

! Do not use rechargeable batteries. They have a different voltage and affect sound reproduction.

 Keyboard

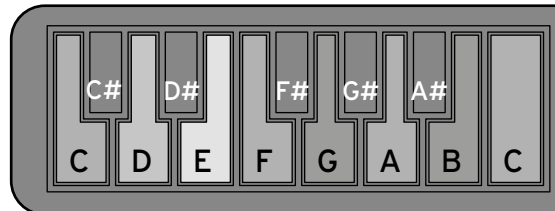


The tuning of the piano may differ from the actual pitches.

Use

Switching on and off

► Slide the switch to **ON** to turn the piano on. A welcome jingle is heard.

 ► Slide the switch to **OFF** to turn the piano off. To save the battery power, always switch the piano off completely when not in use.

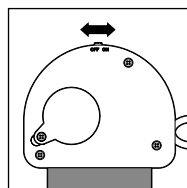

Playing the piano

► Press one or more keys in succession to play a melody or different chords.

Cleaning

► If necessary, wipe the product with a slightly damp cloth to clean it and then thoroughly wipe it dry.

Disposal

The product, its packaging and the supplied battery have been manufactured from valuable materials that can be recycled.

Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Devices, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste!

You are legally obliged to dispose of old devices separately from household waste. Electronic devices contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old devices can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

Technical specifications

Model: 720 854

Single-use battery: 1x CR2032 / 3.0 V (Li/MnO₂), watt-hour rating: 1x 0.63 Wh (tested as per UN 38.3)

Battery included: Manufacturer: CHANGZHOU JINTAN CHAOCHUANG BATTERY CO., LTD., Xiyang Industrial estate, Maolu Town, Jintan City, Jiangsu Province, China; www.chaochuang.com; Email: boss@chaochuang.com; Trademark: CHAO CHUANG; Manufacturing date: 2025/06

Ambient temperature: +10 to +40 °C

Product number: 720 854

Made exclusively for:
Tchibo GmbH, Überseering 18,
22297 Hamburg, Germany

