

Vibrating facial massager

en Instructions for use



www.tchibo.de/instructions

Dear Customer

Your new facial massager has both a warming and a cooling function. The sonic vibration function can be switched on at any time. The warming treatment at 42 °C can stimulate blood circulation in your facial skin, aiding the absorption of skincare products.

The cooling treatment at 6 °C can minimise pores, tighten facial skin and reduce wrinkles.

The sonic vibration function can be used to enhance either effect. Your skin will appear smoother, firmer and more elastic. We hope you enjoy using your new facial massager.

Your Tchibo Team

Safety warnings

This product is equipped with safety features. Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Intended use

The device is used for warming and cooling treatments and for massaging facial skin. The product is designed for private use only and is not suitable for commercial purposes, such as in cosmetic salons or similar institutions.

Only use the product in dry indoor rooms.

Do not use the device...

- ... if you have open wounds, burns, skin irritations, or any skin conditions,
- ... if you have problems with circulation, diabetes, tuberculosis, tumours, bruises or trigeminal neuralgia,
- ... after an operation,
- ... if you are pregnant,
- ... if you wear a pacemaker,
- ... if you suffer from pain of unknown origin. If in doubt, consult your doctor for advice before use.
- Do not use the device directly next to your eyes. Always avoid this area.
- The product must not be used by people who are unable to feel heat or cold properly. Certain illnesses such as diabetes may also be accompanied by the inability to perceive temperature correctly. Frail or infirm people or those with special needs may not be able to call for help if they feel uncomfortable. For this

reason, do not use the product on helpless or sick people or those who are not sensitive to heat or cold.

- Temperatures of 42 °C and above can lead to burn injuries! Therefore do not hold the facial massager in one place for too long when the warming function is active.

Danger to children and people with limited ability to operate devices

- Children must not be allowed to play with the device. Keep children under 8 years of age away from the device.
- Keep the packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!
- This device must not be used on infants, as their skin is very sensitive. This device can be used by children aged 8 and over and by people with reduced physical, sensory or mental capabilities or a lack of experience and/or knowledge, provided they are supervised or have been trained in the safe use of the device and understand the potential dangers. Cleaning and user maintenance must not be carried out by children unless they are supervised.



Danger due to electricity

- The device must only be charged in dry indoor rooms. Only use a suitable USB mains adapter that corresponds to the "Technical specifications" to charge it.
- Do not charge the device near water. The device must not come into contact with water or other liquids while it is connected to the power supply. Do not immerse the device in water or any other liquids while it is charging, as this poses a risk of electric shock.
- Warning - Do not charge the device near bathtubs, shower units, over washbasins or any other receptacles filled with water.
- If the device falls into water while it is charging, do not reach for it! Immediately disconnect the mains adapter plug from the power socket or the USB connection plug from the connection socket. Allow the device, connection cable and, if applicable, the mains adapter to dry before connecting the device again.
- To charge the device, only connect it to a properly installed power socket with a mains voltage that complies with the technical specifications of the mains adapter.
- Unplug the mains adapter from the power socket if malfunctions occur while charging, once the device is fully charged, during thunderstorms and before cleaning the product. To do so, always pull on the mains adapter, and not on the USB charging cable.
- Do not use or attempt to repair a faulty USB mains adapter.
- The power socket must be easily accessible so that you can disconnect the mains adapter quickly if needed. Position the

At a glance (features)



Remove the protective film from the massage head.

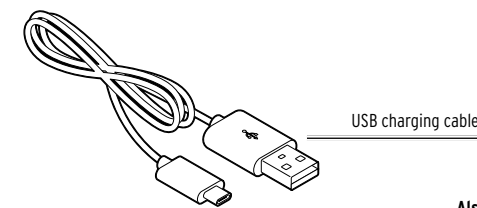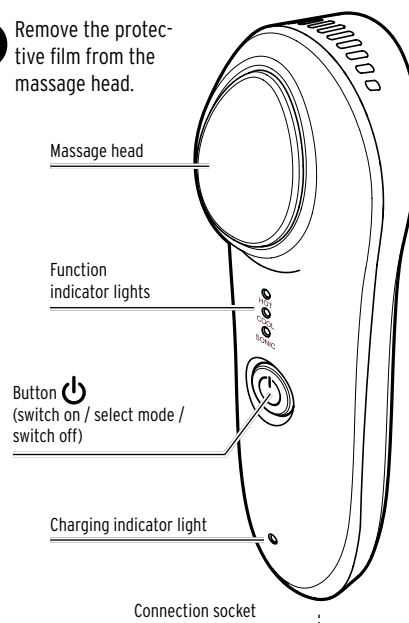

Also included (not illustrated):
Storage bag

Additional information about the inserted battery:

Manufacturer: Shenzhen LIMENGTONG Electronic Technology Co., Ltd., 4th Floor, Building1, Huahan Science Park, No. 19 Qiyun West Road, Pingshan District, Shenzhen, China

Trademark: LMT
Website: <http://lmtzkj.1688.com>
Email: 335687086@qq.com

USB charging cable so that the device cannot be accidentally pulled down by it.

- You cannot and must not attempt to replace or remove the built-in rechargeable battery yourself. There is a risk of explosion if the battery is replaced incorrectly. It should be replaced only with an identical rechargeable battery or an equivalent type of battery. If the rechargeable battery is faulty, consult a specialist workshop.
- The product contains a rechargeable lithium-ion battery. This must not be taken apart, thrown into fire or short-circuited.
- Do not modify and/or deform/heat/dismantle rechargeable batteries. Do not allow damaged batteries to come into contact with water.
- The USB charging cable must not be kinked or crushed. Keep the cable away from hot surfaces and sharp edges.
- Do not use the device or connect it to the mains for charging if the device itself or the USB charging cable is visibly damaged, or if the device has been dropped.
- Do not disassemble the device any more than as described in these instructions. Do not make any modifications to the product. Have repairs to the product or USB charging cable carried out only by a specialist workshop.

Risk of fire/explosion

- Avoid storing, charging and using the product at extreme temperatures and in areas of extremely low air pressure (e.g. at high altitudes).
- Protect the device from impacts, falls, dust, moisture, direct sunlight and extreme temperatures. Take particular care to protect the rechargeable battery from excessive heat.

Material damage

- Wipe the massage head off thoroughly after each use as described in the chapter "Cleaning" to remove any grease deposits and other residues.
- Do not use any caustic or abrasive products, or hard brushes, etc. for cleaning. Make sure that no moisture gets into the device while cleaning it.


Charging the battery

The rechargeable battery comes in a half-charged state. This is to prevent it from becoming damaged. Charge the battery fully prior to first use.



WARNING - risk of fatal electric shock

- Do not charge the device directly next to or over a wash-basin filled with water.

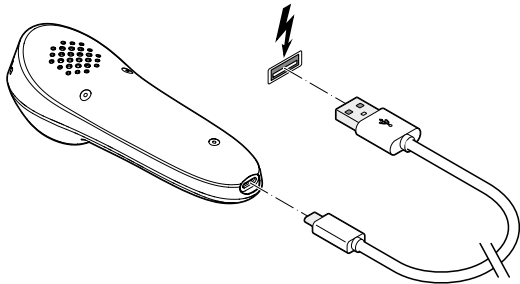

1. Connect the USB charging cable to the device and a USB mains adapter (not included).
2. Plug the mains adapter into a power socket.

The device will start to charge automatically.

The charging indicator light flashes red while the device is charging.

Now fully charge the battery for approx. 2 to 3 hours.

Once the battery is fully charged, the charging indicator light turns a steady blue.

3. When the device is charged, remove the mains adapter from the power socket and disconnect the USB charging cable from the device. The charging indicator light goes out.

The facial massager is now ready for use.

You can use the device for approx. 45 minutes when the battery is fully charged. You will then have to charge the battery again for approx. 2 to 3 hours.



- You cannot use the device while it is charging.
- To preserve the rechargeable battery's full capacity, you should recharge the battery every 2 to 3 months, even if you do not use the product.
- Charge the battery at a temperature of +10 °C to +40 °C.

Use



WARNING - risk of injury

- Temperatures of 42 °C and above can lead to burn injuries! Therefore do not hold the facial massager in one place for too long when the warming function is active.




- Only use the facial massager briefly at first in order to keep any reactions to a minimum.
- Facial massage treatment should not exceed five minutes. After approx. 2.5 minutes the facial massager switches off automatically.
- Use the massager no more than twice a day.
- Do not use the warming function or the combined warming and sonic vibration function if you are wearing make-up. If there is make-up (foundation, powder,

concealer, etc.) on your skin, it will be slightly liquefied by the heat. The subsequent warming treatment will force the mixture of make-up particles, sebum and dirt deep into the pores, which are now wide open. The result will be clogged pores, which can lead to black-heads and spots.

- People with sensitive skin may experience a reaction such as swelling or irritation of the skin. If this applies to you, test the device on a less sensitive area first, such as the inside of your forearm.

1. Start by thoroughly cleansing your skin to remove any make-up, dirt and excess sebum. Then dry your face thoroughly.
2. Apply a high-quality serum, facial oil or moisturiser. This ensures that the device will glide gently over the skin and the valuable active ingredients are effectively absorbed by the skin.

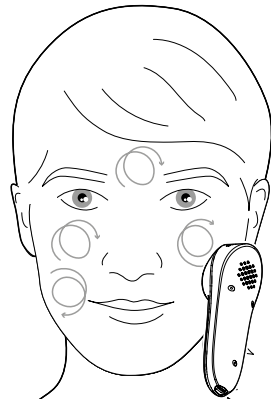

3. Switch on the warming function and, if required, the sonic vibration function (see chapter "Switching on and off/switching modes"), depending on how comfortable you feel, and move the message head in circular movements from the centre to the edge of your face.
4. Now switch on the cooling function and, if required, the sonic vibration function and move the message head in circular movements from the centre to the edge of your face.


After the treatment, you can apply your make-up as usual.

After use

- ▷ Clean the device, in particular the message head, after each use as described in the chapter "Cleaning".

Switching on and off/switching modes




You can cycle through the functions in the following order by briefly pressing the  button:
warm -> warm + sonic vibration function ->
cold -> cold + sonic vibration function

Switching the device on

Warming function (42 °C)


The warming treatment at 42 °C can stimulate blood circulation in the skin, open the pores and increase the absorption of active ingredients.

- ▷ To switch the massager on, press and hold the  button for approx. 3 seconds.

The indicator light HOT will light up in red. The massage head will be warm and ready for use after 3 seconds.


Combined warming and sonic vibration function

The sonic vibration function massages and soothes the skin.


- ▷ Press the  button again to switch on the sonic vibration function in addition to the warming function. The HOT indicator will light up red and the SONIC indicator will light up yellow. The massage head is warm and vibrates.

Cooling function (6 °C)

The cooling treatment at 6 °C can minimise the pores, tighten the skin and reduce wrinkles and swelling.

- ▷ Press the  button again to switch on the cooling function. The indicator light COOL will light up in blue. The massage head will be cool and ready for use after 3 seconds.

Combined cooling and sonic vibration function

- ▷ Press the  button again to switch on the sonic vibration function in addition to the cooling function. The COOL indicator will light up blue and the SONIC indicator will light up yellow. The massage head is cool and vibrates.

Switching the device off



You can switch off the facial massager at any time, regardless of which function you have currently set.

- ▷ Press and hold the  button for approx. 3 seconds to switch off the facial massager.

Automatic switch-off

 


After approx. 2.5 minutes the facial massager switches off automatically.

Cleaning and storage

NOTICE - material damage

- The facial massager must not be immersed in water or any other liquids. Protect it from the ingress of moisture.
- Do not use any caustic, aggressive or abrasive products for cleaning.
- ▷ Switch the device off before cleaning it.
- ▷ Wipe the message head clean with a soft, damp cloth as necessary. Make sure that no moisture gets into the device.
- ▷ Wipe the handle clean with a soft, damp cloth as required.
- ▷ If necessary, recharge the battery before putting the device away. Then it will be ready to use straight away next time.
- ▷ Store the device in the supplied storage bag in a dry place out of the reach of children.

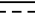Technical specifications

Model:	717 936
Input:	5 V  1 A (the  symbol stands for direct current)
Rechargeable battery:	Lithium-ion, 3.7 V 800 mAh Watt-hour rating: 2.96 Wh (tested as per UN 38.3) (non-replaceable)
Charging time:	approx. 2-3 hours
Max. operating time (with fully charged battery):	approx. 45 minutes
Protection class:	III 
Power consumption in off mode:	0.2 W
Mains adapter (not included):	
Input:	AC 100-240 V 50/60 Hz
Output:	DC 5 V 1 A
Ambient temperature:	+10 to +40 °C
Made exclusively for:	Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany

Disposal

The product, its packaging and the built-in rechargeable battery have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment. Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Devices, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste! You are legally obliged to dispose of old devices separately from household waste.

Electronic devices contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old devices can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal. Warning! This device contains a rechargeable battery that for safety reasons is firmly built into the device and cannot be removed without destroying the casing. Improper disassembly leads to safety hazards. Therefore, bring the device intact to a collection point where the device and battery will be disposed of properly.