


# Cordless Vacuum Cleaner

en Instructions for use

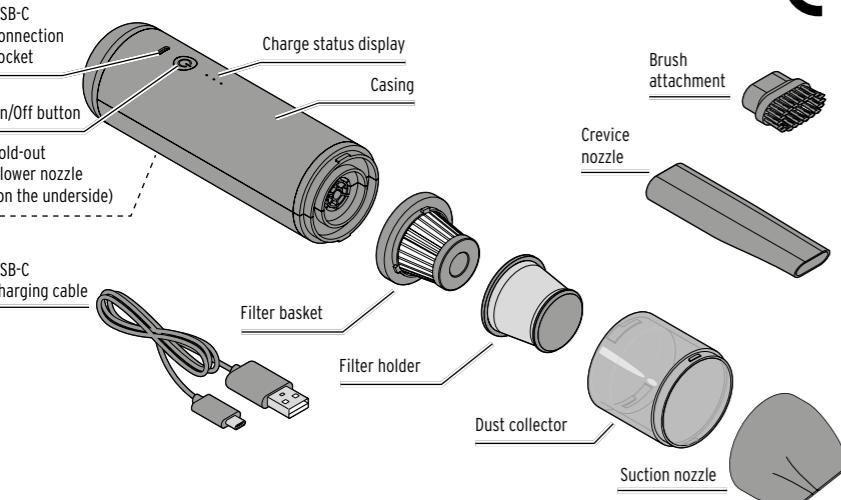

## Safety warnings

This product is equipped with safety features.

Nevertheless, read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage.

Keep these instructions for future reference.

If you give this product to another person, remember to also include these instructions.

### Intended use

- The cordless vacuum cleaner is designed for vacuuming up dust, dirt and crumbs on smaller surfaces such as in cars, on desks, in PC keyboards, etc. It is not intended for cleaning larger areas or for extended use.
- The product is intended for private use and is not suitable for commercial purposes.

### Danger to children and to people with limited ability to operate appliances

- This appliance may be used by children aged 8 and over, and by persons with reduced physical, sensory or mental capacities or a lack of sufficient experience and/or knowledge, provided they are supervised or have been trained in the safe use of the appliance and understand the potential dangers. Cleaning of the appliance must not be carried out by children without supervision. Children must not be allowed to play with the appliance.

### Warning - hazards resulting from misuse

Never vacuum up the following:

- glowing ash, cigarette butts, matchsticks, etc.: risk of fire!
- toner for printers: risk of fire/explosion!

## Danger - risk of injury

- When using the cordless vacuum cleaner in the car: Do not leave the appliance lying around in the car when not in use. It could fly uncontrollably through the inside of the car during extreme driving manoeuvres. Secure the appliance, e.g. in the boot, or keep it at home.
- Make sure that nobody trips over the USB-C charging cable when charging the appliance.
- Never use the vacuum cleaner on people or animals. Always keep hair, parts of the body and items of clothing such as shoe laces and scarves away from the suction opening. Never attempt to remove a blockage when the vacuum cleaner is in operation.
- The appliance must not be connected to the power source via the USB-C charging cable during use, cleaning and when removing the dust collector.


### Material damage

- Do not overheat the cordless vacuum cleaner. Switch it off after max. 12 minutes and leave it to cool down for approx. 30 minutes.
- Ensure that the ventilation slits on the appliance are not covered by dust or similar substances.
- Avoid storing, charging and using the vacuum cleaner at extreme temperatures and extremely low air pressure (e.g. at high altitudes).
- Only ever carry the vacuum cleaner by the handpiece itself, not by the blower nozzle.
- The vacuum cleaner may only be used when fully assembled and with the filter inserted.

The indicator light is lit up continuously - fully charged  
The indicator light is flashing - charging  
The indicator light is out - not yet fully charged  
The vacuum cleaner is fully charged when all three indicator lights light up continuously.

### Using the brush attachment


Use the brush attachment for upholstery and for sensitive surfaces.

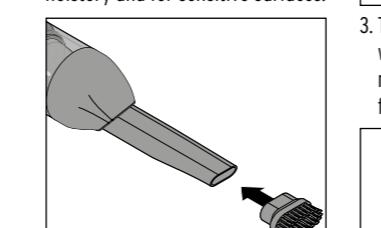

► Push the brush attachment onto the crevice nozzle as far as it will go, as shown.

### Using the blower nozzle


With the blower nozzle, you can blow dust and dirt out of every little corner.

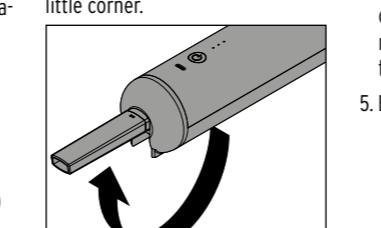

► Fold the blower nozzle (on the underside of the appliance) upwards as far as it will go until you hear and feel it click into place.

## Charging the battery

- Remove all packaging materials prior to first use.
- The battery is not fully charged upon delivery. To reach the battery's maximum charging capacity, charge the appliance fully before using it for the first time.

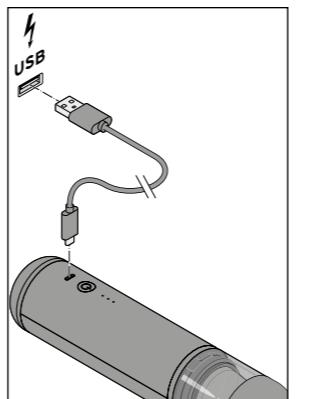

### Switching on/off / Increasing suction power

► Press the On/Off button ...

- ... 1x to switch the vacuum cleaner on.
- ... 2x to increase the suction power.
- ... 3x to switch the vacuum cleaner off.

### Using the crevice nozzle

Use the crevice nozzle for all corners, angles and hard-to-reach places that cannot be reached with the normal suction nozzle.

► During the charging process, the indicator lights on the charging status display show the current capacity of the vacuum cleaner:

- ○ ○

● ○ ○

● ● ●

display

the

current

capacity

of

the


vacuum

cleaner:

The indicator light is lit up continuously - fully charged  
The indicator light is flashing - charging  
The indicator light is out - not yet fully charged  
The vacuum cleaner is fully charged when all three indicator lights light up continuously.

### Using the brush attachment


Use the brush attachment for upholstery and for sensitive surfaces.

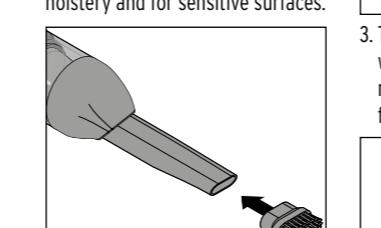

► Push the brush attachment onto the crevice nozzle as far as it will go, as shown.

### Using the blower nozzle

With the blower nozzle, you can blow dust and dirt out of every little corner.

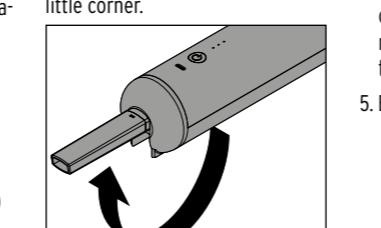

► Fold the blower nozzle (on the underside of the appliance) upwards as far as it will go until you hear and feel it click into place.

## Cleaning the appliance

### Cleaning the brush attachment and crevice nozzle

- Switch off the appliance and remove the crevice nozzle and, if necessary, the brush attachment from the appliance.
- Remove hair or other dirt from the brush attachment or crevice nozzle.
- Wipe the brush attachment and the crevice nozzle with a slightly damp, lint-free cloth.
- Take the filter out of the dust collector.
- Wipe the dust collector out with a damp cloth if necessary.

### Emptying and cleaning the dust collector

**NOTICE - material damage**  
The appliance must not be switched on when you remove the dust collector.

Empty the dust collector regularly to avoid a decrease in suction, overheating of the appliance and excessive dirt in the filter.

- Switch off the vacuum cleaner.
- Hold the vacuum cleaner with the dust collector facing downwards.

► It is best to remove the dust collector directly over a bin.



► Insert the crevice nozzle, wider opening first, into the suction nozzle as far as it will go.

### Using the brush attachment

Use the brush attachment for upholstery and for sensitive surfaces.





► Push the brush attachment onto the crevice nozzle as far as it will go, as shown.

### Using the blower nozzle


With the blower nozzle, you can blow dust and dirt out of every little corner.

► Fold the blower nozzle (on the underside of the appliance) upwards as far as it will go until you hear and feel it click into place.

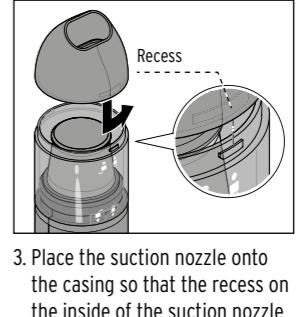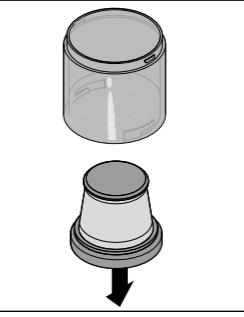


- Place the suction nozzle onto the casing so that the recess on the inside of the suction nozzle points to the symbol on the dust collector. Then turn the suction nozzle anti-clockwise so that it points to the symbol (see illustration).

### Cleaning the filter

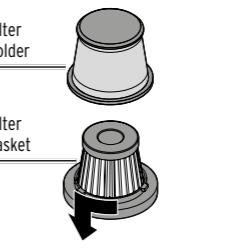


- Turn the filter basket clockwise as far as it will go and pull the filter basket out of the filter holder.

► If necessary, wipe the casing with a slightly damp, lint-free cloth.

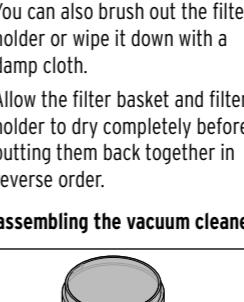


- Tap out the filter basket and the filter holder over a waste bin. You can also brush out the filter holder or wipe it down with a damp cloth.

3. Allow the filter basket and filter holder to dry completely before putting them back together in reverse order.

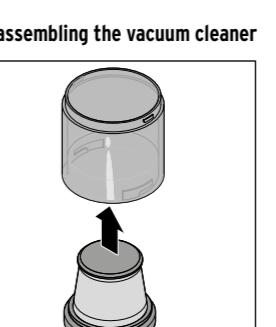

- Put the filter into the dust collector.

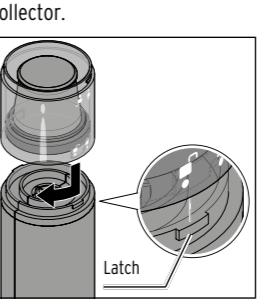

- Turn the dust collector anti-clockwise as far as it will go and remove the dust collector from the casing.
- Empty the dust collector.
- Place the dust collector onto the casing so that the latch on the casing points to the symbol on the dust collector. Then turn the dust collector clockwise so that it points to the symbol (see illustration).
- You must hear and feel the dust collector click into place.

## Cordless vacuum cleaner

Max. suction: 5.5 kPa  
Sound level: approx. 80 dBA  
Operating time (if the battery is fully charged)  
normal suction: approx. 25 min.  
high suction: approx. 14 min.  
Storage capacity, dust collector: approx. 150 ml  
Ambient temperature: +10 to +40 °C  
Manufactured by: Jaxmotech GmbH, Ostring 60, 66740 Saarlouis, Germany, info@jaxmotech.de

## Disposal

The product, its packaging and the built-in rechargeable battery have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the packaging at a recycling point which sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.

Appliances, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste! You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities.

Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities.

**Warning!** This appliance contains a rechargeable battery that, for safety reasons, is firmly built into the appliance and cannot be removed without destroying the casing. Improper disassembly leads to safety hazards. For this reason, take the appliance intact to a collection point where the appliance and battery will be disposed of properly.

Product number: 726 686