 


# Automatic Curling Iron

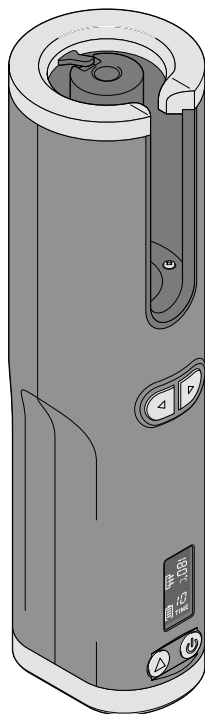

## Dear Customer

Simply press the button and your new curling iron gathers up your hair and creates effortless curls!

Your new cordless curling iron is the ideal travelling companion thanks to its compact design.

The ceramic coating on the heating element ensures that the curling iron is kind and gentle to your hair.

The direction of the curling iron can be set for use in either hand, helping you to achieve the perfect look.

We hope you enjoy using your new curling iron.

---

## Contents

<b>3</b>	<b>About these instructions</b>	14	Styling your hair
<b>4</b>	<b>Safety warnings</b>	17	After use
		17	Automatic switch-off function (safety switch)
<b>10</b>	<b>At a glance (features)</b>		
<b>11</b>	<b>Charging the battery</b>	<b>17</b>	<b>Cleaning and storage</b>
<b>12</b>	<b>Use</b>	<b>19</b>	<b>Technical specifications</b>
12	Switching on the appliance and selecting settings	<b>20</b>	<b>Disposal</b>

---

## About these instructions

This product is equipped with safety features. Nevertheless, read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage.

Keep these instructions for future reference. If you give this product to someone else, remember to also include these instructions.

Symbols in these instructions:



This symbol warns you of the danger of injury.



This symbol warns you of the danger of injury caused by electricity.



This symbol warns you of the danger of injury caused by hot surfaces.



This symbol prohibits use/charging in the immediate vicinity of showers, bathtubs, washbasins or other sources of water.

The term **DANGER** warns of potential severe injury and danger to life.

The term **WARNING** warns of injury and severe material damage.

The term **CAUTION** warns of minor injury or damage.



This indicates additional information.

## Safety warnings

### **Intended use**


- The product is intended for styling human head hair. It is not suitable for use on pets. Do not use it on artificial hair.
- The product is suitable for use in dry, indoor rooms .
- The product has been designed for private use only and is not suitable for commercial purposes.

### **DANGER to children and to people with restricted ability to operate devices/appliances**

- This appliance can be used by children aged 8 and over and by people with reduced physical, sensory or mental capabilities or a lack of experience and/or knowledge, provided they are supervised or have been trained in the safe use of the appliance and understand the potential dangers. Children must not be allowed to play with the appliance. Cleaning and maintenance must not be carried out by children without supervision.

- Keep the packaging material out of the reach of children. It poses several risks, including the risk of suffocation!

## **DANGER due to electricity**

- The product must only be charged in dry, indoor rooms. To charge the appliance, use a suitable USB mains adapter (see “Technical specifications”, not included) and only the micro-USB charging cable provided.
- Do not use or charge the appliance near water. The appliance must not come into contact with water or other liquids while it is connected to the power supply. Do not submerge the product in water or other liquids while it is charging, as this poses a risk of electric shock.
-  Warning - Do not use the appliance near bathtubs, shower units, over wash basins or any other receptacles filled with water.
- If the appliance falls into water while it is charging, do not reach for it! Unplug the mains adapter from the wall socket immediately. Allow the appliance, the micro-USB charging cable and mains adapter to dry

thoroughly before plugging the mains adapter into the wall socket again.

- The appliance must not be charged outdoors or in rooms with high humidity.
- Never touch the micro-USB charging cable or the mains adapter with damp hands when plugging the mains adapter into, or unplugging it from, the wall socket.
- Do not use the appliance with damp hands or while standing on a damp floor.
- Only use the appliance on dry hair. The hair must not be damp or wet.
- Pull the mains plug out of the wall socket if disturbances occur while charging, once the appliance is fully charged, during thunderstorms, and before cleaning the appliance.
- Position the micro-USB charging cable so that the appliance cannot be accidentally pulled down by it.
- The micro-USB charging cable must not be kinked or crushed. Keep the cable away from hot surfaces and sharp edges.

- Do not switch on the appliance if it has visible signs of damage or has fallen down.
- If the micro-USB charging cable or mains adapter is damaged, do not continue using them to charge the appliance.
- Do not make any modifications to the product. Do not open the casing. To avoid hazards, only have repairs to the appliance carried out by a specialist workshop.

### **WARNING - risk of burns**

- The appliance heats up very quickly. The heating element in the appliance becomes very hot during use. Make sure that you keep enough distance between the appliance and your scalp, ears and face. Do not touch the heating element. Hold the appliance only from its narrower section.
- Allow the appliance to cool completely before cleaning it or putting it away.
- Leave your hair wrapped around the heating element for a maximum of 18 seconds. Do not go over the same section of hair several times in a row. You may otherwise damage your hair.

## **WARNING – fire hazard**

- You must not remove or replace the rechargeable battery by yourself. Improper removal or replacement of the rechargeable battery may result in a risk of explosion! The rechargeable battery may only be replaced with a battery of the same or a similar type. If the rechargeable battery is faulty, consult a specialist workshop.
- The heating element in the appliance becomes very hot. While heating up and after use, position the appliance so that the heating element is not able to come into contact with any other objects until it has cooled down sufficiently. Ensure that any surface on which the appliance is placed is heat-resistant.
- Never leave the appliance unattended while switched on, or when it is heating up or cooling down.
- Do not cover the appliance (e.g. with a towel) while it is switched on or the heating element is still hot.




## **WARNING - risk of injury**

- The appliance contains a permanently installed lithium-ion rechargeable battery. Do not throw the appliance into a fire. Risk of explosion!

## **CAUTION - material damage**

- Do not use any caustic or abrasive products, or hard brushes, etc. for cleaning. Make sure that no moisture gets into the appliance while cleaning it.

## At a glance (features)

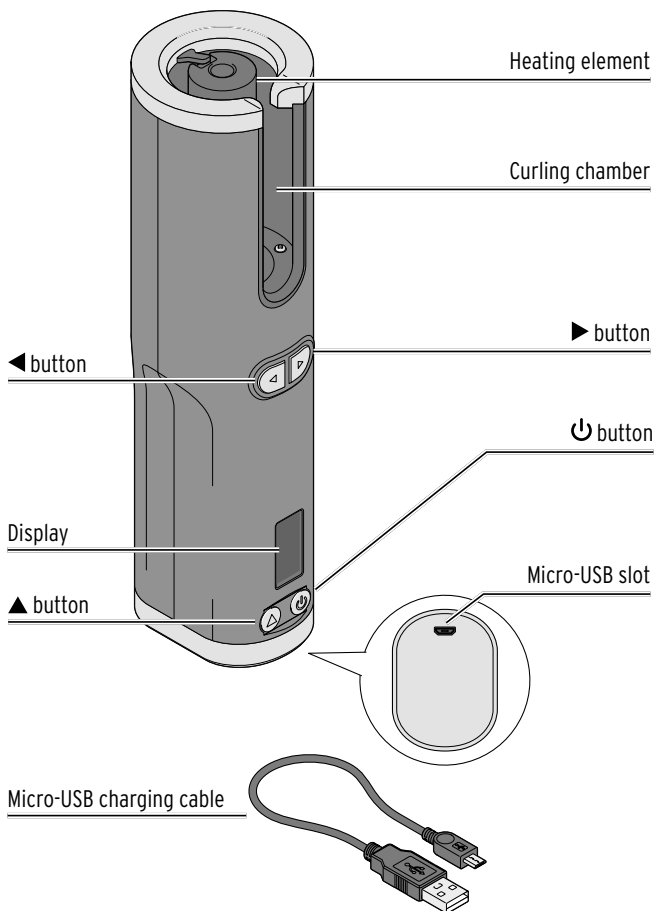


## Charging the battery

Before using the appliance for the first time, the battery must be fully charged. Do not use the appliance while it is charging.



**DANGER** - risk of fatal electric shock

- Do not charge the appliance directly next to or over a washbasin filled with water.

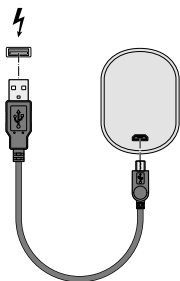

1. Connect the micro-USB charging cable to the appliance and to the USB port of a suitable mains adapter (see “Technical specifications”).



While the appliance is charging, the progress is shown on the display by the flashing bar of the battery symbol.

As soon as the rechargeable battery is fully charged, the battery symbol lights up permanently.

2. When the appliance is charged, remove the mains adapter from the wall socket and disconnect the micro-USB charging cable from the appliance.

The display will extinguish. The curling iron is now ready to use.


Charging takes approx. 4 hours. When fully charged the appliance can be used for approx. 40 minutes at a temperature of 180 °C (360 °F) .



To preserve the battery's full capacity, the battery should be recharged every 2 to 3 months even if the appliance is not being used. Charge the battery at a temperature of +10 °C to +40 °C.

When the rechargeable battery is empty, the appliance will beep twice and then switch off.

## Use


-  When using the appliance for the first time, there may be a slight odour; however, this is not a fault. Ensure there is adequate ventilation.

### Switching on the appliance and selecting settings




#### **WARNING** - risk of fire/burns



- The heating element in the appliance becomes very hot. Do not touch the heating element.
- While heating up and after use, position the appliance so that the heating element is not able to come into contact with any other objects until it has cooled down sufficiently. Ensure that any surface on which the appliance is placed is heat-resistant.

1. To switch on the appliance, press and hold the  button for approx. 2 seconds.



You will hear a beep and the display will light up. The set temperature will flash up three times and then glow continuously. The heating up symbol will flash, the appliance will heat up.

-  The settings which you choose will be saved and will automatically reappear the next time you switch on the appliance.





2. By pressing the  button briefly, you can have first the temperature setting, then the timer, then the unit of temperature displayed.
3. Use the  button to choose the settings you wish to use:

**Temperature:** 160 °C, 180 °C, 200 °C or  
320 °F, 360 °F, 390 °F.

**Timer:** TIME and 6, 8, 10, 12, 14.

**Temperature unit:** °C or °F

**i** If you have set the timer to 8, for example, the appliance styles the section of hair for 8 seconds.

<b>loose</b>	<b>tight</b>	Set the timer according to whether you wish to create loose or tight curls.	<b>right</b>	<b>left</b>	Press the ◀ button to create curls that turn to the left.  Press the ▶ button to create curls that turn to the right (see section "Styling your hair").
					
<b>Loose curls</b>					
A few seconds					
<b>Tight curls</b>					
Several seconds					

**i** To protect your hair, always start with the lowest temperature setting, and then increase the temperature only if needed. The lighter, thinner or more sensitive the hair is, the lower the temperature should be to protect the hair. This also applies for bleached or coloured hair. A higher temperature can be selected for very thick, curly hair. Spend a little time experimenting to find out what effect the different settings have on your hair. The outcome will also depend on the length of your hair.

- ▷ Press the ⏻ button to finish setting the appliance.
- ▷ The heating process will begin automatically.

**i** If no buttons are pressed for 4 seconds, the appliance will exit the settings mode.



The “heating up” symbol will flash in the display while the appliance is heating up.

Once the appliance has reached the selected temperature, you will hear two beeps and the “heating up” symbol will light up permanently.

## Styling your hair



### **WARNING** - risk of burns

- The heating element in the appliance becomes very hot during use. Make sure that you keep enough distance between the appliance and your scalp, ears and face.
- Do not touch the heating element. Hold the appliance only from its narrower section.
- Leave your hair wrapped around the heating element for a maximum of 18 seconds. Do not go over the same section of hair several times in a row. The hair could otherwise become damaged.



As your hair comes into contact with extremely high temperatures when styling it, keep the following in mind:

- When choosing a shampoo or other hair care products, check that they will moisturise your hair.
- Use a heat-protection product before styling your hair with the appliance. Suitable products are available from your hairdresser or from a health and beauty retailer.
- Do not use any other styling products before using the curling iron.
- Hair should be clean and dry before you begin styling.  
Hair must never be wet!

1.



Comb your hair through first to get rid of any knots, etc. If your hair is thick, it may be helpful to divide it into manageable sections and then secure them with hair clips. Ensure that the section of hair you take is no more than 2 cm wide.

2.



Place the section of hair into the curling chamber close to the root. Hold the appliance vertically as illustrated.



Please note that the hair above the curling chamber is not curled.


3. Press and hold the ◀ or the ▶ button, depending on the direction you want your hair to be curled in. You will hear a beep and the section of hair will be wound into the curling chamber.

The appliance will now begin to curl your hair.

4. Hold the appliance in place and release the ◀ or ▶ button.

When the set time expires, the appliance will emit two beeps.

The styling process is finished and your hair will be curled.

-  Remove the appliance, as described below, as soon as you hear the two beeps as the appliance will remain very hot.

- 5.



Slowly and carefully move the appliance **downwards** to release the section of hair. Your hair will be hot after styling. Handle it with care.

- ▶ If you find it difficult to release the section of hair from the appliance, press the ◀ or ▶ button to turn the heating element **in the opposite direction**.

6. Repeat these steps section by section.

7. Use suitable styling products as required to finish your hairstyle.





If there is too much hair or a foreign object in the curling chamber, the appliance will not work and you will hear extended beeping signals. In such circumstances, release the ◀ or ▶ button and remove the appliance from your hair or remove the foreign object. Try curling your hair again, this time using a smaller section.

### After use

- ▶ To switch off the appliance, press and hold the ⏻ button for approx. 2 seconds.

You will hear a beep and the display will go out.

Leave the curling iron on a heat-resistant surface to cool down completely.

### Automatic switch-off function (safety switch)

If no buttons are pressed for 8 minutes then the appliance will switch off automatically.

Allow the appliance to cool off completely before storing it away.

---

## Cleaning and storage



### **DANGER** - risk of fatal electric shock

- Do not submerge the appliance in water or other liquids, as this poses a risk of electric shock.
- Switch off the appliance before cleaning it.



### **WARNING** - risk of fire/burns


- Allow the appliance to cool down completely before cleaning it, recharging it or putting it away.

**CAUTION** - material damage

- To avoid damaging the coating on the heating plates, do not use any caustic or abrasive products, or hard brushes, etc. to clean the appliance.

- ▷ To clean the appliance, wipe it down as required using a soft, slightly dampened cloth. Make sure that no moisture gets into the appliance.
- ▷ If necessary, recharge the battery before putting the appliance away. Then it will be ready to use straight away next time.
- ▷ Store the appliance in a dry place out of the reach of children.

## Technical specifications

Model:	AS 222
Product number:	617 832
Rechargeable battery:	Lithium ion 3.65 V $\text{---}$ 4000 mAh (tested as per UN 38.3) (the $\text{---}$ symbol stands for direct current)
	Watt-hour rating: 9.49 Wh
USB input:	5 V $\text{---}$ 2 A
Charging time:	approx. 4 hours
Max. operating time:	approx. 40 minutes (when fully charged and at a temperature of 180 °C /360 °F)
Protection class:	III 
Power:	30 W
Ambient temperature:	+10 to +40 °C
Manufactured by:	Jaxmotech GmbH Ostring 60 66740 Saarlouis Germany

In the course of product improvement, we reserve the right to make technical and optical modifications to the product.




# Disposal

This product and its packaging have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and helps to preserve the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



**Appliances** marked with this symbol must not be disposed of along with normal household waste!

 You are legally obliged to dispose of appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities.



**Single-use batteries and rechargeable batteries**

must not be disposed of along with household waste!

You are legally bound to dispose of flat standard batteries and flat rechargeable batteries at a local authority collection point or to return them to a battery retailer.

**Warning!** This appliance contains a battery that for safety reasons is firmly built into the appliance and cannot be removed without destroying the casing. Improper disassembly leads to safety hazards. Therefore, bring the appliance intact to a collection point where the appliance and battery will be disposed of properly.