


Tchibo

Cordless steam iron

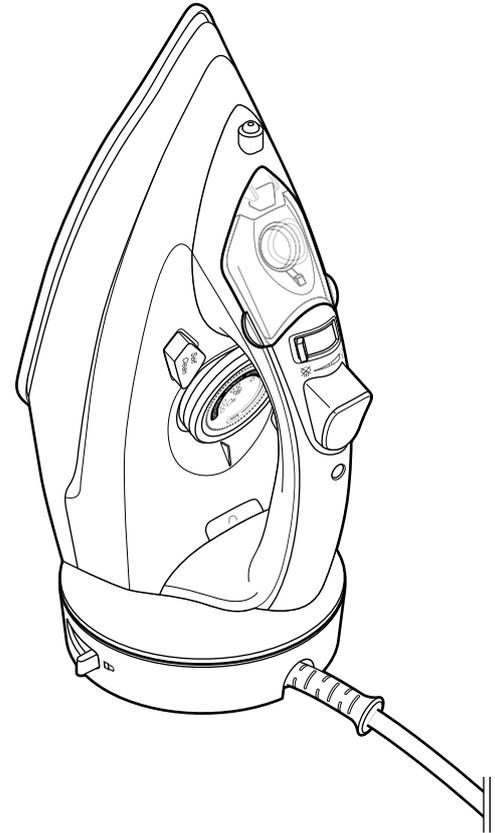

en Instructions for use and warranty

Dear Customer

Your new steam iron can be used with or without a cable. It thus allows you to move around freely and to quickly and easily access every corner and wrinkle in the garment you want to iron.

Your new iron can be used to iron clothes with or without steam.

You can also smoothen hanging garments or textiles. You therefore no longer need to take down your curtains to iron them and can easily remove wrinkles from jackets or trousers that are hung up.

We hope you will be entirely satisfied with your new cordless steam iron.

Your Tchibo Team



www.tchibo.de/instructions

Please enter the product number in the box labelled "Bedienungsanleitungssuche" and click on "Suchen")

Contents

3	About these instructions	12	Cleaning
		12	Using the self-cleaning function
3	Safety warnings	13	Problems / solutions
		13	Cleaning the iron
		13	Storage
6	At a glance (features)	14	Technical specifications
7	Preparing the iron for first-time use	14	Disposal
7	Unpacking the iron	15	Warranty
7	Removing polish residue	15	Service and repair
7	Filling the water tank	15	Customer care service
8	Setting the temperature		
9	Ironing		
9	Switching on the iron		
9	Ironing with the mains cable		
9	Cordless ironing		
10	Dry ironing		
10	Steam ironing		
11	Ironing with the steam jet		
11	Spraying water		
11	Ironing hanging fabrics		

About these instructions

This product is equipped with safety features. Nevertheless, read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage.

Keep these instructions for future reference. If you give this product to another person, remember to include these instructions.

Symbols used in these instructions:



This symbol warns you about the risk of injury.



This symbol warns you about the risk of injury caused by electricity.

Signal words used in these instructions:

DANGER warns about the imminent risk of serious or fatal injury.

WARNING warns about the potential risk of serious or fatal injury.

CAUTION warns about the potential risk of minor injury.

NOTICE warns about the potential risk of material damage.



This indicates additional information.

Safety warnings



Intended use

- This iron is designed for ironing standard fabrics.
- This iron must only be used in conjunction with the base provided.
- The product is suitable for use in dry indoor rooms. Do not use it outdoors or in rooms with high humidity.
- The product is designed for private use and is not suitable for commercial purposes.

Danger to children and people with limited ability to operate appliances

- This appliance may be used by children aged 8 and over and by people with
 - ... reduced physical, sensory or mental capabilities or
 - ... a lack of sufficient experience and/or knowledge, provided that they are
 - ... supervised or
 - ... have been instructed in the safe use of the appliance and
 - ... understand the potential dangers.Cleaning and maintenance must not be carried out by children without supervision. Children must not be allowed to play with the appliance. From the time the appliance is switched on until it has fully cooled down, the iron, its base and its mains cable must be kept out of the reach of children under the age of 8.
- Keep the packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

Danger due to electricity

- Do not use the appliance if the appliance itself or its mains cable show visible signs of damage, if the appliance has fallen down or if water is leaking out. If you find that the mains cable, plug, casing or any other part shows signs of damage, cease using the iron until the damage has been properly repaired.
- Do not use the appliance if the contact to the power supply on the iron or base has come into contact with water. Leave the contact to the power supply on the iron and base to dry completely before you use the appliance again.
- Do not make any modifications to the product. Do not attempt to replace the mains cable yourself. If the mains cable is damaged, it must be replaced by the manufacturer, our customer service, or a similarly qualified person in order to avoid hazards. Have repairs to the appliance carried out only by a specialist workshop, our customer care service, or a similarly qualified person. Improper repairs can result in considerable risks to the user.
- Disconnect the mains plug from the power socket ...
 - ... before filling the water tank with water or emptying it,
 - ... when you are not using the appliance,
 - ... whenever you take a break from ironing, however brief,
 - ... if malfunctions occur during use,
 - ... after use,
 - ... during thunderstorms and
 - ... before cleaning the appliance.
- Always turn the temperature dial anticlockwise as far as it will go and place the iron onto its base before pulling the mains plug out of the power socket. To unplug, always pull on the plug, not the cable.
- Only connect the appliance to a properly installed, earthed power socket with a mains voltage that complies with the technical specifications of the product.
- The iron can be filled with water, but it must never be immersed in water or other liquids. Otherwise there is a risk of electric shock. If water accidentally runs over the iron while you are filling the water tank, you must not plug it in until it has dried completely.
- Do not touch the product with wet hands.
- The mains cable must not be kinked or crushed. Keep the mains cable away from the hot soleplate, other sources of heat and sharp edges.
- Always fully unwind the mains cable before using the iron and allow the iron to cool before winding up the cable again.
- Ensure that the power socket is easily accessible to allow the mains plug to be disconnected quickly if need be. Route the mains cable in such a way as to ensure that there is no danger of tripping over it.
- Should it be necessary to use an extension cable, then such cable must comply with the “Technical specifications” of the product. Consult a specialist retailer before purchasing an extension cable.

Warning – risk of scalds, burns and fire

- Do not leave the appliance unattended while it is connected to the power socket or while it is still hot.



Warning. Hot surface.

The heated soleplate and the escaping steam are very hot!

Touching the hot soleplate and the steam released by the iron causes burns and scalds.


- Do not turn the hot iron upside down with the soleplate facing upwards as hot water could leak out.
- Never iron garments whilst they are being worn!
- Never point the soleplate at people or animals. This is particularly important when you are using the steam jet function.
- Allow the appliance to cool completely before cleaning it.

Material damage

- The iron must be used on a stable surface and always put down on a stable, level, non-sloping surface so that it cannot fall down.
When placing the iron onto its base, also ensure that the base is standing on a stable, level, non-sloping surface.
- Fill the appliance with normal tap water only.
A special permanent filter in the water tank prevents limescale deposits. The filter cannot and must not be replaced.
Do not use distilled or demineralised water. This would damage the permanent filter and render it useless.
Do not put any chemical additions, perfumes, descalers, etc. into the water tank.


- Only iron fabrics suitable for ironing.
- Follow the instructions on the labels of the garments to be ironed. The ironing symbols shown on the temperature dial are standard care symbols. Polyacrylics, acetate-polyamide blends and similar materials must not be ironed.
- Do not scratch the soleplate. Do not scrape the soleplate over metal parts such as buttons, zip fasteners or the iron rest on your ironing board. Deep scratches in the soleplate can damage textiles.
- Always place the iron on its base after ironing. This is to prevent the soleplate from becoming scratched. Place the base on an even, level surface where both the iron and the base cannot fall down.
- Do not use abrasive or caustic products or hard brushes, etc. for cleaning.
- Some lacquers, synthetic substances or types of furniture polish may react adversely with the material of the non-slip feet and soften them, leaving unwanted traces on furniture. If necessary, place a non-slip mat under the base.

At a glance (features)

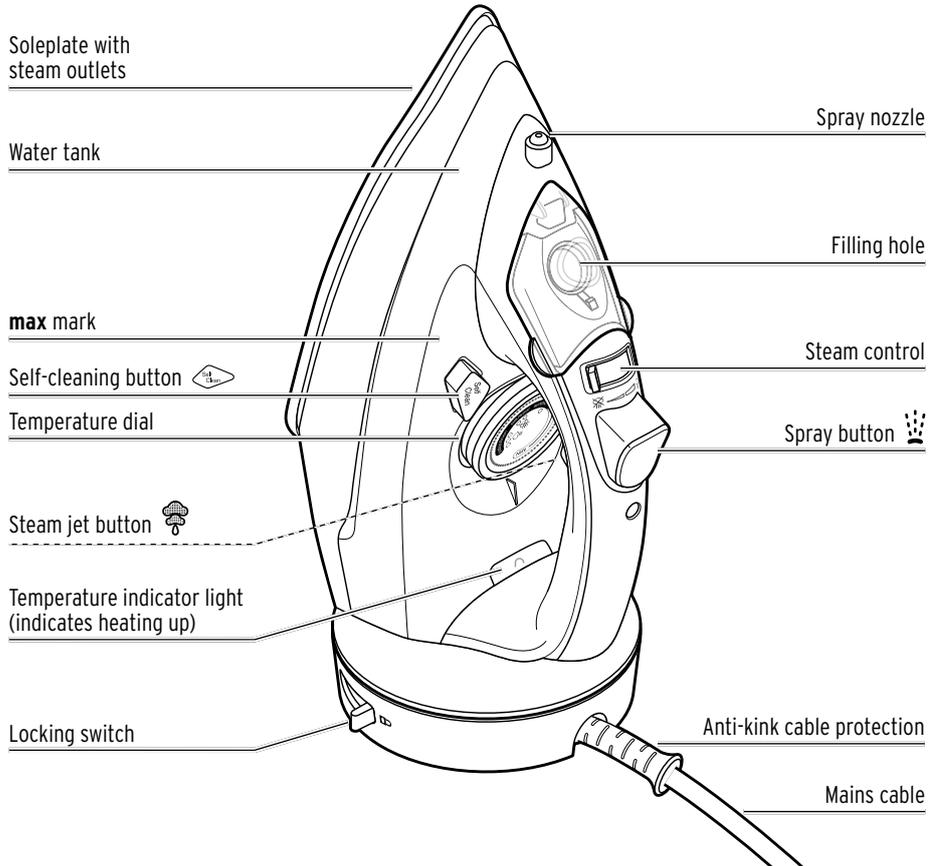

Base

Not illustrated:
Tank refill cup

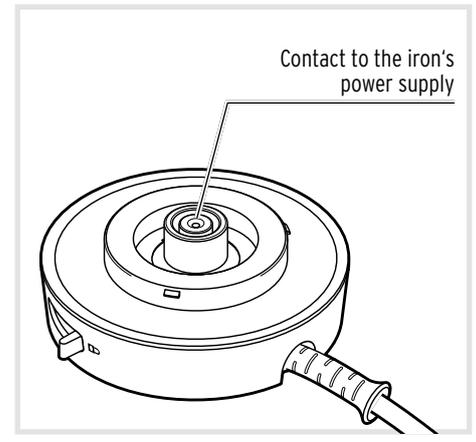

Preparing the iron for first-time use

Unpacking the iron



DANGER to children - danger to life due to suffocation/choking

Keep all packaging materials out of the reach of children.
Dispose of them immediately.

- ▷ Take the iron out of its packaging and remove all packaging materials.
- ▷ Remove the protective film from the soleplate.

Removing polish residue

Polish residue from the manufacturing process may have remained on the soleplate.

We therefore recommend first ironing an old cotton cloth or something similar to remove any polish residue before using your new iron on your laundry and clothes, etc.

1. Fill the water tank up to the **max** mark (see “Filling the water tank”).
2. Steam iron an old cotton cloth (see “Steam ironing” in the section “Ironing”) until the water tank is empty and it stops generating steam.



You may notice a slight odour the first time the appliance heats up. This is harmless. Make sure there is sufficient ventilation.

Filling the water tank



DANGER - risk of fatal electric shock

- Disconnect the mains plug from the power socket before filling the tank with water or emptying it.
- If water accidentally splashes over the iron while you are filling the water tank, you must not plug it in until it has dried completely.

To be able to use the steam or spray functions, you have to fill the water tank.

NOTICE - material damage

- Fill the appliance with normal tap water only. A special filter in the water tank prevents limescale deposits. This is a permanent filter that cannot and must not be replaced. Do not use distilled or demineralised water. Doing so would damage the permanent filter and render it useless.
- Do not put any chemical additions, perfumes, descalers, etc. into the water tank.

1. Take the iron off the base by setting the locking switch to . This is the optimal position to be able to see the water level.

2.  Slide the steam control to the  symbol. On this control setting no steam comes out.



3. Open the closure on the filling hole.
4. Fill the tank refill cup with max. 200 ml water.
5. Pour the water through the filling hole into the water tank.

You must not exceed the **max** mark on the water tank.

- ▷ If there is too much water in the tank, pour the excess away.
Do so by turning the iron upside down.

6. Shut the closure on the filling hole.

You should feel and hear it click into place.

Setting the temperature


NOTICE - material damage

Follow the instructions on the labels of the garments to be ironed.
The ironing symbols shown on the temperature dial are standard care symbols. Polyacrylics, acetate-polyamide blends and similar materials must not be ironed.

-  Sort the clothes you want to iron beforehand. The iron heats up faster than it cools down. Therefore, start with items that need to be ironed at the lowest temperature.

- ▷ Set the temperature using the temperature dial.

The dots on the temperature dial have the following meanings:

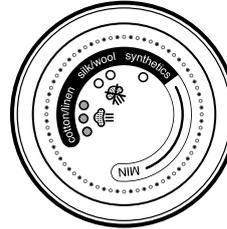

-  Man-made fibres (synthetic fibres), such as: Acrylan, Dralon, Leacryl, Orlon, acetate, acrylics, nylon. (dry iron)
-  Wool, silk and synthetic fibres, such as: Dacron, Lilion, Helion, rayon, polyester. (dry iron)
-  Textiles ironed at a high temperature, such as: cotton, linen (steam iron)

-  If you do not know the material, start ironing on a section of the fabric that is not immediately visible to test the temperature you have set.

Ironing



WARNING - risk of fire

Do not leave the appliance unattended while it is connected to the power socket or while it is still hot.

Switching on the iron

Before you can start ironing, the iron must heat up:

1. Fully unwind the mains cable and plug it into an earthed power socket.

The temperature indicator light will light up.


2. Turn the temperature dial to the desired position.

The temperature indicator light shows that the soleplate is heating up. Once the iron reaches the required temperature, the temperature indicator light will go out.



If the temperature decreases, the heating switches on again and the temperature indicator light lights up again. In this way, the soleplate always maintains the correct temperature.

Ironing with the mains cable

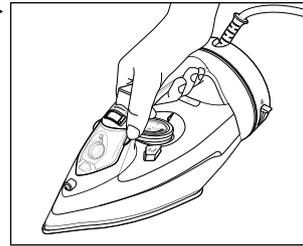

Place the iron on the base and turn the iron in the base until you hear and feel it click into place.

The base is now connected to the iron and will stay attached to the iron while ironing.

Cordless ironing

Cordless ironing is particularly convenient when ironing hard-to-reach places.




The iron cannot reheat itself without being attached to the mains cable. It has to be placed back on the base after about 30 seconds to heat up again.

The length of time for which you can iron cordlessly using the heated iron depends on the temperature dial setting and whether or not you use the steam jet function and spray.

You can remove the iron from the base as soon as the temperature indicator light goes out.

- ▷ Slide the locking switch on the base to .

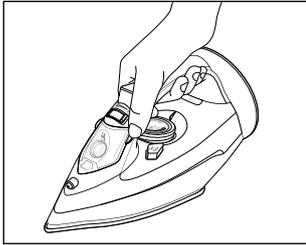

The iron can now be taken off the base.




The locking switch will automatically move back to .



Always place the iron back on the base when you pause ironing. The iron will then be heated up again automatically.

Dry ironing

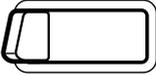1.  Slide the steam control to the  symbol.



2. Wait until the iron heats up and the temperature indicator light goes out.

Steam ironing


Steam ironing is only possible in the uppermost temperature range. This temperature setting is marked on the temperature dial by the  symbol.

1. Set the temperature dial to the marked temperature range or higher.
2. Wait until the iron heats up and the temperature indicator light goes out.


3. Slide the steam control to the desired amount of steam.



= no steam

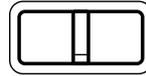

= small amount of steam

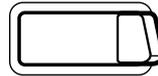

= large amount of steam




When you hold the iron horizontally, steam will come out of the soleplate.

Ironing with the steam jet

i You can iron with the steam jet even when the steam control is set to .

1. Hold the iron over the garment you wish to iron.

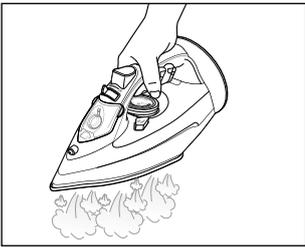2.  Press the steam jet button for a maximum of 2 seconds . A jet of steam will be emitted from the vents in the soleplate.

3. Release the steam jet button.

Spraying water

i To prevent stains, we recommend that you do not spray sensitive fabrics such as silk and synthetic fabrics with water.

You can use the spray at any time for both dry and steam ironing. It can be used irrespective of the selected temperature.

1. Point the spray nozzle at the part of the garment you wish to dampen.

2. Press the spray button .

Water is sprayed onto the garment you wish to iron.

i There might be some air in the spray nozzle. If necessary, press the spray button repeatedly.

Ironing hanging fabrics

With the vertical steam jet you can smooth virtually all garments and fabrics in your home.

Please note the following information:

- Always observe the care instructions on the label of the fabrics you wish to smooth.
 - You can use the iron on all fabrics that are marked with the care symbols for ironing   or   .
 - With sensitive fabrics such as wool, wool blends, corduroy, velvet and silk, apply the steam at some distance from the fabric.
 - Always first test the iron on a section of the fabric that is not immediately visible.
1. Fill the water tank with water (see “Filling the water tank”).
 2. Slide the steam control to its maximum setting.
 3. Turn the temperature dial to **max** and wait until the temperature indicator light goes off.
 4. Hang the garment you wish to smooth on a hanger. Hang trousers by the end of the trouser leg.

Cleaning



WARNING - risk of burns/scalds

- The emitted steam is extremely hot! Coming into contact with the hot soleplate or the emitted steam causes burns and scalds.
- Do not turn the hot iron upside down with the soleplate facing upwards as hot water could leak out.

5. Pull the fabric taut with your free hand.

6.  Take the iron from the base and hold it upright at a distance of approximately 10 - 15 cm from the fabric.

7. Press the steam jet button  for a maximum of 2 seconds.
8. Wait a few seconds before pushing the steam jet button again to allow the steam to penetrate the fabric.
9. Leave the garment on the hanger to dry.

Using the self-cleaning function

You should use the self-cleaning function at least once a month. This removes limescale build-up and dust particles from the water tank.



Depending on the amount of use and the hardness of the water, it may be necessary to use the self-cleaning function more often than once a month.

1. Fill the water tank up to the **max** mark (see "Filling the water tank").
2. Slide the steam control to .
3. Plug the mains plug into a power socket, turn the temperature dial to **max** and wait until the temperature indicator light goes out.
4. Slide the locking switch on the base to .
5. Remove the iron from the base and hold it over a sink.
6. Press and hold the self-cleaning button .
7. Water and steam will come out of the soleplate.
8. Gently shake the iron back and forth. This removes all deposits and dust particles from the water tank.
9. Release the self-cleaning button  when the water tank is empty.
10. Put the iron on the base to allow it to heat up again.
11. Remove the iron from the base again once the temperature indicator light goes out.
12. Iron a clean piece of cotton, e.g. an old towel. This will remove any last limescale deposits and dust particles from the sole plate.
13. Return the iron to the base and remove the mains plug from the power socket.

Problems / solutions

Cleaning the iron



DANGER - risk of fatal electric shock

Remove the mains plug from the power socket before cleaning the appliance.



WARNING - risk of burns

Allow the appliance to cool before cleaning it.

NOTICE - material damage

Do not use any caustic, aggressive or abrasive products for cleaning.

1. Remove the mains plug from the power socket and wait until the iron has cooled down completely.
2. If necessary, wipe the casing with a slightly dampened cloth.
3. Limescale and other deposits on the soleplate can also be removed with a damp cloth.
4. Clean the inside of the water tank from time to time by pouring a little water into the tank and gently shaking the iron. Pour out the water and let the tank dry. Remove any leftover water from the tank by pressing the spray button  a few times.

Storage

- ▷ Store the iron in an upright position.

• Not working.	• Is the iron plugged in?
	• Do other devices work using that power socket?
• No steam is coming out.	• Is the water tank empty?
	• Is the steam control set to “no steam”?
• No water is coming out of the spray nozzle.	• Is the water tank empty?
• Water drips out of the steam vents in the soleplate while steam ironing.	• Is the temperature setting too low?
	• Does the iron perhaps need to be placed on the base to heat up?

Technical specifications

Model:	726 697
Mains voltage:	220-240 V ~ 50/60 Hz
Protection class:	I
Power:	2000 - 2400 W
Ambient temperature:	+10 to +40 °C
Made exclusively for:	Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany

In the course of product improvement, we reserve the right to make technical and optical modifications to the product.



Disposal

The product and its packaging have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Appliances marked with this symbol must not be disposed of along with household waste!

You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, can cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities.

Warranty

Tchibo GmbH grants a **three-year warranty** from the date of purchase.

Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany

We will remedy all defects in workmanship or materials **within the warranty period**. In order for the warranty to be granted, all warranty claims must be accompanied by proof of purchase from Tchibo or from an authorised Tchibo distribution partner. This warranty is valid within the EU, Switzerland and Turkey.

The warranty does not cover worn parts, consumables, or damage resulting from improper use or inadequate descaling. Parts and consumables can be ordered from our customer care service.

This warranty does not restrict **statutory warranty rights**. Statutory warranty rights can be asserted free of charge.

Service and repair

If, contrary to our expectations, a defect is found, please contact our customer care service. Our customer consultants will be happy to advise you on further procedure.

If you have any questions relating to product information, ordering accessories or servicing, please contact our customer care service. Please have the product number to hand in case of any queries.

Customer care service

Email: service@tchibo.de

Product number: 726 697
