



ICEBREAKER POP® Product Guide/ Test Instruction

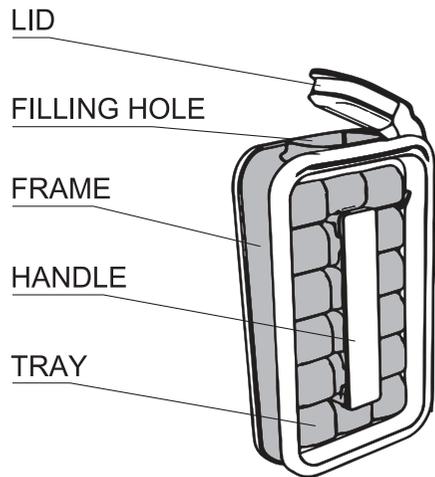

1. FILL

- Remove the LID and fill ICEBREAKER® POP with water.
- Make sure ICEBREAKER® POP is collapsed when filling with water.
- Do not fill above the MAX line which is visible in the FILLING HOLE.

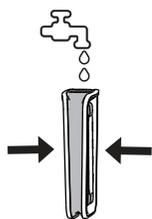


2. FREEZE

- After having filled ICEBREAKER® POP with water, put the LID back on.
- Make sure to push all the way around the LID's edge to ensure that ICEBREAKER® POP is water-tight and leakproof.
- Place ICEBREAKER® POP in the freezer for +7 hours.



3. PUSH & FLEX ⚠

- When ICEBREAKER® POP is frozen, place it on a hard surface, PUSH down on ICEBREAKER® POP several times with your palm until you hear the ice cubes CRACK.
- FLIP ICEBREAKER® POP over and PUSH down on the other side also until you hear the CRACK again.
- Repeat the two steps above until the TRAYS feel flexible and you feel that the ice connections between the ice cubes have been broken.
- By doing this, you will secure that the ice cubes do not stick together and will be easy to serve.

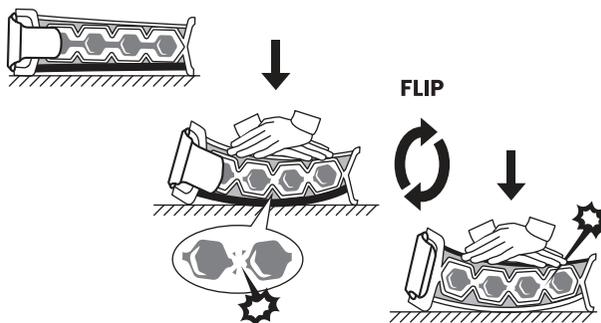


4. OPEN ⚠

- Now open the LID.
- As ICEBREAKER® POP is completely airtight, it is necessary that you open the LID before you pull the HANDLES and expand the sides. If this is not done, it is nearly impossible to expand the sides due to vacuum.




5. PULL

- Pull both HANDLES simultaneously to expand ICEBREAKER® POP and release the ice cubes inside.

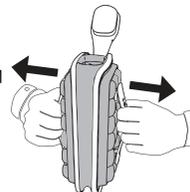


6. SHAKE

- Place the LID back on and give ICEBREAKER® POP a good shake to ensure that all ice cubes inside are separated and released from the ice tray.

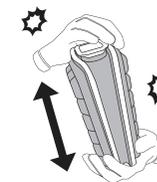

7. SERVE

- Remove the LID. Serve the desired amount of ice cubes into a glass by holding and gently shaking ICEBREAKER® POP in a 45-degree angle.
- Give ICEBREAKER® POP a more thorough shake if the filling hole becomes blocked by the ice or the ice cubes gets stuck together.

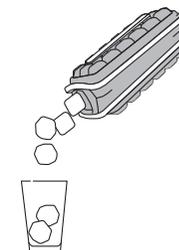

Disassembly and Cleaning

- ICEBREAKER® POP can be disassembled completely which makes it easy to clean it thoroughly.
- Remove the TRAYS on by one, by pulling at the bottom of the TRAY'S edge until the TRAY detach from the FRAME at the bottom.
- Hereafter gently pull each side of the TRAY'S edge individually to detach the TRAY completely.
- Avoid pulling the TRAY too hard from one end only, as this might damage the TRAY'S edge.
- Snap the TRAY back on by placing the tray on to the FRAME and press firmly all the way around the edge of the tray to ensure that it is correctly attached.
- If ICEBREAKER® POP leaks water from other places than the LID, the TRAYS needs to be snapped back on correctly to the FRAME to be leakproof

