 




Electric salt and pepper grinder

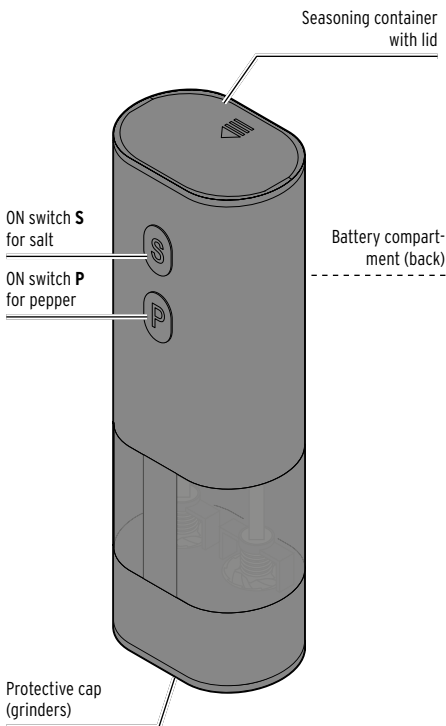

Safety warnings

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage.

Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Intended use

Your electric salt and pepper grinder is designed to grind salt crystals and peppercorns. It is not suitable for grinding other foods, such as coffee beans, nuts, etc.

The product is intended for private use and for the preparation of standard household quantities. It is not suitable for commercial use or in situations similar to home use, for example in the staff kitchens of shops, offices or other areas of commerce, in agricultural buildings, by customers in hotels, motels, bed and breakfast establishments or any other places offering accommodation.

Danger to children and people with limited ability to operate devices

- This device can be used by children aged 8 and over and by people with reduced physical, sensory or mental capabilities or a lack of experience and/or knowledge, provided they are supervised or have been trained in the safe use of the device and understand the potential dangers.

Children must not be allowed to clean the device unless they are over 8 years of age and supervised while doing so. This device is maintenance-free.

- Swallowing batteries can be fatal. If a battery is swallowed, it can cause severe internal chemical burns and even death within 2 hours. Therefore, keep both new and old batteries and the product out of the reach of children.

If you think that a battery has been swallowed or has got into the body in any other way, seek medical advice immediately.

- Children must not be allowed to play with the device. Keep the device away from children under the age of 8.
- Keep packaging materials out of the reach of children.

They pose several risks, including the risk of suffocation!

Risk of injury

- If a battery has leaked, avoid contact with skin, eyes and mucous membranes. If necessary, rinse the affected areas with water and consult a doctor immediately.

Danger of explosion/fire

- Batteries must not be taken apart, thrown into fire or short-circuited. In addition, single-use batteries must not be charged.

Material damage

- Do not switch the grinder on while it is empty, as this could damage the ceramic grinding mechanism.
- Do not fill the salt container to the brim, but only to approx. 80% full. Moisture can cause the salt crystals to expand and lead to damage.
- Ensure that the polarity (+/-) is correct when inserting batteries.
- Protect batteries from excessive heat. Remove the batteries from the product when they are flat or if you do not intend to use the product for a longer period of time. This will prevent damage caused by leakage.
- Always replace all batteries at the same time. Do not mix old and new batteries, different types or brands of batteries, or batteries with different capacities.
- Do not use modified or damaged batteries.
- The terminals in the battery compartment and the poles of the batteries must not be short-circuited, e.g. by metal objects.

- If necessary, clean the battery and device contacts before inserting the battery. Risk of overheating!
- Never immerse the grinder or parts of it in water or any other type of liquid.
- Do not disassemble the grinder any more than described in these instructions.
- Do not use caustic or abrasive agents or hard brushes, etc. for cleaning.
- The LED lighting is permanently installed. It cannot and must not be removed.

Technical specifications

Model: 714 948

Single-use batteries: 4x LR03 (AAA)/1.5 V (Zn/MnO₂)

Ambient temperature: +10 to +40 °C

Made exclusively for:

Tchibo GmbH, Überseering 18,
22297 Hamburg, Germany

In the course of product improvement, we reserve the right to make technical and optical modifications to the product.



Information about the supplied batteries:

Manufacturer: Maxell Asia, Ltd., Unit Nos.03B-06, 13/F,
909 Cheung Sha Wan Road, Kowloon, Hong Kong

Email: tomas@maxell.net.cn


Model: LR03(GD)

Manufacturing date: 2025-06

Made in: China


Prior to first use

Inserting / replacing the batteries

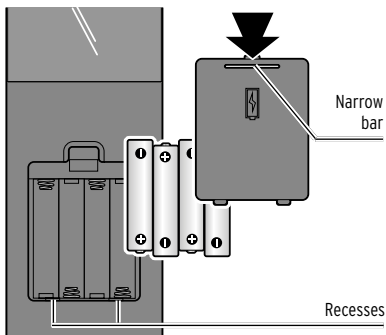

1. Hold the grinder upside down and press the narrow bar on the battery compartment lid downwards to open the battery compartment.
2. Insert the batteries as illustrated. Ensure the polarity is correct (+/-).
3. Locate the battery compartment lid back in the recesses provided in the housing and click it shut. You must feel and hear it click into place.

Filling with salt crystals and peppercorns

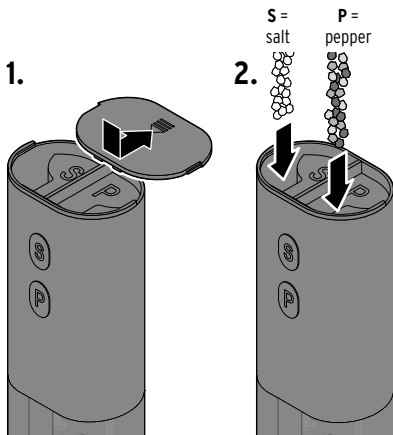

1. Slide the lid of the grinder container off the housing against the direction of the arrow.
At the same time, press on the top of the lid to release its catch.
2. Fill the respective compartment **S** or **P** with the appropriate seasoning product (salt crystals or peppercorns). In particular, do not fill the salt compartment to the brim, but only to approx. 80% full.
3. Push the lid back onto the grinder container in the direction of the arrow until you hear and feel it click into place.

Use

NOTICE - material damage

Do not switch the grinder on while it is empty, as this could damage the ceramic grinder.

1. Remove the protective cap from the bottom of the housing.
2. Press the ON switch ...
... **S** and hold it down to switch on the **salt grinder**.
... **P** and hold it down to switch on the **pepper grinder**.
The LED lighting at the bottom of the housing also switches on during the grinding process.
3. Release the switch to stop the grinding process.


Adjusting the grind setting

NOTICE - material damage

If you wish to achieve a finer grind, ensure you do not turn the adjustment wheels all the way. Always leave a small amount of travel at the end, otherwise the grinder may become stuck.

If the grinding mechanism becomes clogged by seasoning and the respective adjustment wheel does not turn, hold the grinder upside down and press and hold the **S** or **P** switch for a few seconds to clear the blockage. Then press and turn the adjustment wheel slightly towards **COARSE**.

1. Ensure there is sufficient seasoning in the container to grind. The seasoning container should be at least 50% full.
2. Press the ON switches **S** and **P** to check the grind setting.
3. To adjust the grind setting, turn the grinder upside down, to access the setting wheels.
4. Press the respective setting wheel slightly while simultaneously turning it
... towards **FINE** to adjust the grind gradually to a finer texture.
... towards **COARSE** to adjust the grind gradually to a coarser texture.

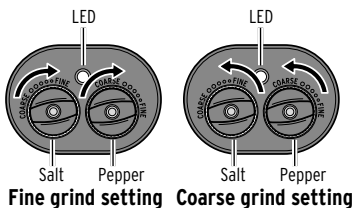

5. Then check to see that the new setting is what you wanted.

Cleaning

NOTICE - material damage

Never immerse the grinder or parts of it in water or any other type of liquid.

- ▷ Wipe the outside of the **housing** with a soft, slightly damp cloth, adding a mild washing-up liquid if necessary. In doing so, keep all water away from the **S** and **P** switches and battery compartment to prevent moisture damage. Then dry the housing.
- ▷ If necessary, clean the **grinders** from below around the adjusting wheels using a small cleaning brush or another similar brush.

Disposal

The product, its packaging and the supplied batteries have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point which sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Devices marked with this symbol must not be disposed of along with household waste!

 You are legally obliged to dispose of old devices separately from household waste. Electronic devices contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old devices can be disposed of free of charge is available from your local authorities.



Single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste!

Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.



www.tchibo.de/instructions

(Please enter the product number in the box labelled "Bedienungsanleitungssuche" and click on "Suchen".)

Product number: 714 948