 


Hairdryer

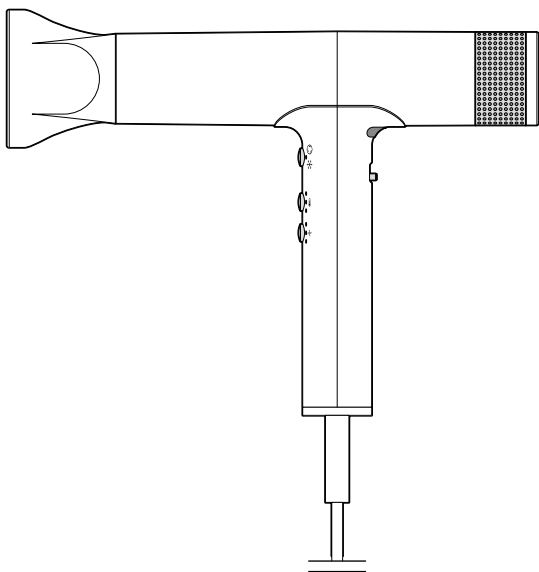

en Instructions for use

149099FV05X07XV · 2025-05

Dear Customer

Your new hairdryer comes with a digitally controlled brushless motor to ensure rapid drying and provides a stream of air at a consistently low temperature. This means you can dry your hair quickly without damaging it.

The locking function lets you set the chosen air flow and temperature settings. This prevents you from accidentally changing the setting while drying your hair.

What is more, the hairdryer also comes with a self-cleaning function which removes any impurities and particles from the internal components, ensuring the hairdryer keeps working at its best.

We hope you enjoy using this product!



Read these instructions! Important information - keep for future reference!

Contents

- 4 About these instructions**
- 5 Safety warnings**
- 10 At a glance (features)**
- 11 Use**
 - 11 Switching the appliance on and off
 - 12 Selecting the air flow and temperature settings
 - 12 Locking function
 - 12 Styling nozzle and cold air button
 - 13 After use
- 13 Cleaning**
 - 14 Self-cleaning function
- 15 Storage**
- 15 Disposal**
- 16 Technical specifications**

About these instructions

This product is equipped with safety features. Nevertheless, read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage.

Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Symbols used in these instructions:



This symbol warns you about the risk of injury.



This symbol warns you about the risk of injury caused by electricity.



This symbol warns you about risks associated with using the appliance near water.

WARNING: Do not use the hairdryer near bathtubs, showers, washbasins or other vessels containing water.



Read these instructions.

Signal words used in these instructions:

DANGER warns about the imminent risk of serious or fatal injury.

WARNING warns about the potential risk of serious or fatal injury.

CAUTION warns about the potential risk of minor injury.

NOTICE warns about the potential risk of material damage.



This indicates additional information.

Safety warnings

Intended use

- This product is suitable for drying and styling natural human hair. It is not suitable for animal fur.
This appliance must not be used for artificial hair, as this cannot withstand high temperatures and can pose a fire hazard.
- The product is suitable for use in dry indoor rooms.
- The product is designed for private use and is not suitable for commercial purposes.

Danger to children and people with restricted ability to operate appliances

- This appliance can be used by children aged 8 and over and by people with reduced physical, sensory or mental capabilities or a lack of experience and/or knowledge, provided they are supervised or have been trained in the safe use of the appliance and understand the potential dangers.
- Children must not be allowed to play with the appliance.
- Cleaning and maintenance must not be carried out by children.

- Before using the appliance for the first time, remove all of the packaging and dispose of it properly. Keep the packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

Danger due to electricity

- Never immerse the appliance in water or other liquids. The appliance must not be exposed to moisture. It must also be protected from drops or splashes of water, otherwise there is a risk of electric shock.
- Do not use the appliance outdoors.
-  **WARNING:** Do not use the hairdryer near bathtubs, showers, washbasins or other vessels containing water. Do not use the appliance with damp hands or while standing on a damp floor. If you use the hairdryer in a bathroom, remove the mains plug from the power socket after use. Having water nearby presents a danger even if the appliance is switched off. As additional protection, we recommend installing a residual current device (RCD) with a rated tripping current of no more than 30 mA in the electrical circuit supplying the bathroom. Ask your electrician for advice.

- If the appliance falls into water despite all of the safety precautions, pull the mains plug out of the socket immediately. Do not reach into the water. There is a risk of fatal electric shock!
- Keep metal objects (e.g. jewellery) away from the air intake opening to prevent them from being sucked into the appliance. Otherwise there is a risk of electrocution!
- Do not insert any objects into the openings of the appliance. There are conductive parts inside the appliance which may cause an electric shock when they are touched.
- Only use the appliance with the original accessories provided. Do not use any additional parts which are not recommended or provided by the manufacturer.
- Allow the appliance to dry fully after cleaning it before putting it back together / using it again. There is a risk of fatal electric shock!

- Only connect the appliance to a properly installed power socket with the mains voltage and fuse protection specified in the technical specifications of the appliance.
- Do not use any extension cables in bathrooms so that the mains plug is easily accessible in an emergency.
- Ensure that the power socket is easily accessible so that the mains plug can be disconnected quickly if need be. Route the mains cable in such a way that it cannot be tripped over.
- Do not leave the appliance unattended while it is connected to the power supply.
- Remove the mains plug from the power socket if malfunctions occur during use, after every use, during thunderstorms and before cleaning the appliance. Always pull on the plug, never on the mains cable.
- As the mains cable is subjected to a great deal of movement while in use, you should check it regularly for damage and wear. Do not wind the mains cable around the appliance.

- Never use the appliance if any part of it or its mains cable is visibly damaged or if it has been dropped.
- Do not make any modifications to the product. Do not open or attempt to make repairs to the appliance yourself as this may mean that proper functioning can no longer be guaranteed. Only the cover and the cylindrical air vent may be removed in order to use the self-cleaning function. Do not attempt to replace the mains cable yourself. If the mains cable is damaged, it must be replaced only by the manufacturer, the manufacturer's service agent or a similarly qualified person in order to avoid hazards. Have repairs to the appliance carried out only by a specialist workshop.

 
Danger of burns

- The appliance and the styling nozzle become very hot during use. Allow both to cool down before cleaning the appliance or removing the nozzle. Risk of burns!

Material damage

- Do not use any caustic, aggressive or abrasive products for cleaning.

At a glance (features)

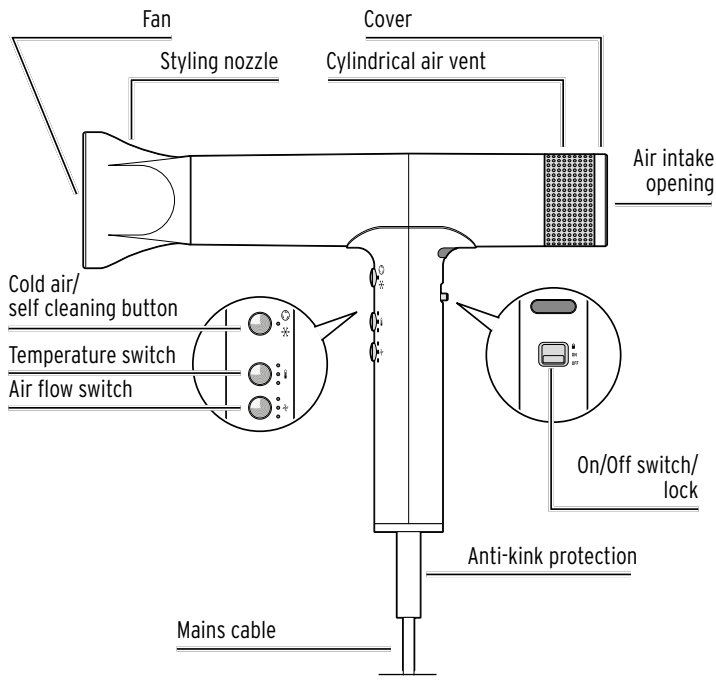

Use

 When using the appliance for the first time, there may be a slight odour; however, this is not a fault. Ensure there is adequate ventilation.

1. After washing your hair, dry it thoroughly with a towel first.

You should also dry your hands carefully.

2. Insert the mains plug into an easily accessible power socket.

You can either use the hairdryer with the styling nozzle or without the nozzle.

▷ Push the styling nozzle in the desired position onto the appliance and turn it clockwise to tighten.



CAUTION - risk of burns

The appliance and the styling nozzle become very hot during use.

Allow both to cool down before removing the styling nozzle.

Risk of burns!

▷ To remove the styling nozzle, turn it anti-clockwise and pull it off.

Switching the appliance on and off



CAUTION - risk of fire

The hairdryer, fan and air intake opening must not be covered.

Make sure that the fan and air intake opening are not covered by your hair or fingers and that no fluff or hair is trapped inside.



 
▷ To switch the appliance on, slide the On/Off switch to **ON**.



▷ To switch the appliance off, slide the On/Off switch to **OFF**.
The appliance will run using cold air for approx. 2 seconds to cool down.

-  When switched on for the first time, the temperature and air flow settings are set to their lowest settings. The lowest LED is lit up for each setting. If you have chosen different settings, the last temperature and air flow settings used will be set automatically.

Selecting the air flow and temperature settings


-   or  switch to increase the air flow or temperature.
-   or  switch to reduce the air flow or temperature.

-  The air flow and temperature have three settings each. One indicator light is lit up for the lowest setting, two for the medium setting, and three for the highest setting.

Locking function

-   To prevent the temperature and air flow settings from being changed accidentally while drying your hair, slide the On/Off switch to .
-   If you wish to change the settings again, slide the On/Off switch back to **ON**.

 Styling nozzle and cold air button



The styling nozzle allows you to dry specific sections of your hair.

To cool your hair down quickly you can use the cold air/self-cleaning button .

- ▷ Draw a strand of hair over a round brush, for example, and direct the styling nozzle at it. Then press the cold air/self-cleaning button . The indicator light lights up. To switch off the cold air, press the button again.

After use

- ▷ To switch the appliance off, slide the On/Off switch to **OFF**.
- ▷ After use, leave the appliance on a heat-resistant surface to cool down.

 If the appliance overheats, for example if the air intake opening is covered, the thermal control switch will automatically switch the appliance off. The indicator lights on the temperature switch and the air flow switch will flash slowly. Switch the appliance off and leave it to cool down before switching it on again.

 
Cleaning



CAUTION - risk of burns

The appliance and the styling nozzle become very hot during use. Leave them to cool down before cleaning them. Risk of burns!

1. Unplug the mains plug from the power socket.
2. Wipe down the casing and the styling nozzle with a slightly damp cloth.




3. Rotate the cover anti-clockwise and take it off.
4. Remove the cylindrical air vent.
5. Wipe the inside and outside of both parts using a slightly damp cloth.



DANGER due to electricity

 
Allow the appliance to dry fully after cleaning it before putting it back together and using it again. There is a risk of fatal electric shock!



6. Place the cylindrical air vent back onto the appliance and rotate the cover clockwise to secure it in place.

Self-cleaning function

 The appliance comes with a self-cleaning function to clean the internal components.




1. Rotate the cover anti-clockwise and take it off.
2. Remove the cylindrical air vent.

3. Briefly switch the appliance on and off (reset).

4. Then press the cold air/self-cleaning button  for five seconds.

 The motor runs backwards for approx. 15 seconds. The other buttons will be disabled while you do this.



5. Once the motor has stopped, place the cylindrical air vent back onto the appliance and rotate the cover clockwise to secure it in place.

You can now use the appliance again as usual.

Storage

- ▷ Allow the appliance to cool down completely before putting it away.
 - ▷ To avoid damaging the mains cable, do not wind it around the hairdryer.
 - ▷ Keep the appliance out of the reach of children.
 - ▷ Store the appliance in a dry place.
-

Disposal

This product and its packaging have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Appliances marked with this symbol must not be disposed of along with normal household waste!

 You are legally obliged to dispose of appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities.

Technical specifications

Model:	HD 5906
Product number:	717 943
Mains voltage:	220-240V~, 50-60 Hz
Protection class:	II  (the appliance has double protective insulation)
Power:	max. 1700-2000 W
Ambient temperature:	-10 to +40 °C

Manufactured by: Jaxmotech GmbH,
Ostring 60,
66740 Saarlouis,
Germany
info@jaxmotech.de

In the course of product improvement, we reserve the right to make technical and optical modifications to the product.



This appliance meets the requirements of the applicable European and national guidelines.

Model:	HD 5906
Product number:	717 943
Manufactured by:	Jaxmotech GmbH, Ostring 60, 66740 Saarlouis, Germany info@jaxmotech.de