 


Steam Brush

en Instructions for use

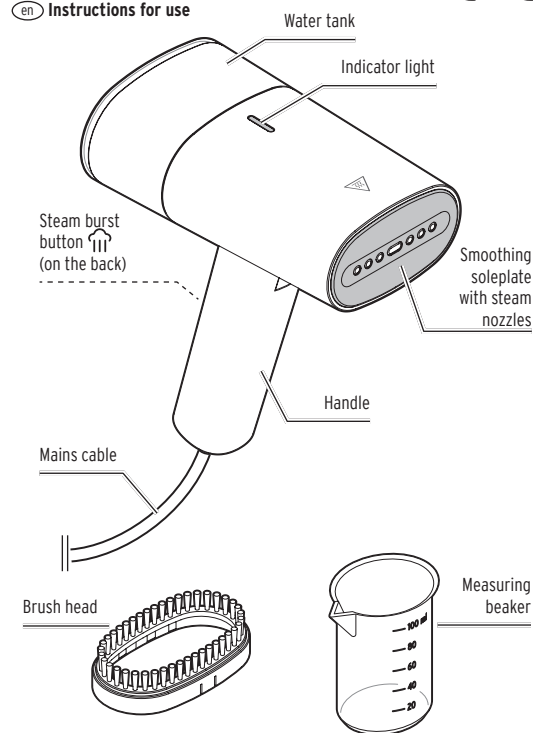

About these instructions

This product is equipped with safety features. Nevertheless, read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Symbols used in these instructions:



This symbol warns you about the risk of injury.



This symbol warns you about burns caused by hot surfaces and/or scalds caused by steam being emitted.

WARNING warns about the potential risk of serious or fatal injury.

CAUTION warns about the potential risk of minor injury.

NOTICE warns about the potential risk of material damage.



This indicates additional information.

Safety warnings

Intended use

This steam brush is suitable for smoothing or refreshing standard textiles. The steam brush works by generating steam. Using it without water is not permitted and may damage the appliance.



The product is suitable for use in dry indoor rooms. Do not use it outdoors or in rooms exposed to high levels of humidity.

The product is designed for private use and is not suitable for commercial purposes.

Danger to children and people with limited ability to operate appliances

• This appliance may be used by children aged 8 and over, and by persons with reduced physical, sensory or mental capacities or a lack of sufficient experience and/or knowledge, provided they are supervised or have been trained in the safe use of the appliance and understand the potential dangers. Cleaning and maintenance must not be carried out by children without supervision. Children must not be allowed to play with the appliance. The steam brush and mains cable must be kept out of the reach of children under the age of 8 from the moment the appliance is switched on until it has completely cooled down.

• Keep the packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

Danger due to electricity

• Do not use the appliance if the appliance itself or its mains cable shows any signs of damage, if the appliance has been dropped or if water is leaking out. If you find that the mains cable, plug, housing or any other part shows signs of damage, discontinue use of the steam brush until the damage has been properly repaired.

• Do not make any modifications to the product. Do not attempt to replace the mains cable yourself. Have repairs to the appliance or the mains cable carried out only by a specialist workshop. Improper repairs can result in considerable danger to the user.

• Remove the mains plug from the power socket, ...
... before you remove or reattach the water tank,
... if you are not using the appliance,
... if malfunctions occur during use,
... after use, and
... before cleaning the appliance. Pull the plug out of the power socket even if you are only interrupting work with the steam brush for a short time. To do so, always pull on the mains plug, not on the mains cable.

• Only connect the appliance to a properly installed, earthed power socket with a mains voltage that complies with the technical specifications of the appliance. Do not use an extension cable!

• The steam brush can be filled with water, but it must never be immersed in water or other liquids. Otherwise, there is a risk of electric shock. Never immerse the water tank in water.

• Should water have spilled when filling the water tank, dry the tank thoroughly before reattaching it and plugging in the appliance.

• Do not direct the steam at electrical devices or power sockets. Ensure that there are no power sockets behind curtains that you wish to smooth, for example.

• Do not wind the mains cable around the appliance.

• The mains cable must not be kinked or crushed. Keep the mains cable away from the hot parts of the steam brush, other sources of heat and sharp edges.

• The power socket used must be within easy reach so that the mains plug can be removed quickly if necessary. Route the mains cable in such a way that it is not a tripping hazard.

Danger of scalds, burns and fire

• Do not leave the appliance unattended while it is connected to the power socket or while it is still hot.



WARNING. Hot surface.

The soleplate and the area around it become hot during use. The emitted steam is extremely hot!

Touching the hot parts of the steam brush and the steam being emitted will lead to burns or scalds.

• Never steam or smooth textiles while they are being worn! You must also never hold your hand under textiles to support or tension them while they are being steamed.

• Never point the steam brush at people or animals, especially not when pressing the steam burst button.

- Let the appliance cool down before attaching or removing the brush head and before cleaning the appliance or refilling the tank with water.
- Always use the steam brush on a stable surface when you are smoothing garments positioned horizontally and only set it down on that stable surface. Avoid contact between heat-sensitive surfaces and the soleplate.
- Before using the appliance, ensure that the steam nozzles are not blocked.

Material damage

- Never operate the appliance when the water tank is empty. Regularly check how much water is in the tank before and during use.
- Empty the water tank after every use.
- Follow the instructions on the sewn-in labels of the garments to be smoothed. Polyacrylics, acetate-polyamide blends and similar materials must not be ironed or steamed.
- Do not use any caustic, aggressive or abrasive products for cleaning.
- **The appliance cannot be descaled.** Therefore, only fill it with distilled or demineralised water whenever possible. Do not fill it with vinegar or a descaling agent.

Disposal

 
The product and its packaging have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Appliances marked with this symbol must not be disposed of along with normal household waste! You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities.

Folding the handle up /down

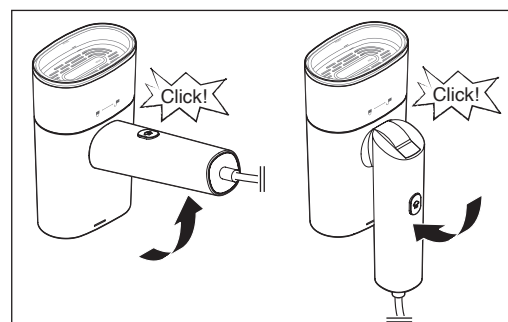

► **To fold the handle up**, push it upwards as far as it will go as shown above. You will hear and feel the handle click into place. The handle must always be folded up for use!

► **To fold the handle down**, push it downwards as far as it will go as shown above. You will hear and feel the handle click into place. The appliance can now be stowed away in a space-saving manner.

Filling the water tank

 


WARNING - risk of fatal electric shock


- Remove the mains plug from the power socket before reattaching the full water tank to the appliance.
- Should water have spilled when filling the water tank, dry the tank thoroughly before reattaching it and plugging in the appliance.

► Unwind the mains cable completely, but do not connect the appliance to the mains yet.


► Fold the handle up.

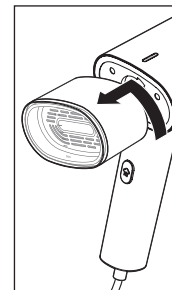

 
1. Turn the water tank anti-clockwise as far as it will go and then remove it.

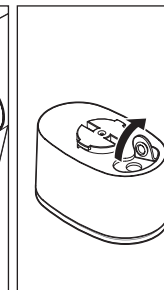

 
2. Open the seal.

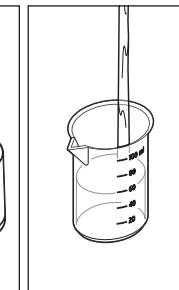

 
3. Fill the measuring beaker with distilled or demineralised water no higher than the MAX mark.

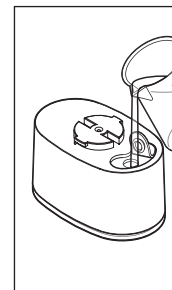

 4. Pour water into the fill opening in the water tank.

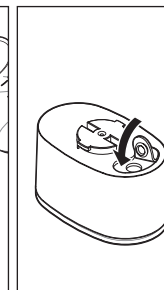

 5. Close the fill opening again.

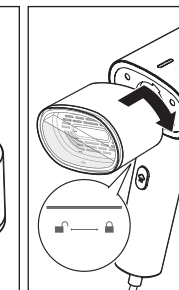

6. Place the water tank back onto the appliance at a slight angle and turn it clockwise as far as it will go. You must hear and feel it click into place.



Do not use any water with additives, e.g. starch or perfume! To avoid limescale deposits, use only commercially available distilled or demineralised water whenever possible.

Prior to first use



CAUTION - risk of burns/fire

The soleplate and the area around it become hot during use.

- Always fold the handle up to use the appliance (see the chapter titled "Folding the handle up / down").
- When you take a short break or finish using the appliance, always put it down with the soleplate facing upwards and shut off the steam burst function by pressing the steam burst button.



There may be a slight odour when using the appliance for the first time. This is harmless. Make sure there is sufficient ventilation. Production residue may have been left on the steam brush soleplate from the manufacturing process.

We therefore recommend that you first smooth an old cotton cloth or something similar to remove any polish residue before using your new steam brush on your laundry, clothes, etc.

1. Hang an old garment on a coat hanger.

2. Add water as described in the chapter titled "Filling the water tank".

3. Insert the mains plug into the power socket.

 
The indicator light will light up blue while the appliance is heating up. The indicator light will go out as soon as the operating temperature is reached.

4.  Press the steam burst button  on the handle in as far as it will go until you hear and feel it click into place. Release the button and wait until steam is emitted.




Water must first be pumped into the steam generator, which means that it can take a few moments for steam to start coming out.

5. Move the steam brush down over the old garment until the water tank is completely empty.

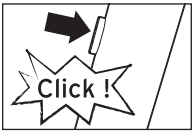6.  Press the steam burst button  in again as far as it will go until you feel it release from the catch. Let go of the button. The steam burst function is switched off.

 7. Remove the mains plug from the power socket.

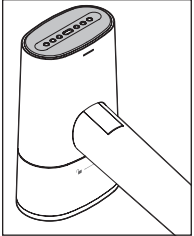8.  Put the appliance down **with the soleplate facing upwards** and allow it to cool down.

Use

 
Attaching/detaching the brush head




CAUTION - risk of burns

The soleplate and the area around it become hot during use.

- Allow the appliance to cool down before attaching or removing the brush head.

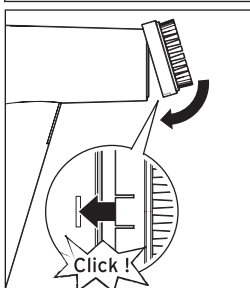

 - To attach the head, place the brush head on the soleplate as shown. The two notches at the bottom of the brush head must be facing downward. You must hear and feel the brush head click into place.

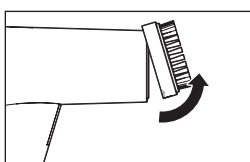

- To take the brush head off, pull it away from the soleplate as shown.

Smoothing garments with the brush head



- If you use the steam burst button  to switch on the steam burst function after the appliance is heated up, water is pumped into the steam generator and is emitted from the nozzles as a burst of steam. This steam deeply penetrates the fabric.

 
- Always test the appliance on a concealed part of the cloth first.
- With sensitive fabrics such as wool, wool mixtures, corduroy, velvet and silk, apply the steam at some distance from the fabric.

1. Add water as described in the chapter titled "Filling the water tank".
2. Hang the garment on a coat hanger. Hang trousers by the ends of the trouser legs.
3. Insert the mains plug into the power socket. The indicator light will light up blue while the appliance is heating up. The indicator light will go out as soon as the operating temperature is reached.



CAUTION - risk of scalds

You must also never hold your hand under textiles to support or tension them while they are being steamed.

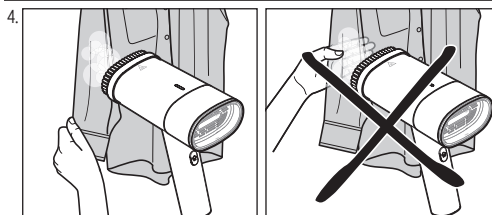

Pull the fabric taut with your free hand. Applying slight pressure, place the appliance on the area that is creased.

5.



Press the steam burst button  in as far as it will go until you hear and feel it click into place. Release the button and wait until steam is emitted.

6. Move the appliance downwards over the garment and smooth it with the soleplate.

- If the water in the tank runs out during use, switch off the steam burst function and remove the mains plug from the power socket, put the appliance down with the soleplate facing upwards and allow it to cool down. Refill the water tank before reconnecting the appliance to the mains and continuing to use it.

 
7.



When the item of clothing has been smoothed sufficiently, press the steam burst button  in again as far as it will go until you feel it release from the catch. Let go of the button. The steam burst function is switched off.

8. Remove the mains plug from the power socket.

9.

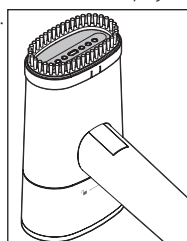

Put the appliance down with the soleplate facing upwards and allow it to cool down.

 
Upholstery, drapes and curtains

Drapes and curtains, like garments, are treated while they are hanging and do not need to be taken down. Hang up other types of fabrics, such as tablecloths, over a rail. Always carry out a test on a concealed part of the fabric first.

Steam ironing

The steam iron function is suitable for all textiles that are marked with 3 dots (...).

1.

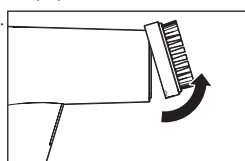

Remove the brush head if you have attached it.

2. Place the textile on an ironing board. The steam brush can be used both upright and horizontally.

3. Insert the mains plug into the power socket.

The indicator light will light up blue while the appliance is heating up. The indicator light will go out as soon as the operating temperature is reached.

4.



Press the steam burst button  in as far as it will go until you hear and feel it click into place. Release the button and wait until steam is emitted.

5. Smooth the garment lying on the board as you would with an iron.

- If the water in the tank runs out during use, switch off the steam burst function and remove the mains plug from the power socket, put the appliance down with the soleplate facing upwards and allow it to cool down. Refill the water tank before reconnecting the appliance to the mains and continuing to use it.

6.



When the item of clothing has been smoothed sufficiently, press the steam burst button  in again as far as it will go until you feel it release from the catch. Let go of the button. The steam burst function is switched off.

7. Remove the mains plug from the power socket.

8. Put the appliance down with the soleplate facing upwards and allow it to cool down before you empty the water tank and put the appliance away.

After use

Cleaning

1. Press the steam burst button  to switch off the steam burst function and remove the mains plug from the power socket.
2. Put the appliance down with the soleplate facing upwards and allow it to cool down.
3. Empty the water tank.
4. Wipe the housing regularly with a slightly dampened cloth. Do not use any caustic, aggressive or abrasive products for cleaning.
5. Remove fluff and other residue from the brush head.

Storage

NOTICE - material damage

- Do not store the steam brush by standing it on the bristles of the brush head.
- To avoid damage to the mains cable, do not wind the cable around the appliance.

- Always store the steam brush with the soleplate facing upwards whenever possible in a place protected from dust, moisture, direct sunlight and extreme temperatures.

Technical specifications

Model:	SB 1003
Product number:	764324/764326
Mains voltage:	220-240V ~, 50 Hz
Protection class:	I 
Power:	1000 W
Water tank capacity:	approx. 170 ml
Operating time with one full tank (MAX):	approx. 10 minutes
Steam output:	14-20 g/min.
Manufactured by:	Jaxmotech GmbH Ostring 60 66740 Saarlouis Germany info@jaxmotech.de

In the course of product improvement, we reserve the right to make technical and optical modifications to the product.