

 
Safety warnings

Intended use

- The product is designed to hang off-the-shelf clay pots (Ø 10-18 cm, with rim). Use the product for its intended purpose only.
- Only use the product indoors or **under cover** outdoors.
- The product is designed for private use and is not suitable for commercial purposes.
- Connect a maximum of two plant pot hangers to each other and do not overload them.




Single mount:
up to 5 kg per pot

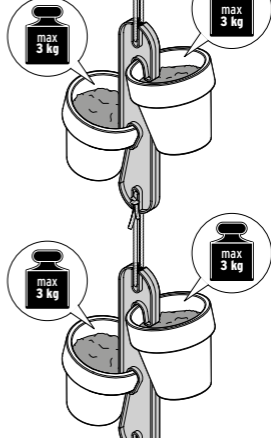

Connected double mount:
up to 3 kg per pot

- Only mount the plant pot hanger on load-bearing ceilings or beams. Note that the attachment must safely bear the weight of the plant pot hanger and the clay pots, including soil, water, and plants. If necessary, ask for advice at a specialist retailer.
- Mount the plant pot hanger out of the reach of children and pets, so that the hanging clay pots cannot fall out and hurt children or pets.
- Regularly check the condition of the product and the installation location (beam, ceiling, etc.), particularly the condition of the cord and all attachment points.
- Do not mount the plant pot hanger on a balcony balustrade, window handle, radiator, or on thin branches.
- Do not hang on to the plant pot hanger, and do not use it as a climbing aid.
- Protect the product from excessive heat (radiators, direct sunlight), moisture and extreme temperatures. During frosts, keep the product indoors, as it may otherwise become damaged.
- The product is not designed to withstand strong winds, storms, etc.! Take down the product in good time if strong winds or storms are forecast. The clay pots are held loosely in the plant pot hanger. They could fall and cause injury and damage.
- If possible, do not mount the plant pot hanger over delicate floors, furniture or electrical appliances, as water may leak through the drainage holes of many clay pots. If necessary, place a mat under the plant pot hanger.
- Do not use abrasive or caustic products, or hard brushes, etc. for cleaning. Wipe the plant pot hanger down with a slightly damp cloth as needed.
- When not in use, store the plant pot hanger in a dry and sheltered place.


Use

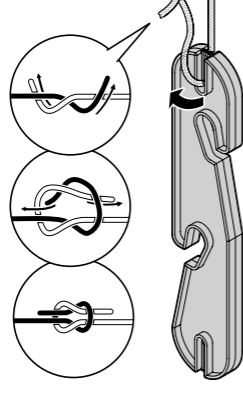


Attach the braided cord to the plant pot hanger with a tight knot as illustrated above.




Attach the hook (not included) so that the plant pot hanger can hang freely and will not swing against walls, windows or furniture.

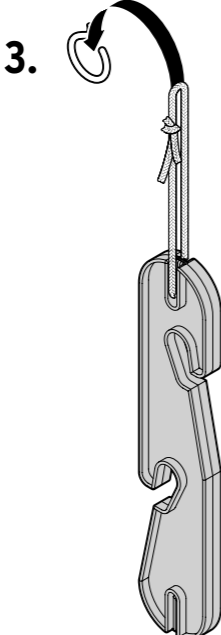

Use the braided cord to attach the plant pot hanger to the hook.

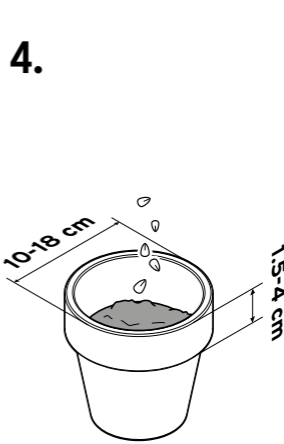

Plant suitable clay pots (Ø min. 10 to max. 18 cm, with rim min. 1.5 to max. 4 cm) with soil and plants of your choice (e.g. flowers or herbs), before hanging them.

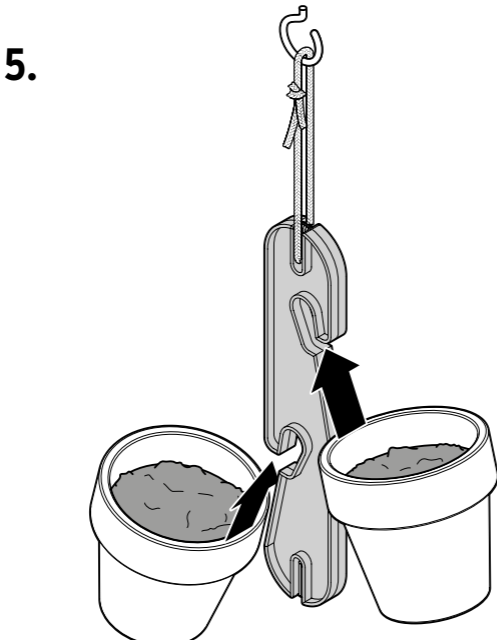

NOTICE - material damage

- Warning: Hanging a single pot causes an imbalance which may make the plant pot hanger tip. Therefore hold the plant pot hanger firmly with one hand until both pots are inserted and the weight is evenly distributed.
- Make sure that each pot is straight and centred in its holder to guarantee a secure fit. A pot that is inserted askew may come loose and affect the balance and stability of the plant pot hanger.

1. Hold the plant pot hanger with one hand.
2. Hook the planted clay pots onto the top edge of the relevant holder.
3. Check that all pots sit securely before you fully let go of the plant pot hanger.