
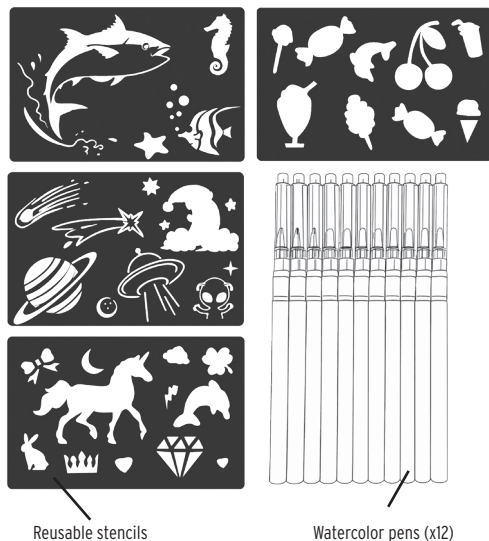


Airbrush Set

en Instructions for use

At a glance (contents)

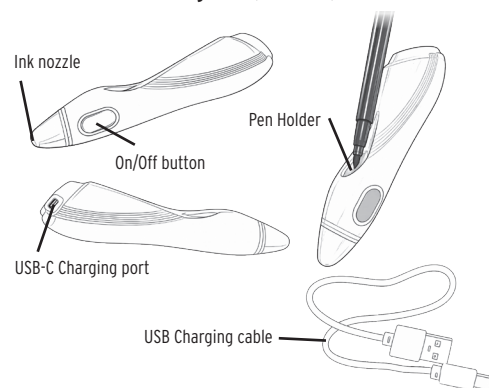

EG - DECLARATION OF CONFORMITY

The product described in this instruction manual complies with all relevant harmonized requirements of the EU. The complete declaration of conformity and instruction manual can be found online at www.jaxmotech.de/downloads.

About these instructions

This airbrush pen is an electrically operated toy intended for creative drawing and painting on paper. It is designed to be used with water-based watercolor pens to apply color by spraying, allowing the creation of patterns, color transitions, and decorative designs. Reusable stencils are supplied to support creative play and assist users in creating different designs in a controlled manner.

Keep these instructions for future reference. If you pass this product on to another person, remember to give them these instructions.

 This symbol warns you of the danger of injury.

 This symbol warns you of the danger of injury caused by electricity.

Symbols used in these instructions:

DANGER warns of potential severe injury and danger to life.

CAUTION warns of minor injury or damage.

NOTICE warns about the potential risk of material damage.

 This indicates additional information.

Safety warnings

User manual for the Airbrush-set Intended use

This product is intended for children aged 6 and over for drawing with the included pens and stencils.

Use only under adult supervision!

The product is designed for private use and is not suitable for commercial purposes.

General Safety

- Warning: Not suitable for children under a 36 months; small parts may pose a choking hazard.
- Use and charging are permitted only under the direct supervision of an adult.
- Do not point the pen at person's face during use.
- Keep packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!
- Warning! This toy must only be used under the direct supervision of an adult.
- Warning! This toy must not be connected to more than the recommended number of power sources.
- Warning! This toy must only be used with a transformer for toys or a power supply unit for toys.
- Warning! This toy must only be operated with a transformer or power supply unit that complies with the specifications listed in the following section.

Charging the pen

Warning! The toy must only be charged under adult supervision.

- Use only a power supply with an output of **1-5 V** and **1000 mA**.
- Do not use a power supply with an output higher than **5 V / 1 A**.
- Fast charging is prohibited.

Charging process

1. Connect the USB Type-C input of the charging port on the pen to the USB cable and the power supply (not included).
2. During charging, the red indicator light remains continuously lit.
3. Charging is complete when the charging indicator light turns **blue**.
4. The charging time is approximately 2-2.5 hours.

Warning! Charge the product only under adult supervision and away from flammable materials.

Note:

- It is recommended to **recharge** the pen **promptly** after use or when the power level is low.
- If the pen is not used for a longer period, store it in a **dry place**.
- Recharge the pen every three months to prevent deep discharge.

Operation

1. Remove the cap from the watercolor pen and insert into the pen holder until the tip is inserted to the bottom of the cavity.
2. Place the stencil card on the paper. The ink nozzle of the pen should not be too close to the painting surface. Maintain a certain distance when long pressing the On/Off button to start the spraying process.
3. Occasional ink dripping is normal. You can wipe it up with a cloth to prevent it from getting on other items.
4. Remove the watercolor pen from the pen holder and put the cap back to prevent the ink from evaporating after prolonged exposure.

Notes on the rechargeable battery

- Never expose the batteries to excessive heat (for example, strong sunlight or fire), and never dispose of them by throwing them into a fire. The batteries could explode.
- The battery is permanently installed in the product and cannot be replaced.
- Never damage the battery. Damage to the battery cover could result in an explosion and fire!
- Never short-circuit the battery's contacts or connections. Do not throw the battery or product into the fire. There is a risk of explosion and fire!
- Use only under normal room conditions (temperature and humidity).
- The product is only suitable for use in temperate latitudes. Do not use in tropical or particularly humid climates.
- Do not move the product from a cold environment to a warm one and vice versa. Condensation can cause damage to the device and its electrical components.
- Do not leave cells and batteries charged for extended periods when not in use.
- If the battery is exposed to extremely low air pressure, it may cause an explosion or leakage of flammable liquids or gases.
- Before disposing of the product, consult an electrician or your dealer to remove the batteries and dispose of them in an environmentally friendly manner.

Technical specifications

Model	: AP 503
Product number	: 765 619
Rechargeable battery (non-replaceable)	Lithium-ion: 3.7 V === 500 mAh : Watt-hour rating: 1.85 Wh (tested as per UN 38.3)
USB Input	: 5 V === 1 A
Charging time	: approx. 2 - 2.5 hours
Ambient temperature	: +10 to +40 °C

Information about the built-in rechargeable battery:

Model	: 14500 500 mAh
Manufacturer	: Lida Zhaoneng Battery (Dongguan) Co., Ltd Liuyongwei Huangzhou Industrial Road, Wanjiang Street, Dongguan City, Guangdong Province, P.R. China
E-Mail	: 2214278998@qq.com
Manufacturing date	: 2026/01 Made in China
Manufactured by	: Jaxmotech GmbH, Ostring 60 66740 Saarlouis, Germany info@jaxmotech.de

In the course of product improvement, we reserve the right to make technical and optical modifications to the product.

Disposal

The product, its packaging and the built-in rechargeable battery have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment. Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.

 **Appliances, single-use batteries and rechargeable batteries** marked with this symbol must not be disposed of along with household waste! You are legally obliged to dispose of old appliances separately from household waste.

 Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

 **Warning!** This appliance contains rechargeable batteries that, for safety reasons, are firmly built into the appliance and cannot be removed without destroying the casing. Improper disassembly leads to safety hazards. For this reason, take the appliance intact to a collection point where the appliance and battery will be disposed of properly.

Model	: AP 503
Manufactured by	: Jaxmotech GmbH, Ostring 60, 66740 Saarlouis, Germany, info@jaxmotech.de

