


Plant Protection Tent

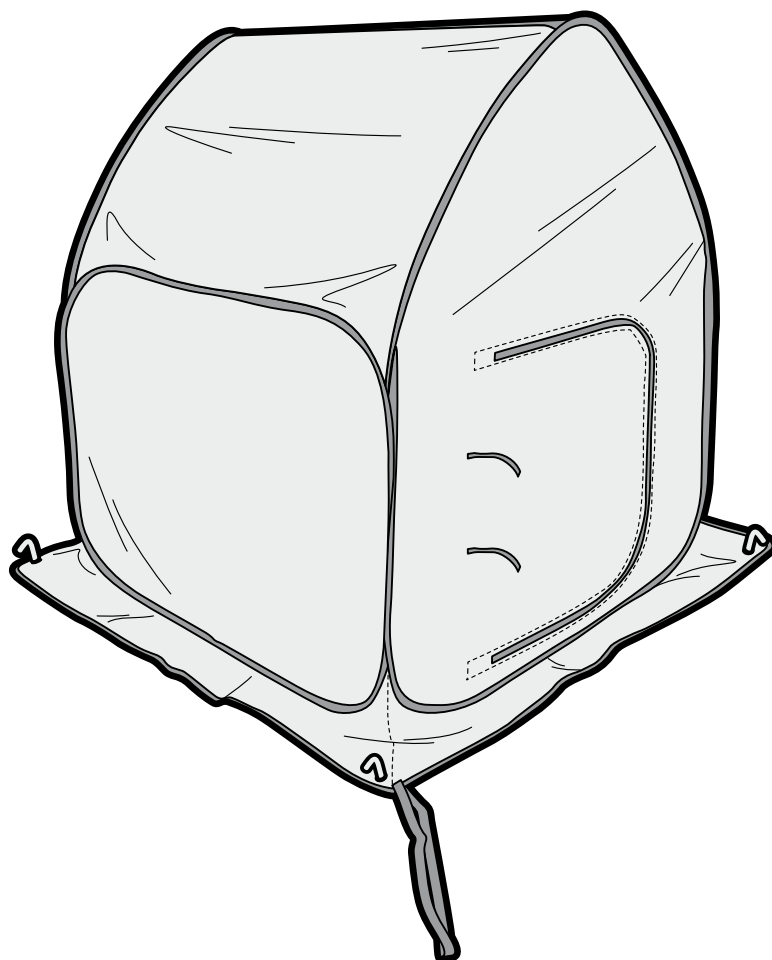

www.tchibo.de/instructions
(Please enter the product number in the
box labelled "Bedienungsanleitungssuche"
and click on "Suchen")

Warning! Read before use! Keep these instructions for future reference!

Dear Customer

Your new plant protection tent with a transparent cover protects your plants in winter and can also be used as a greenhouse in spring and summer.

Simply throw the plant protection tent into the air in front of you and it will unfold by itself. Then, in just a few easy steps, it will be set up fully.

Keep these instructions for future reference. If you give this product to someone else, remember to also include these assembly instructions.

We hope you enjoy using this product.

Your Tchibo Team

For your safety



DANGER to children

- Keep children away from the packaging material. The bags and films are not toys. Make sure children do not pull them over their heads and that no parts of them are swallowed. Risk of suffocation!
- Keep infants away from the product, as they might try to pull themselves up on it or climb onto it.

DANGER - fire / lightning / heat hazard

- Bear in mind that the cover is made of flammable material:
 - Do not position heating or cooking units in the vicinity of the product.
 - Do not use naked flames, e.g. propane cookers, candles or oil lamps in the vicinity of the product.
 - Do not smoke inside the tent.
- Never light a fire or a barbecue inside the tent!
Danger of death due to carbon monoxide poisoning!
- Never pitch or take down the tent or stay inside it during a thunderstorm.
- Warning! On sunny days, the inside of the tent can quickly reach temperatures above 60 °C.
 - Never leave children or animals inside the tent unsupervised.
 - Open the entrance in good time so that fresh air can get in.

CAUTION - risk of injury

- There is a risk of tripping due to the tent pegs. Instruct children accordingly.
- When folded together, the tent is under tension and may suddenly spring open. Always secure it with the elastic strap provided.
- Ensure that there are no other people, animals or fragile objects nearby before you open out the tent.

NOTICE - material damage

- Do not hang from the inside of the product. It could fall over or become damaged.
- **Please note the information regarding the tent's stability!**

Intended use

The product is suitable for use as plant protection for potted plants outdoors. It is not suitable for people to stay in or as a playing tent for children.

The product is designed for private household use and is not suitable for commercial purposes.

The tent must not be used or pitched during extreme weather conditions, such as heavy storms or extreme snowfall. The tent and its accessories are not suitable for use on sand.

Cleaning and storage

- Wipe the cover with a damp microfibre cloth.
Do not use abrasive or caustic products or hard brushes, etc. for cleaning. The cover is not suitable for machine washing and must not be dry cleaned, dried or ironed.
- Check the cover regularly for damage and leaks. Tears and holes are best patched with appropriate material available from a specialist retailer. At the start of each new season, you should thoroughly check all parts of the tent - especially the seams and zip closures, etc.
- If you wish to take down the tent and store it away, clean all parts thoroughly and leave them to dry completely before folding the tent up and storing it away to prevent mould from forming.
- Always store the tent pegs in the small bag provided. The sharp tips of the tent pegs and any possible corrosion stains could damage the cover.
- Weather and sunlight age the tent material over time. This may lead to colour changes and, with time, also to material fatigue. Therefore, when it is not in use, store the tent in a sheltered place which is dry, cool, well-ventilated and protected from frost. Avoid direct sunlight or heating on a radiator.


Information regarding stability

- Always place the product on level, non-sloping ground.
- Do not set up the tent directly under trees. Risk of damage by lightning!
- Pitch the tent with the door opening facing away from the wind. If possible, select a site that is sheltered from any wind. When pitching the tent on soft ground (grass, soil) always fix the tent in place with the tent pegs provided. When pitching the tent on hard ground (balcony or terrace), weigh down bottom of the tent with flower pots or similar.
- The wind resistance of the tent...
(Requirement: the tent has been secured with the tent pegs and/or weighed down with flower pots or similar as described)
... is up to wind force 5 (Beaufort scale = approx. 40 km/h). Disassemble the tent in the event of higher wind speeds - from wind force 6 and up (Beaufort scale, storm/hurricane warning). In moderate winds, we recommend closing the openings so that the wind pressure inside the tent is not too high.
- The transparent cover is not intended for year-round outdoor use. It is able to withstand temperatures between -15 °C and + 60 °C and sun exposure up to UV index level 5. On sunny spring/summer days with outside temperatures above +10 °C, the inside of the tent can quickly heat up to +60 °C or higher. This damages the tent itself and the plants inside it, and poses a risk to people and animals inside the tent. We therefore recommend opening the door when the outdoor temperature is +10 °C or higher, so that the wind can blow in, and keeping an eye on the inner temperature.
When the inside temperature is above +40 °C, you should stop using the plant protection tent. This protects the cover from strong UV rays and also increases the lifespan of the tent.
- The tent can support up to max. 5 kg of snow. Remove snow from the roof, e.g. with a broom, before it builds up too much to prevent the roof from becoming damaged.

Parts list


1 x

1

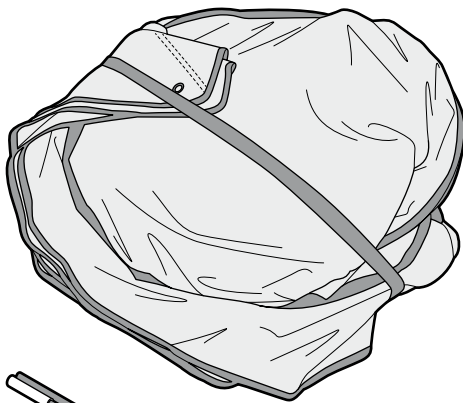


1 x

2

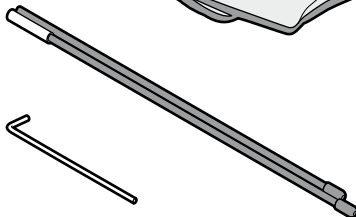


4 x

 3




Assembly will require

 


Assembly

1

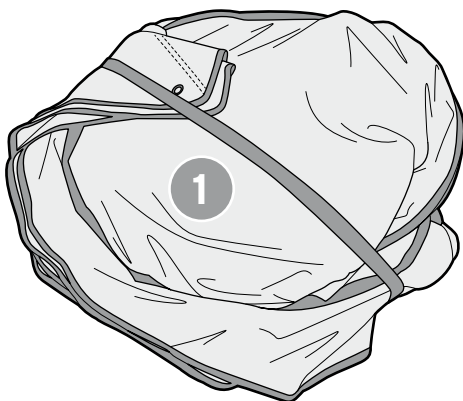


- ▷ Remove the tent **1** from the storage bag.
- ▷ Hold the tent firmly with one hand (it is under tension!) and release the elastic strap with the other hand.



2

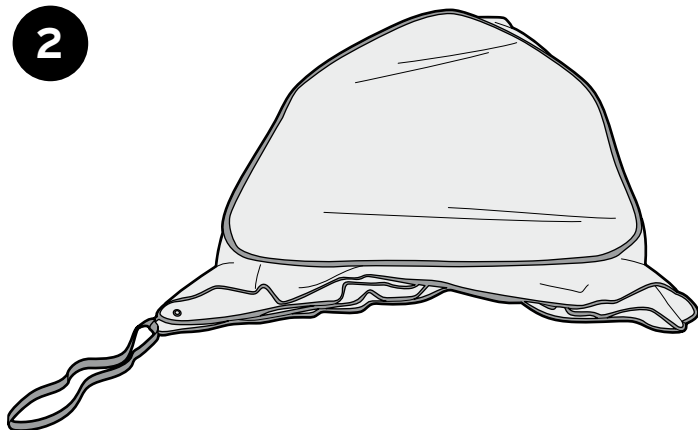

- ▷ Throw the tent 1 to 2 metres into the air in front of you. The tent will unfold and then lie flat on the ground as illustrated.

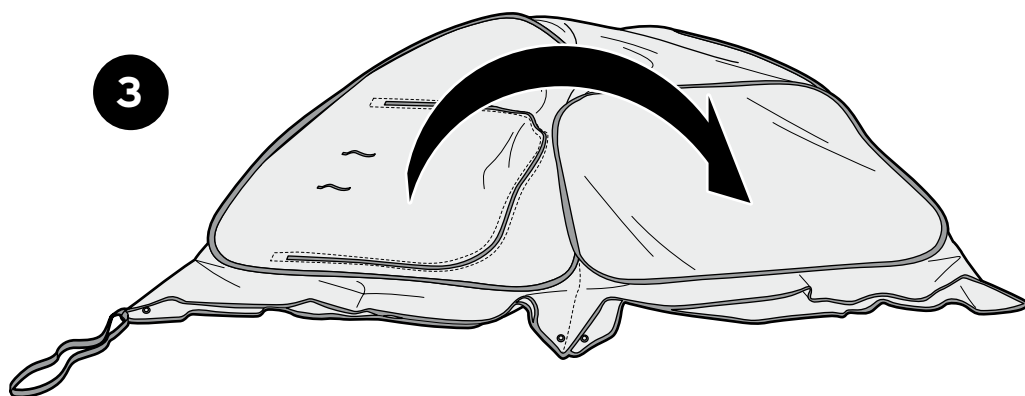


- ▷ Unfold the tent and stand it upright by pulling the side edges apart.

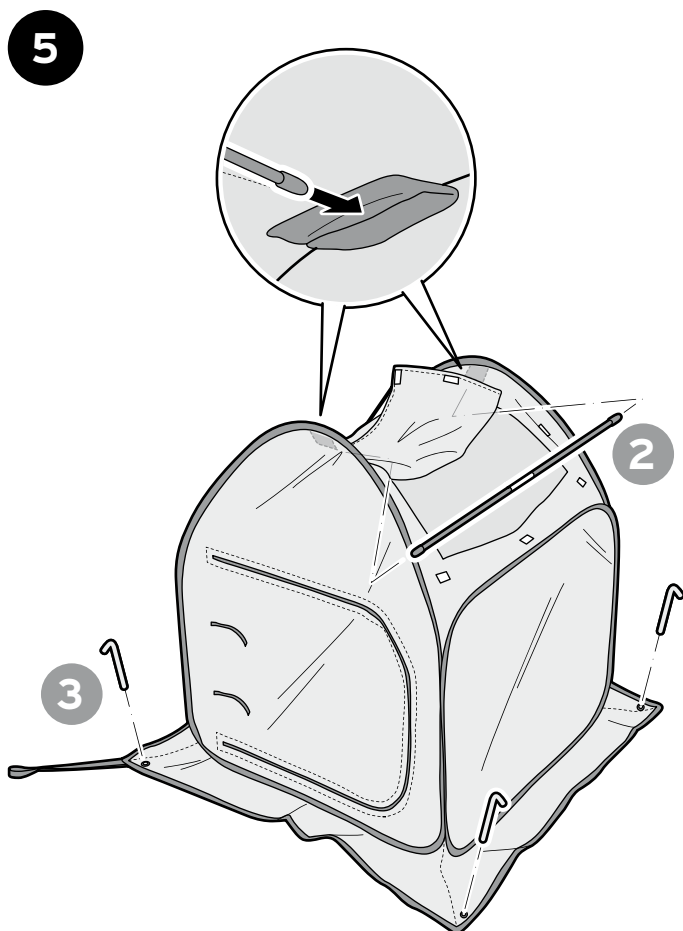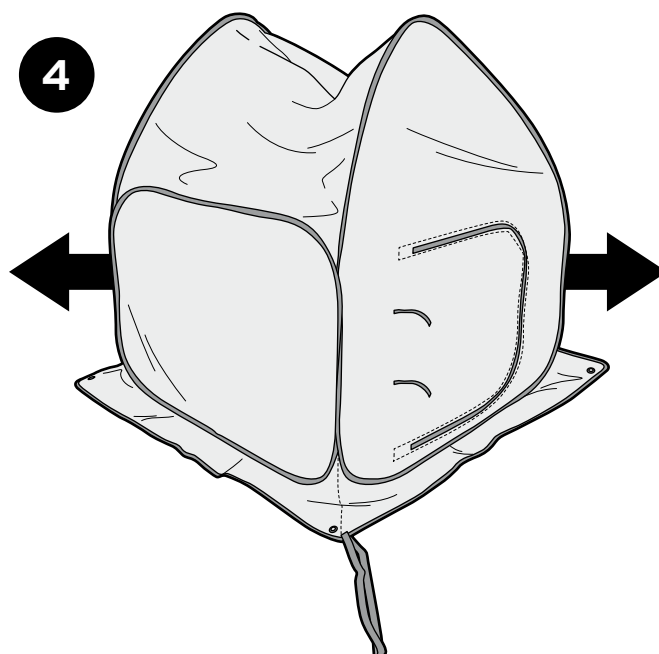

- ▷ Open the panel in the roof.
- ▷ Connect the ridge pole **2** and insert it into the pockets on the inside of the tent roof.
- ▷ Close the panel in the roof.
- ▷ Secure the tent with the tent pegs **3** provided. Insert the tent pegs into the ground at a slight angle to obtain greater resistance.


Disassembly

1

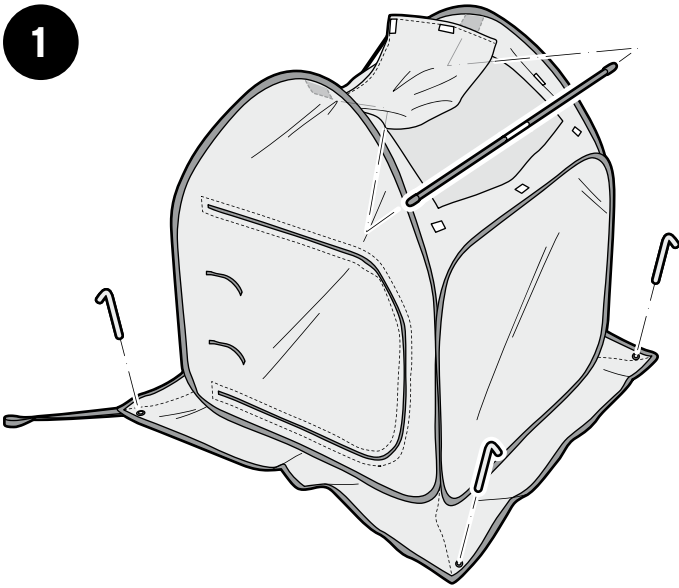


- ▷ Close the door.
- ▷ Remove the tent pegs.
- ▷ Open the panel in the roof.
Remove the ridge pole and
fold it together.
- ▷ Close the panel in the roof.


2

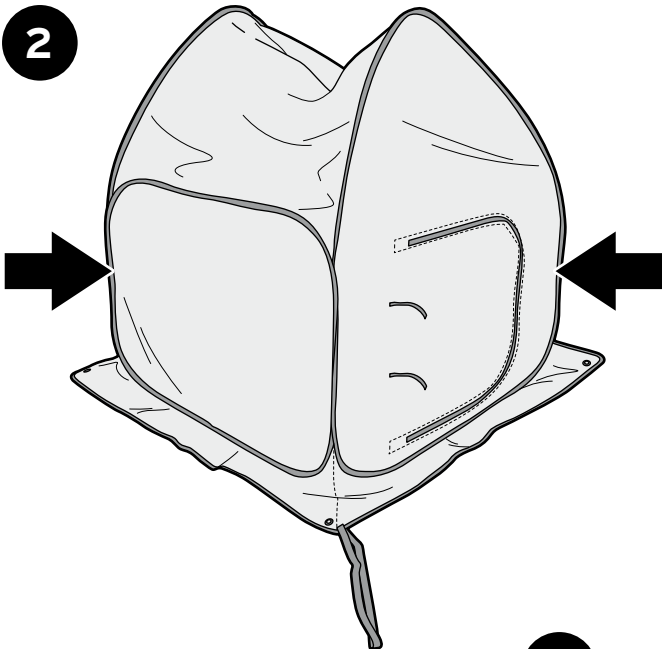

- ▷ Fold the tent by pushing the side edges together
and then laying it on the ground.
- ▷ Fold the tent together once more while it is in this
position.


3

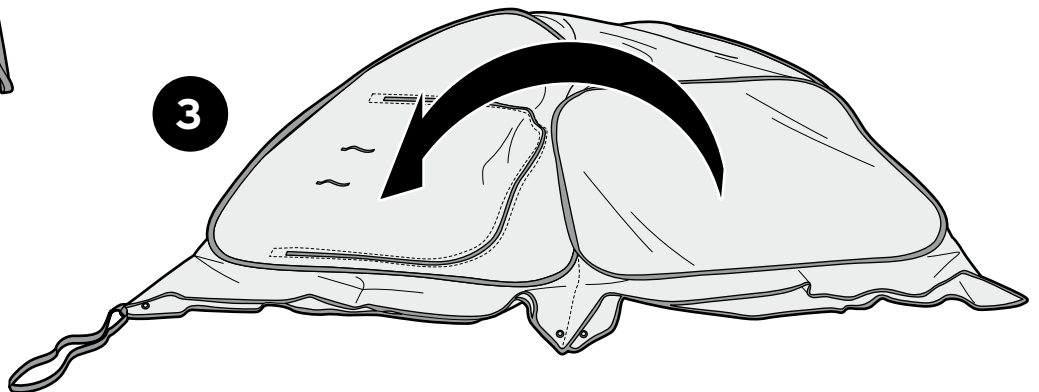

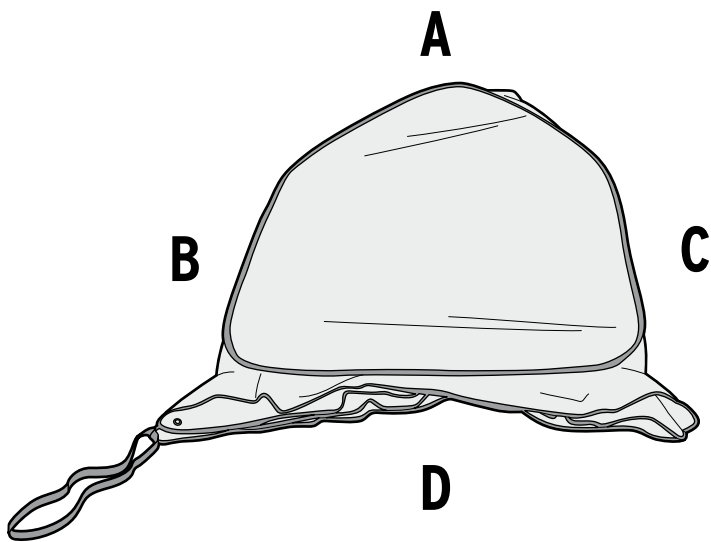


The tent is now lying flat on the ground.
To fold it up so that it fits into the bag,
proceed as follows:


- ▷ Kneel on the bottom edge **D** and pull the top of the tent **A** in towards you as illustrated.

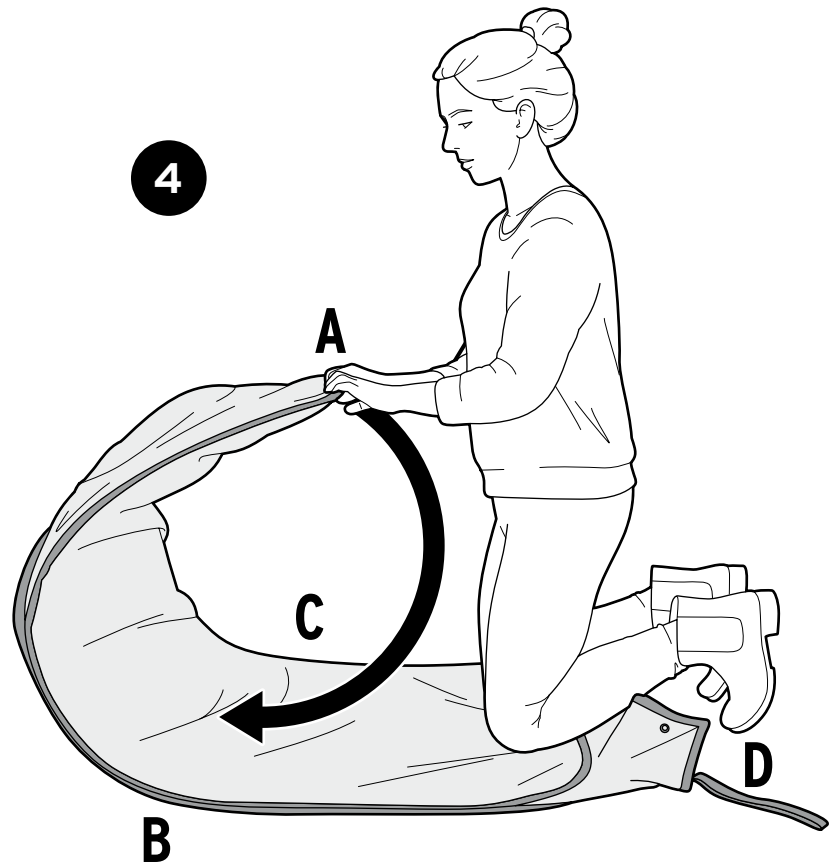

- ▷ Roll the top of the tent **A** in until it is pointing away from you again.

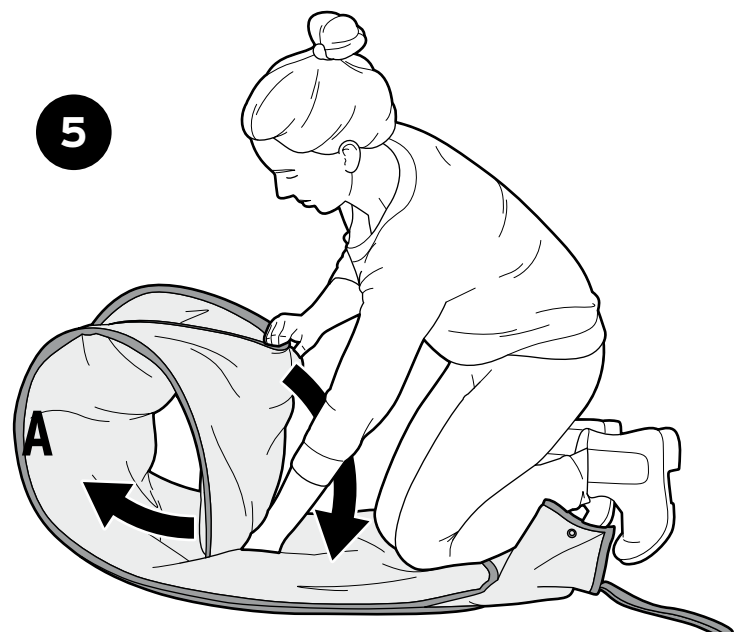


6

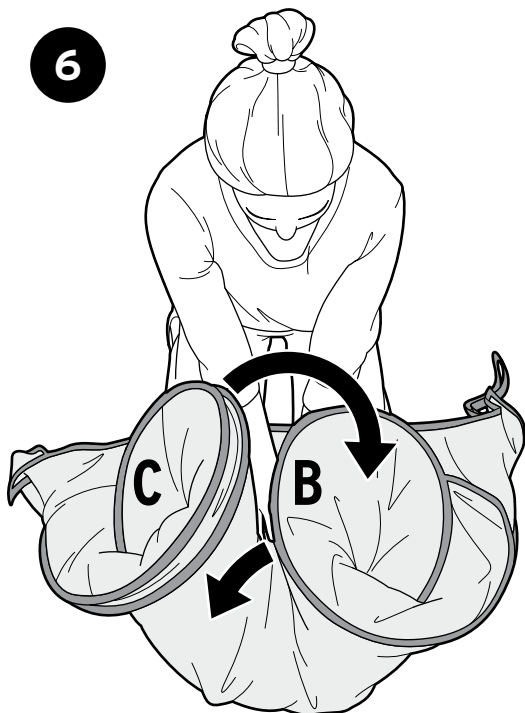


- ▷ The sides **B** and **C** will automatically form circles. When the circles are formed, you will also feel the tension subsiding - you're almost there!
- ▷ Pull the circles **B** and **C** over one another and press downwards.
- ▷ Then push the circles **B** and **C** into one another as far as possible.

7

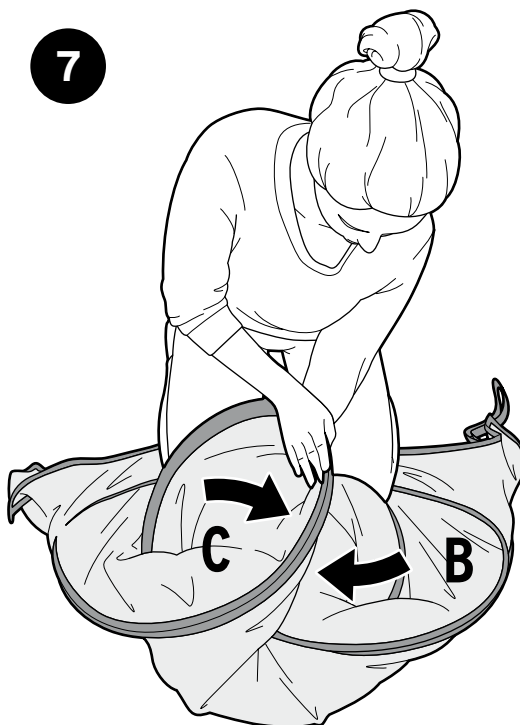

8

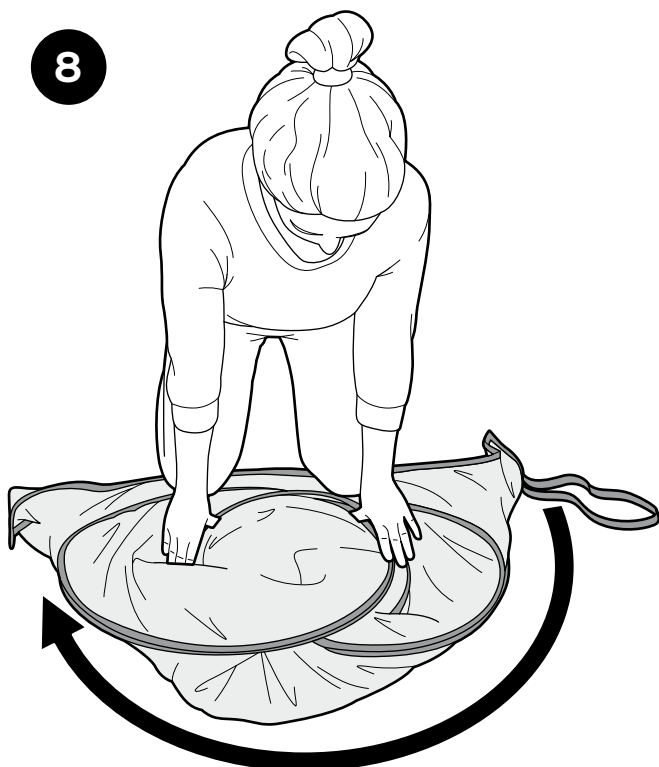

- ▷ Hold all circles firmly and fasten the tent together with the elastic strap. The elastic strap must reach around the longer side for this.
- ▷ Store the tent and the folded-up ridge pole in the storage bag.
- ▷ Store the tent pegs in the small bag provided.



Scan the QR code and watch a video on how
to fold up the plant protection tent.



https://www.youtube.com/watch?v=GL0hd9um_xs

Product number: 702 578
