 





Solar lantern

en Instructions for use

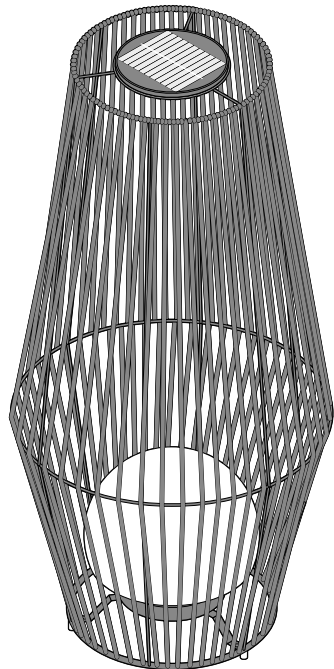

 Product number: 700 029

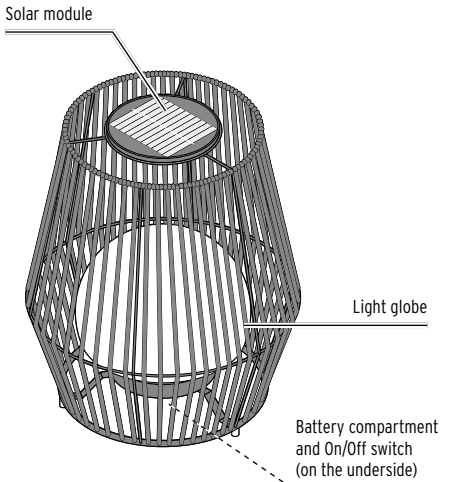

Product number: 700 030



Safety warnings

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Intended use

The solar lantern is suitable for decoration and not as lighting. It is designed for permanent outdoor use. However, you should take it inside in the event of strong winds. It is designed for private use and is not suitable for commercial purposes.

Danger to children

- Swallowing rechargeable batteries can be fatal. If a battery is swallowed, it can lead to severe internal chemical burns and even death within 2 hours. Therefore, keep both new and old rechargeable batteries as well as the product itself out of the reach of children. If you think that a rechargeable battery has been swallowed or has entered the body in any other way, seek medical advice immediately.
- Keep the packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

Danger of injury

- Do not operate the product using standard, non-rechargeable batteries. Risk of explosion!
- Rechargeable batteries must not be taken apart, thrown into fire or short-circuited.
- If a rechargeable battery has leaked, avoid contact with skin, eyes and mucous membranes. If necessary, rinse the affected areas with water and consult a doctor immediately.

Material damage

 
- Do not use the product if it shows any visible signs of damage.
- Due to the extremely long service life of the LEDs, it is not necessary to replace them. They cannot and must not be replaced. The LEDs are permanently installed. Opening the product to remove the LEDs will damage it.
- Remove the rechargeable battery pack from the product when it is spent or if you are not intending to use the product for a long period of time. This will prevent damage caused by leakage.
- Do not make any modifications to the product. Have repairs to the product carried out only at a specialist workshop or as arranged by our customer care service.
- Do not stick anything to, cover or paint the solar module.
- Do not use any caustic, aggressive or abrasive products for cleaning.
- The product is suitable for outdoor use and complies with protection type IP44. This means that the product is protected against contact with tools, wires and foreign objects with a diameter larger than 1 mm and splashes of water, such as rain. However, you should protect it from heavy rain and streams of water. The product must never be operated under water. This would immediately result in a short circuit and present the risk of an electric shock.
- The product is suitable for outdoor use from a minimum temperature of approx. -10 °C. If the temperature falls below this level, store the product inside, otherwise it may become damaged.

Use

Choosing a location

- The light works independently of any electric power source. However, since it depends on light from the sun, you should consider and observe the following:
- Set up the product in a sunny location. Choose a spot where the solar module will be exposed to direct sunlight for as long as possible. The rechargeable battery pack can only recharge if the solar module is in a sunny location.
 - Avoid positioning the light in a fully, or mostly shady location (beneath trees, roof ridges, etc.). Do not set up the product on the north side of a building where it would not attract sufficient sunlight during the day.
 - The solar module should not be continuously exposed to other sources of light during the night, for example strong spotlights in a driveway or garage entrance, etc. Keep in mind that many light sources only switch on at night, such as those activated by a timer or motion sensor.

Switching on/off

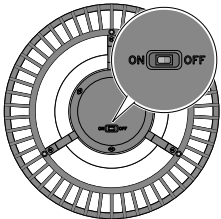

- Slide the On/Off switch on the underside of the light to **ON** to activate the light. This is the standard setting in which the light will switch itself on and off again, fully automated:
 - The light switches on at dusk.
 - The light switches off at dawn.
- Slide the On/Off switch on the underside of the light to **OFF** to switch the light off. The light is now switched off completely. The battery pack will continue to charge once there is sufficient light.

Charging the battery pack

- Make sure that the solar module is provided with as much light as possible. If necessary, place the light in a sunnier location.
- Depending on the weather and sun intensity it can take a few hours for the solar module to fully charge the battery pack.
- During the winter or after a successive number of cloudy days you may find that the battery pack is not sufficiently charged. If this happens, slide the On/Off switch on the underside of the light to **OFF** to deactivate the light. The battery pack will charge even when the light is switched off.

Cleaning

NOTICE - material damage

- Do not use any caustic, aggressive or abrasive products for cleaning.

- Wipe the light with a soft, slightly damp cloth.

Problems / solutions

The light is not lighting up or is producing only a dim light.

- Are the surroundings too bright? Check whether other sources of light (such as street lights or time or motion sensor-controlled outdoor lights) are shining onto the solar module. If necessary, change the location.
- Is the solar module provided with sufficient sunlight? Change its location if necessary.
- Is the battery pack completely charged? Switch the light off for a few days so that the battery pack can be fully recharged.
- Is the battery pack worn out? Replace the battery pack as described in the chapter titled “Removing / replacing the battery pack”.

The LEDs are faulty.

- The LEDs cannot be replaced.

 
Performance varies depending on the season.

- This is due to weather conditions and is not a fault. Weather conditions are best during the summer and unfavourable in the winter or after a successive number of cloudy days.


Removing / replacing the battery pack

The rechargeable battery pack is designed for long-term operation. However, after a long period of use, it may need to be replaced. Rechargeable batteries are subject to standard wear and tear, and performance can diminish.


- Slide the On/Off switch to **OFF**.
- Lay the light on its side. Note that the light globe is connected to the light frame with a cable and you have little room for manoeuvring when removing it.

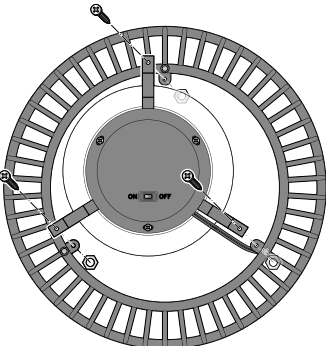

 - Hold the nuts in position with one finger and loosen the screws of the mounting plates on the underside of the light using a Phillips screwdriver. Carefully pull the light globe out of the light unit. Be careful not to rip off the cable!

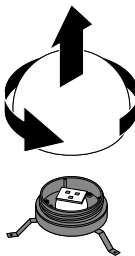

- Unscrew the lampshade.

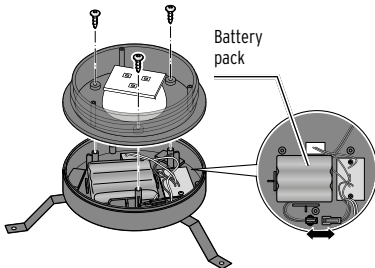 

- Loosen the screws on the cover and carefully remove it from the battery compartment. Again, be careful not to rip off the cable inside the battery compartment!
- Remove the plug of the connection cable from the socket on the circuit board as illustrated and remove the battery pack from its holder.
- Insert the plug of the new battery pack. You can order a new battery pack by contacting our customer care service (see the chapter titled “Warranty”).
- Replace the cover on the battery pack and tighten the screws.
- First replace the lower lampshade and then the upper one on the battery compartment.
- Insert the light globe into the frame and screw the mounting plates tight with the screws and nuts.
- Slide the On/Off switch on the underside of the light back to **ON** to activate the light.

Technical specifications

Model:	700 029 (big) / 700 030 (small)
Power supply:	
Solar module:	5.5 V / 0.8 W
Rechargeable battery pack:	3x HR6 (AA) Ni-MH 1.2 V / 1000 mAh
Bulb:	LEDs (non-replaceable)
IP code:	IP44
Protection class:	III
Ambient temperature:	-10 to +40 °C

Made exclusively for:
Tchibo GmbH, Überseering 18,
22297 Hamburg, Germany

Disposal

The **product**, its **packaging** and the built-in **rechargeable battery pack** have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Appliances, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste!

You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities. Flat single-use/rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

For instructions on how to remove the rechargeable battery pack, see “Removing / replacing the battery pack”.

Warranty

Tchibo GmbH grants a **three-year warranty** from the date of purchase.
Tchibo GmbH, Überseering 18,
22297 Hamburg, Germany

We will remedy all defects in workmanship or materials **within the warranty period**. In order for the warranty to be granted, all warranty claims must be accompanied by proof of purchase from Tchibo or from an authorised Tchibo distribution partner. This warranty is valid within the EU, Switzerland and Turkey.

The warranty does not cover worn parts, consumables, or damage resulting from improper use or inadequate descaling. Parts and consumables can be ordered from our customer care service.

This warranty does not restrict **statutory warranty rights**. Statutory warranty rights can be asserted free of charge.

Service and repair

If, contrary to our expectations, a defect is found, please contact our customer care service. Our customer consultants will be happy to advise you on further procedure.

If you have any questions relating to product information, ordering accessories or servicing, please contact our customer care service. Please have the product number to hand in case of any queries.

Customer care service

Email: service@tchibo.de