



# Curling iron

en Instructions for use

## At a glance (features)

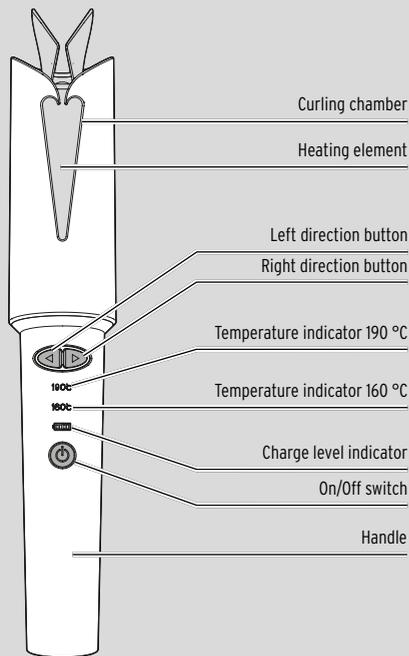

## Underside

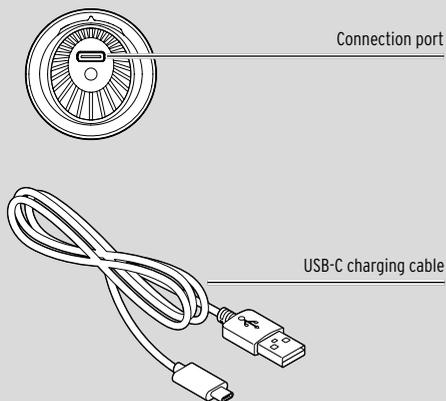

Model: 724 924  
Manufactured by:  
Commaxx BV, Wiebachstraat 37  
6466 NG Kerkrade, The Netherlands  
tchibo@lenco.com

## For your safety

This product is equipped with safety features. Nevertheless, read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage.

Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

### Intended use

This product is intended for styling human head hair and is not suitable for animal hair. Do not use it on artificial hair.

The product is suitable for use in dry indoor rooms.

The product is intended for private use and is not suitable for commercial purposes.

### Danger to children and people with limited ability to operate appliances

This appliance can be used by children aged 8 and over and by people with reduced physical, sensory or mental capabilities or a lack of experience and/or knowledge, provided they are supervised or have been trained in the safe use of the appliance and understand the potential dangers. Children must not be allowed to play with the appliance. Cleaning and user maintenance must not be carried out by children unless they are supervised.

Keep packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

### Danger due to electricity

The product must only be charged in dry indoor rooms. To charge the product, use a suitable USB mains adapter (see "Technical specifications"; not included) and only the USB-C charging cable provided.

Do not use or charge the product near water. The product must not come into contact with water or other liquids while it is connected to the power supply. Do not immerse the product in water or other liquids, as this poses a risk of electric shock.

 **WARNING** - Do not use or charge the appliance near bathtubs, shower units, or over filled washbasins or any other receptacles filled with water.

If the appliance falls into water while it is charging, do not reach for it! Remove the mains adapter from the power socket immediately. Allow the appliance, USB-C charging cable and mains adapter to dry out completely before plugging the mains adapter back into the power socket.

The appliance must not be charged outdoors or in rooms with high humidity.

Never touch the USB-C charging cable or the mains adapter with wet hands when plugging the mains adapter into or unplugging it from the power socket.

Do not use the appliance with wet hands or while standing on a wet floor. Use the appliance only on dry hair; the hair must not be damp or wet.

Unplug the mains adapter from the power socket if malfunctions occur while charging, once the appliance is fully charged, during thunderstorms and before cleaning the appliance.

Position the USB-C charging cable in such a way that the appliance cannot be accidentally pulled down by it.

The USB-C charging cable must not be kinked or crushed. Keep the cable away from hot surfaces and sharp edges.

Do not use the appliance if it shows visible signs of damage or has been dropped.

If the USB-C charging cable is damaged, do not continue using it to charge the appliance.

Do not make any modifications to the product. Do not open the casing. To avoid hazards, have repairs to the appliance carried out only by a specialist workshop.

### Warning - risk of fire/explosion

The appliance contains a firmly built-in lithium-ion rechargeable battery. Do not throw the appliance into a fire. Risk of explosion!

Do not modify and/or deform/heat/dismantle rechargeable batteries. Do not immerse them in water either.

Do not charge the product in the vicinity of explosive gases.

**Warning!** Rechargeable lithium batteries can explode ...

... if they are exposed to extreme heat, such as sunlight, fire, etc., or extremely low air pressure during use, storage or transport.

Use the product only in moderate climatic conditions.

... if they are taken apart, thrown into a fire or short-circuited.

The rechargeable battery is firmly built into the product and cannot and must not be replaced or removed by the user. There is a risk of explosion if the rechargeable battery is replaced incorrectly. It should be replaced only with an identical battery or one of the same type. If the rechargeable battery is faulty, contact a specialist workshop.

The product becomes warm while charging. Do not cover the product.

The heating element in the appliance becomes very hot during use. While heating up and after use, position the appliance so that the heating element is not able to come into contact with any other objects until it has cooled down sufficiently. Ensure that any surface on which the appliance is placed is heat-resistant.

Do not cover the appliance (e.g. with a towel) while it is still switched on or the heating element is still hot.

Never leave the appliance unattended while switched on or when it is heating up or cooling down.

### Danger of burns

The appliance heats up very quickly. The heating element in the appliance becomes very hot during use. Make sure that you keep enough distance between the appliance and your scalp, ears and face. Do not touch the heating element. Only hold the appliance by the handle.

Allow the appliance to cool down completely before cleaning or putting it away.

Do not curl the same strand of hair more than twice, otherwise you may damage your hair.

### Material damage


Do not use any caustic or abrasive products, or hard brushes, etc. for cleaning. Make sure that no moisture gets into the appliance while cleaning it.

## Charging the battery

The built-in rechargeable battery comes in a half-charged state. This is to prevent it from becoming damaged. Charge the battery fully before using the product for the first time.

You will need a USB mains adapter (not included); see "Technical specifications".

 **DANGER** due to electricity  
Do not charge the appliance directly next to or over a washbasin filled with water.

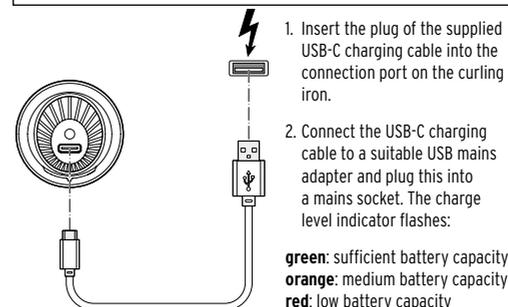

3. The rechargeable battery is fully charged when the charge level indicator lights up green continuously. Unplug the mains adapter from the mains socket and disconnect the USB-C charging cable from the port on the curling iron.

▷ If charging does not work, unplug the mains adapter from the mains socket and disconnect the USB-C charging cable for a few seconds before connecting them again.

If the rechargeable battery is flat, the charging time is approx. 3.5 hours. Operating time with a fully charged battery is approx. 55 minutes.

 To preserve the rechargeable battery's full capacity for as long as possible, you should fully recharge the battery every 3 months, even if you do not use the product. The battery will best hold its charge at normal room temperature. The lower the temperature, the shorter the battery life.

The appliance cannot be used while the battery is charging.

When the rechargeable battery is empty, the charge level indicator flashes several times and the appliance switches off.

## Using the product

 When using the appliance for the first time, you may notice a slight odour, but this is harmless. Ensure there is sufficient ventilation when using the appliance.

### Switching on

▷ To switch on the appliance, press and hold the  button for approx. 2 seconds.

A beep sounds, the charge level indicator  lights up and the temperature indicator **160°C** flashes. The appliance heats up. This process takes approx. 80 - 90 seconds.

When the set temperature is reached, a double beep sounds and the temperature indicator remains steadily lit.

The appliance is now ready for use.

### Setting the temperature

▷ Briefly press the  button to switch between the low and high temperature settings.

 Always start with the low temperature setting to protect your hair and increase the temperature only if necessary. If you have light, fine or sensitive hair, use the low temperature setting to protect it. This also applies to bleached or coloured hair. For thicker or curly hair, you can use the higher temperature setting. Experiment a little to see how each setting affects your hair. The result also depends on the length of your hair.

### Switching off

▷ To switch off the appliance, press and hold the  button for approx. 2 seconds.

A beep sounds and both the indicator light and the temperature indicator go out.

 The appliance switches off automatically if no button is pressed for approx. 5 minutes.

### Styling your hair

 **CAUTION** - risk of burns

The heating element in the appliance becomes very hot during use. Make sure that you keep enough distance between the appliance and your scalp, ears and face. Do not touch the heating element. Only hold the appliance by the handle.

Do not curl the same strand of hair more than twice, otherwise you may damage your hair.

As your hair is exposed to very high temperatures during styling, keep the following in mind:

- When choosing shampoo or other hair care products, check that they will moisturise your hair.
- Apply a heat protection product before styling your hair with the appliance. Suitable products are available from your hairdresser or from a health and beauty retailer.
- Do not use any other styling products before using the curling iron.
- Your hair should be clean and dry before styling. Never style your hair when it is wet!




1. Comb your hair through first to get rid of any knots, etc. If you have thick hair, it may help to section strands with clips. Take a strand of hair up to 2 cm wide.




2. Place the strand into the curling chamber close to the roots. Hold the appliance vertically as shown in the illustration. Keep in mind that the hair above the curling chamber will not be curled.

3. Press ◀ or ▶, depending on the direction in which you want the hair to be curled. A beep sounds, the hair is drawn into the curling chamber and the heating element begins to rotate.

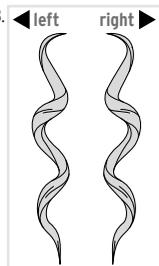

4. The heating element stops after it has rotated approx. eight times. **Keep holding the appliance in position** until a beep sounds.

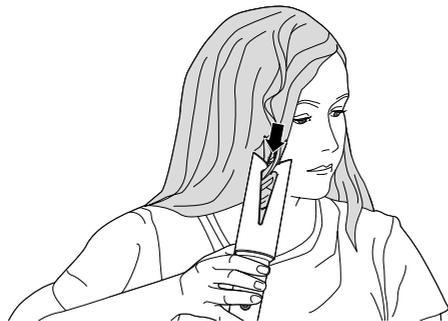

5. You can either start a new styling cycle on the same strand by pressing ◀ or ▶, or carefully pull the appliance **downwards** to release the strand.

Do not curl the same strand of hair more than twice, otherwise you may damage your hair.

6. Repeat the process strand by strand.

7. If needed, apply suitable styling products to set your hairstyle.

**i** If too much hair gets into the curling chamber, the appliance will stop and emit continuous beeps. If this happens, carefully remove the appliance from your hair. Use thinner strands of hair when using the appliance.

### After use

▷ To switch off the appliance, press and hold the  button for approx. 2 seconds.

A beep sounds and both the indicator light and the temperature indicator go out.

Allow the curling iron to cool down completely on a heat-resistant surface.

### Cleaning and storage

**DANGER** due to electricity

- Do not submerge the appliance in water or other liquids, as this poses a risk of electric shock.
- Switch off the appliance before cleaning it.

**CAUTION** - risk of burns

Allow the appliance to cool down completely before cleaning, recharging or putting it away.

- ▷ To clean the appliance, wipe it down as required using a soft, slightly dampened cloth. Make sure that no moisture gets into the appliance. Then allow it to dry completely.
- ▷ If necessary, recharge the battery before putting the appliance away. Then it will be ready to use straight away next time.
- ▷ Store the appliance in a dry place out of the reach of children.

### Problems / solutions

#### Not working.

Battery flat?

▷ Charge the appliance.

#### Appliance switches off during use.

The appliance switches off automatically if no button is pressed for 5 minutes.

▷ Switch the appliance back on.

During operation, if the charge level falls below a certain point, the charge level indicator flashes several times and the appliance switches off automatically.

▷ Charge the appliance.

#### The appliance stops during use and emits beeps.

There is too much hair in the curling chamber.

▷ Carefully remove the appliance from your hair. Use thinner strands of hair.

#### The temperature and charge level indicators flash red alternately.

This means there is a fault in the temperature sensor.

▷ Contact a specialist workshop.

### Technical specifications

Product number:	724 924
Rechargeable battery:	Lithium-ion 3.6 V DC 4200 mAh, Watt-hour rating: 15.12 Wh (tested as per UN 38.3) (non-replaceable)
Charging time:	approx. 3.5 hours
Max. operating time:	approx. 55 minutes (with a fully charged battery)
Protection class:	III 
Power consumption in off mode:	≤ 0.3 W
Mains adapter (not included):	Input: AC 100-240 V 50/60 Hz Output: DC 5 V 1.0 A
Temperature settings:	160 °C and 190 °C (+/- 15 °C)
Ambient temperature:	+10 to +40 °C
Manufactured by:	Commaxx BV, Wiebachstraat 37, 6466 NG Kerkrade, The Netherlands tchibo@lenco.com

#### Information about the inserted rechargeable battery:

Manufacturer:	Guangzhou Great Power Energy & Technology Co., Ltd., No. 912, West Village Segment, Shiliang Road, Shawan Town, Panyu District, Guangzhou City, Guangdong, Province 511483, PR China 11464986@qq.com
Email:	11464986@qq.com
Model:	INR21700-4200, 3.6Vdc, 4200mAh
Manufacturing date:	2025/10
Made in:	China

### Disposal

The product, its packaging and the built-in rechargeable battery have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



**Appliances, single-use batteries and rechargeable batteries** marked with this symbol must not be disposed of along with household waste!

You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

**Warning!** This appliance contains a rechargeable battery that, for safety reasons, is firmly built into the appliance and cannot be removed without destroying the casing.

Improper disassembly leads to safety hazards. For this reason, take the appliance intact to a collection point where the appliance and battery will be disposed of properly.