



Mini Smoothie Maker

en Instructions for use

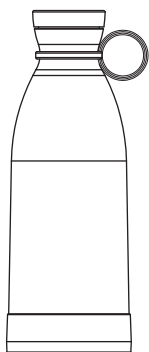

At a glance (contents)

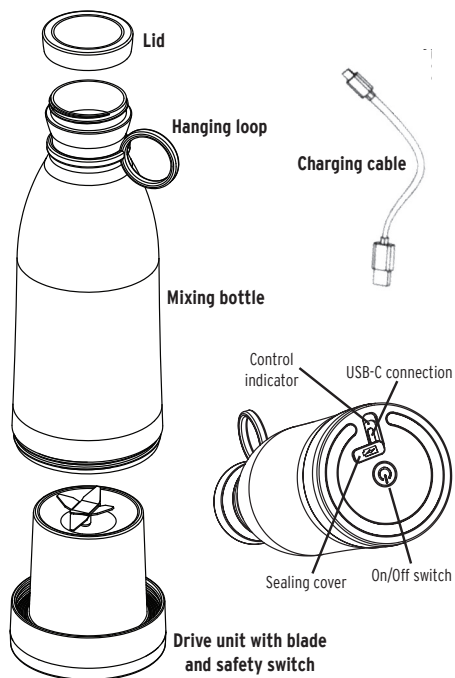

About these instructions

This product is equipped with safety features. Nevertheless, read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference.

If you give this product to another person, remember to also include these instructions.

Symbols used in these instructions:



This symbol warns you about the risk of injury.



This symbol warns you about the risk of injury caused by electricity.

Signal words in these instructions:

DANGER warns about the imminent risk of serious or fatal injury.

CAUTION warns about the potential risk of minor injuries.

NOTICE warns about the potential risk of material damage.



This symbol indicates additional information.

Safety warnings

Intended use

The appliance is intended for blending smoothies, fruit drinks, and various other beverages, such as protein shakes, milkshakes etc. The appliance is not designed to chop hard ingredients such as coffee beans, soya beans, ice cubes or frozen foods.

The appliance is designed to process domestic quantities and is not suitable for commercial use.

Danger to children and people with limited ability to operate appliances

- This appliance must not be used by children.
- This appliance can be used by persons with reduced physical, sensory, or mental capabilities, or lack of experience and/or knowledge, provided they are supervised or have been instructed in the safe use of the appliance and understand the hazards involved.
- Cleaning and maintenance by the user must not be performed by children unless they are 8 years or older and are supervised.
- Children must not play with the product.
- Keep the device and its connecting cable away from children under 8 years of age.
- Take care when handling the sharp cutting blades, emptying the container, and cleaning.
- Switch off the appliance and disconnect it from the power supply before changing accessories or approaching moving parts.
- Always disconnect the appliance from the power supply when unattended and before assembly, disassembly, or cleaning.
- Follow the instructions for the safe use of the accessories.
- Misuse and improper use are dangerous and can cause serious damage and injury.
- Hot liquids are not suitable for use in this blender. Use only liquids below 40°C.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential-type environments;
- bed and breakfast-type environments.
- Clean the product after each use. See the chapter "Cleaning and Maintenance".
- Do not immerse the electrical part of the product in water for cleaning.
- Keep the appliance and its charging cable out of the reach of children. Also store the appliance out of the reach of children when it is not in use.
- The blades are extremely sharp. Keep the blade attachment out of the reach of children.
- Keep the packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

Danger due to electricity

- The motor unit and mains cable must not come into contact with water or other liquids; there is otherwise a risk of electric shock. Do not immerse the motor unit or mains cable in water or other liquids. When removing the motor block from the container and putting it down, always place it on a dry surface.
- Do not use the appliance near sinks, with damp hands or while standing on a damp floor. If the appliance becomes damp or wet, immediately disconnect the mains plug from the power socket before touching the appliance.
- Do not charge the appliance outdoors.
- Charge the product only with a suitable detachable 5 V, max. 1 A USB power source (Safety extra-low voltage) that meets the requirements of the relevant standards. The manufacturer's instructions or the information provided in the appliance manual must always be followed for correct charging.
- Never operate the appliance if the appliance or any of its parts show signs of damage or have been dropped.
- Do not disassemble the appliance any more than as described in these instructions. Do not make any modifications to the appliance.

Risk of injury

- The blades are extremely sharp. Be careful when unpacking, inserting, removing and cleaning the blade attachment and when emptying the Mixing bottle. Never touch the blades directly with your hands. Wait for the blade attachment to come to a complete standstill before continuing to handle the appliance.
- Never leave the appliance unattended while in use.
- Do not use the appliance if the Mixing bottle, plastic lid or blade attachment is damaged, or if the blades do not rotate or only rotate with difficulty.
- Keep all utensils such as spoons, knives, etc. away from the moving blades and other moving parts.
- Only use the original attachments.

Material damage

- The appliance is designed to operate for short periods of maximum 30seconds. Let the appliance cool down for approx. 5 minutes before switching it on again. After max. 7-8 operating cycles, switch off the appliance for approx. 15 minutes
- Cut harder ingredients into small pieces before placing them in the Mixing bottle and do not overflow the Bottle. Otherwise the blades can jam and become blocked.
- Do not switch on the appliance when the Bottle is empty. The motor and blade attachment bearing may overheat and become damaged.
- Protect the appliance from knocks, falls, dust, moisture, direct sunlight and extreme temperatures.
- Always place the appliance on a flat, stable, dry and clean work surface. The surface must be hard-wearing, as occasional splatters are unavoidable. Do not place the appliance directly on the edge of the work surface. Keep the appliance a sufficient distance away from walls, furniture, etc., as well as from sources of heat such as hobs and ovens.
- Some varnishes, synthetic substances and types of furniture polish may react adversely with the material of the anti-slip ring and soften it. To avoid unwanted marks on furniture, place a non-slip mat underneath the product if necessary.
- Do not use caustic or abrasive cleaning products.

Notes on the rechargeable battery

- Never expose the batteries to excessive heat (for example, strong sunlight or fire), and never dispose of them by throwing them into a fire. The batteries could explode.
- The battery is permanently installed in the product and cannot be replaced.
- Never damage the battery. Damage to the battery cover could result in an explosion and fire!
- Never short-circuit the battery's contacts or connections. Do not throw the battery or product into the fire. There is a risk of explosion and fire!
- Recharge the battery regularly, even if the product is not needed. Due to the battery technology used, no prior discharge of the battery is required.
- Never leave the product's battery unattended while it is being charged.
- Use only under normal room conditions (temperature and humidity).
- The product is only suitable for use in temperate latitudes. Do not use in tropical or particularly humid climates.
- Do not move the product from a cold environment to a warm one and vice versa. Condensation can cause damage to the device and its electrical components.
- Do not leave cells and batteries charged for extended periods when not in use.
- The original publications and information about the products are to be kept for future information and reference purposes.
- If the battery is exposed to extremely low air pressure, it may cause an explosion or leakage of flammable liquids or gases.
- Before disposing of the product, consult an electrician or your dealer to remove the batteries and dispose of them in an environmentally friendly manner.

EG - DECLARATION OF CONFORMITY

The product described in this instruction manual complies with all relevant harmonized requirements of the EU. The complete declaration of conformity and instruction manual can be found online at www.jaxmotech.de/downloads.

Use

DANGER to children

- Keep the packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!
- Store the appliance, charging cable and blade attachment out of the reach of children.

DANGER - risk of fatal electric shock

- The motor unit and charging cable must not come into contact with water or other liquids.

CAUTION - risk of injury

- The blades are extremely sharp. Be careful when unpacking, inserting, removing and cleaning the blade attachment and when emptying the mixing bottle. Never touch the blades directly with your hands. Wait for the blade attachment to come to a complete standstill before continuing to handle the appliance.

Prior to first use

- ▷ Remove all packaging materials.
 - ▷ Clean all parts as described under "Cleaning and storage".
 - ▷ Let all parts dry well before assembling the appliance.
- Place and screw the mixing bottle onto the drive unit to press the safety switch before charging.

Charging the battery

Connect the USB-C connector to the USB-C charging socket and the USB-A connector to a suitable USB power source. The charge indicator light illuminates red during charging and blue when the battery is fully charged. Please charge the battery for at least 2-3 hours before using it for the first time.

Instructions for safe use and optimal results

- The appliance is not designed to chop hard ingredients such as coffee beans, soya beans, ice cubes or frozen foods.
- Place and screw the blender bottle onto the drive unit.
- Wash, peel, and core the fruit, then cut it into 1 x 1 x 1 cm cubes.
- Place the prepared fruit in the blender bottle and add water, milk, or other beverage. The total amount of ingredients and liquid should not exceed 300 ml.
- Note:** The indicator will flash blue twice by pressing the power button but not turn on the appliance. This is safety feature and ensure the safety switch is trigger on.
- Close the blender bottle with the lid.
- Turn on the appliance by press and hold the power button for around 2 second. During operation, you can gently shake the container by holding it at a 45-degree angle for better blending. The blending time is around 30 seconds. To stop the process, press the power button again and the blue indicator light will off.
- After blending, you can open the lid and enjoy your freshly prepared juice.
- Do not add boiling hot liquid or ingredients.
- Highly pigmented food such as carrots, raspberries, etc. may slightly stain the plastic parts that they come into contact with. This is perfectly normal and is not a defect.

- Always empty the container immediately after use. It is not suitable for storing food over long periods of time.
- To prevent the appliance from overheating, do not operate it if the container is empty.

Cleaning and storage

DANGER - risk of fatal electric shock

- Turn off the appliance before cleaning.
- Do not immerse the motor unit in water to clean it.

CAUTION - risk of injury

- The blades are extremely sharp. Be especially careful when cleaning the blade attachment. Never touch the blades directly with your hands.
- NOTICE** - material damage
- Do not use any caustic, aggressive or abrasive products for cleaning.

Cleaning the motor unit

1. Turn off the appliance.
2. Wipe the motor unit with a slightly damp cloth. Use a little washing-up liquid if necessary.
3. Then dry the motor unit thoroughly.

Clean the mixing bottle and lid

1. Thoroughly clean the Mixing bottle, blade attachment and plastic lid with warm water and a little washing-up liquid. **To prevent injury, ensure that the water used for cleaning is clear enough for you to see the blades while washing.**
2. Rinse these parts in clean water and dry them well.
3. Allow all parts to dry thoroughly before reassembling the appliance. Moisture can cause mould to form.

Cleaning the Blade Insert

Fill the mixing bottle with water and a little dish soap, close it, and turn on the appliance. After a short time, pour out the dirty water and then rinse the mixing bottle thoroughly.

- **Caution!** Do not immerse the drive unit in or under running water. Wipe the drive unit only with a slightly damp cloth.

Storage

- ▷ Store the appliance out of the reach of children.

Technical specifications

Model	: SM 149
Product number	: 733 505
USB Input	: 5 V === 1 A
Rechargeable battery	: lithium-ion: 3.7 V === 800 mAh, Watt-hour rating: 2.96 Wh (tested as per UN 38.3) (non-replaceable)
Charging time	: approx. 2-3 hours
Short-term operation	: max. 30 seconds.
Power consumption in off mode	: ≤ 0.3 W
Protection class	: III
Mains adapter (not included)	:
Input	: 100-240 V ~, 50/60 Hz
Output	: 5 V === 1.0 A
Mixing bottle capacity	: around 420 ml
Ambient temperature	: +10 to +40 °C
Manufactured by	: Jaxmotech GmbH, Ostring 60 66740 Saarlouis, Germany info@jaxmotech.de

In the course of product improvement, we reserve the right to make technical and optical modifications to the product.

Information about the built-in rechargeable battery:
Manufacturer: Xinxiang Hongli Supply Source Technology Co., Ltd.
West Section of Xinglong Road, Xinxiang Economic Development Zone,
Xinxiang County, Xinxiang City, Henan, P.R. China
Email: 760172564@qq.com
Model: IMR 18650-800mAh
Manufacturing date: 2025/12
Made in: China

Problems / solutions

The appliance does not switch on, even when the On/Off button is pressed.	<ul style="list-style-type: none">• The rechargeable battery is empty.• The mixing bottle is not correctly positioned on the drive unit. Reassemble the appliance and long press & hold the power on button around 2 second.• The motor is blocked. The indicator will light flash red three times. Power off and restart the appliance.
Unpleasant smell coming from the motor.	<ul style="list-style-type: none">• This is normal and harmless on first use. Make sure there is sufficient ventilation.• If the appliance continues to emit the smell after repeated use, have the appliance checked at a specialist workshop.
The blade attachment rotates with difficulty or not at all.	<ul style="list-style-type: none">• The added ingredients are blocking the blade attachment. Cut the ingredients into smaller pieces and do not fill the container as high.• The appliance is not designed to chop hard ingredients such as coffee beans, soya beans, ice cubes or frozen foods.

Disposal

The product, its packaging and the built-in rechargeable battery have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment. Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Appliances, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste!

You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.



Warning! This appliance contains rechargeable batteries that, for safety reasons, are firmly built into the appliance and cannot be removed without destroying the casing. Improper disassembly leads to safety hazards. For this reason, take the appliance intact to a collection point where the appliance and battery will be disposed of properly.

Model: SM 149
Manufactured by: Jaxmotech GmbH,
Ostring 60,
66740 Saarlouis, Germany
info@jaxmotech.de

