 


Multi-purpose hair styler set

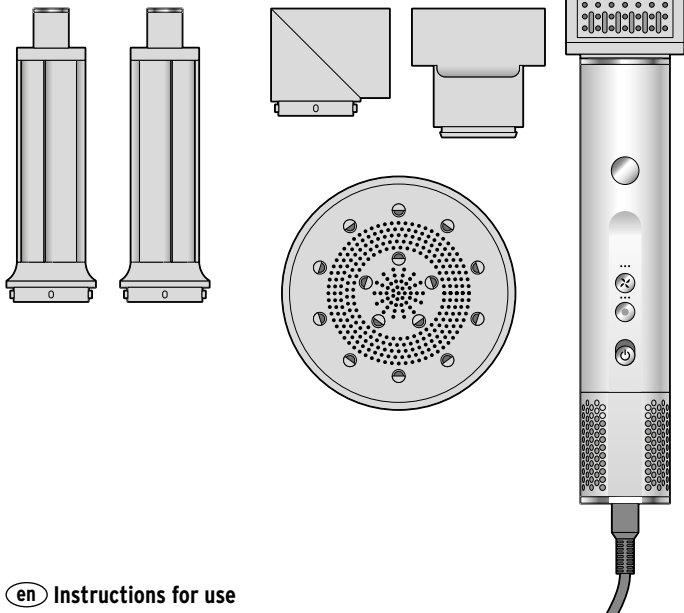

en Instructions for use

149617FV05X07XV · 2025-05

Dear Customer

Your new hair styler makes it easy to blow dry and style your hair.

The three temperature and air speed settings and five different attachments enable you to straighten your hair, create bouncy curls or soft waves, boost your hair's volume, and create specific styles.

The curling iron attachments utilise the Coandă effect. When the curling iron attachments are used, this effect causes the strands of hair to be attracted to the attachment and automatically wrap around it. This means the hair is styled by means of the airflow instead of an extremely hot surface, as is the case with conventional curling irons.

Your hair styler has also an ionic function which produces negative ions. The negative ions prevent your hair from becoming electrostatically charged and standing on end. This makes your hair smoother and gives it more shine.

We hope you enjoy using your new hair styler.

Contents

3	About these instructions	11	Changing attachments
3	Safety warnings	12	Using attachments
		16	After use
7	At a glance (features)	17	Overheating protection
9	Use	17	Cleaning
9	Fitting an attachment	18	Storage
10	Switching on and setting the options	19	Technical specifications
11	Hairdressing	19	Disposal
11	Cold air button		

About these instructions

This product is equipped with safety features. Nevertheless, read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage.

Keep these instructions for future reference.

If you give this product to another person, remember to also include these instructions.

Symbols used in these instructions:



This symbol warns you about the risk of injury.



This symbol warns you about the risk of injury caused by electricity.

Signal words used in these instructions:

DANGER warns about the imminent risk of serious or fatal injury.

CAUTION warns about the potential risk of minor injury.

NOTICE warns about the potential risk of material damage.



This indicates additional information.

Safety warnings

Intended use

- The product is intended for styling human head hair. It is not suitable for use on pets. Do not use it on artificial hair.
- The product is suitable for use in dry indoor rooms.
- It is designed for private use and is not suitable for commercial purposes.

Danger to children and people with limited ability to operate appliances

- This appliance can be used by children aged 8 and over and by people with reduced physical, sensory or mental capabilities or a lack of experience and/or knowledge, provided they are supervised or have been trained in the safe use of the appliance and understand the potential dangers. Children must not be allowed to play with the appliance. Cleaning and maintenance must not be carried out by children without supervision.
- The appliance must not be used by people unable to feel heat properly. Small children react more sensitively to heat than adults. Certain illnesses such as diabetes may also be accompanied by the inability to correctly perceive temperature. Frail or sick people or those with special needs or disabilities may not be able to call for help if they feel too warm. Therefore, do not use this appliance on children under 3 years of age, frail, sick or disabled people, or people with impaired sensitivity to heat.
- Keep the packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

Danger due to electricity

- Do not use the appliance near water. The appliance must not come into contact with water or any other liquids. Never immerse the product in water or other liquids as this poses a risk of electric shock.
-  **Warning** - Do not use the appliance near bathtubs, shower units, over washbasins or any other receptacles filled with water.
- **Warning** - As additional protection, we recommend installing a residual current device (RCD) with a rated tripping current of no more than 30 mA in the electrical circuit supplying the bathroom. Ask your electrician for advice.
- Do not use the appliance with damp hands or while standing on a damp floor.
- Only use the flat brush and curling iron attachments on dry or damp hair. If your hair is wet, you can only use the hairdryer/adapter attachment, the diffuser and the precision nozzle.

- Only insert the mains plug into a properly installed power socket with a mains voltage that corresponds with the technical specifications of the appliance.
Ensure that the power socket is easily accessible, so that the mains plug can be disconnected quickly if necessary.
- Remove the mains plug from the power socket when you are not using the appliance, if malfunctions occur during use, during thunderstorms and before cleaning the appliance.
- Do not wind the mains cable around the appliance. Over time, doing this can lead to cable breakage and thus to the risk of cable fire and electric shock.
- The mains cable must not be kinked or crushed. Keep the mains cable away from hot surfaces and sharp edges. Do not hang the appliance up by its cable.
- Do not use the appliance if it or the mains cable shows any signs of damage or if the appliance has fallen down.
- Do not make any modifications to the product. Do not attempt to replace the mains cable yourself. If the mains cable is damaged, it must be replaced only by the manufacturer or a similarly qualified person in order to avoid hazards. Have repairs to the appliance carried out only by a specialist workshop or by a similarly qualified person. Improper repairs can result in considerable risks to the user.
- Only use the accessories supplied.
- Do not insert any objects into the air intake or air outlet openings.

 
Danger of burns/fire/injury

- The appliance heats up very quickly. The attachments become very hot during use. Make sure that you keep enough distance between the appliance and your scalp, ears and face. Do not direct the airflow towards eyes or other sensitive parts of the body.
- During use, hold the curling iron attachments only by the insulated tip.
- Do not use spray products near the appliance during use. In unfavourable conditions the spray might ignite.
- Keep your hair a safe distance away from the air intake openings. Failure to do so could result in your hair being sucked into the air intake openings, which could damage both your hair and the appliance.
- Leave the appliance and its attachments to cool down completely before cleaning them or putting them away.
- Do not leave your hair wrapped around the curling iron attachments for more than 10 seconds at the higher temperature setting. When using an attachment, also do not hold the attachment on the same part of the hair for any longer than 10 seconds. Otherwise your hair may be damaged.
- The attachments get very hot. After use, put the appliance down where the attachment is not touching anything until it has cooled down sufficiently. Ensure that any surface on which the appliance is placed is heat-resistant.
- Never leave the appliance unattended when it is switched on or when it is heating up or cooling down.
- Do not cover the appliance (e.g. with a towel) when it is switched on.

Material damage

- When styling your hair, only hold the appliance by the handle and not by the air grille. The air intake openings could be blocked or the air grille could come loose.
- Do not use caustic or abrasive agents or hard brushes, etc. for cleaning.


At a glance (features)

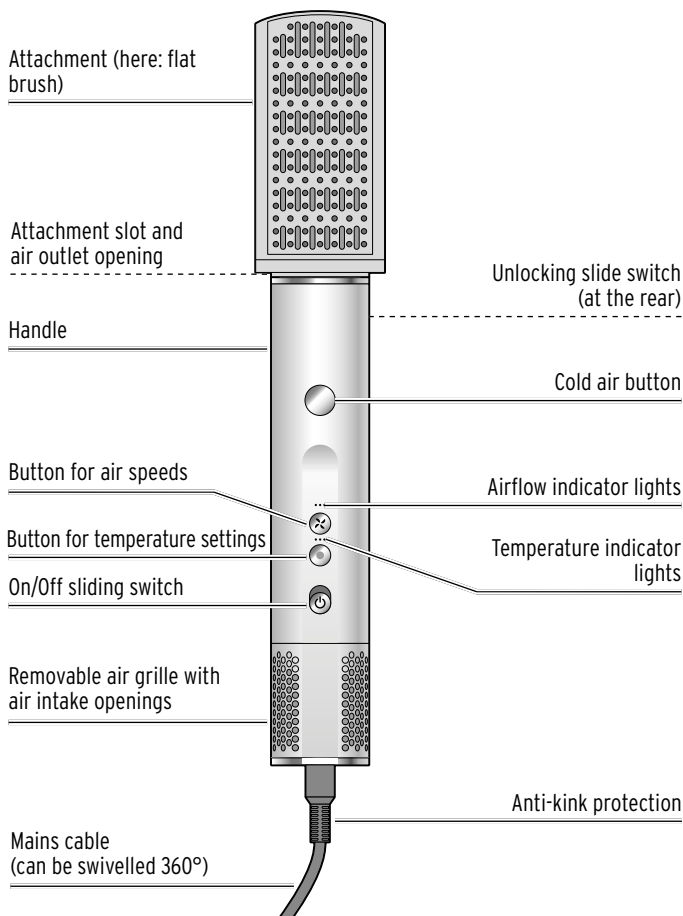

Attachments


Flat brush

 for straight-
ening

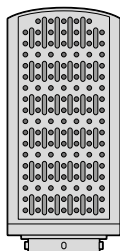

Hairdryer/adaptor

 for drying and using the precision
nozzle and diffuser

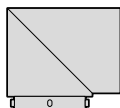


Curling irons

for curls and waves

Rotating
left

 
Rotating
right

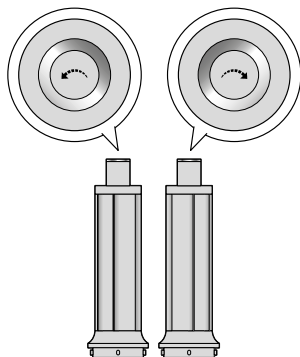

Precision nozzle

for targeted drying of sections of hair

 
(can only be used with the hairdryer/
adaptor attachment)

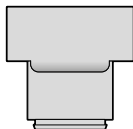

Diffuser

for curly hair

 (can only be used with the hair-
dryer/adaptor attachment)

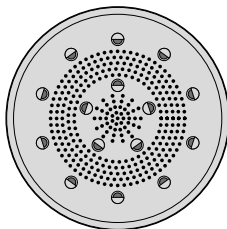

Use



DANGER - risk of fatal electric shock

Only use the flat brush attachment and curling irons on dry or damp hair. If your hair is wet, you can only use the hairdryer/adapter attachment, the diffuser and the precision nozzle.

 
NOTICE - material damage

When styling your hair, only hold the appliance by the handle and not by the air grille. The air intake openings could be blocked or the air grille could come loose.





- Comb your hair well before styling to prevent it from getting caught in the flat brush attachment and to achieve the best possible result when using the curling iron attachments.
- Apply a heat protection spray before using the flat brush and curling iron attachments to protect your hair.
- Only separate **thin** strands of hair and do not pull the flat brush attachment forcefully through the hair. It must be **easy** to pull it through your hair.

Fitting an attachment

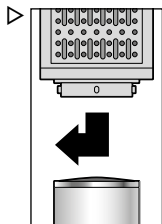


  Insert the chosen attachment into the attachment slot on the handle. To secure the attachment, turn it clockwise until you hear and feel the attachment click into place.

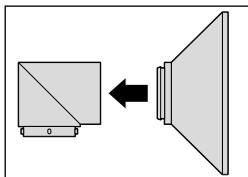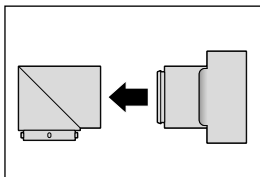

- ▷ To use the precision nozzle or diffuser, fit it to the hairdryer/adapter attachment. You must hear and feel the nozzle or diffuser click into place.
- ▷ To remove the precision nozzle or diffuser, simply pull it off the hairdryer/adapter attachment.

 Switching on and setting the options

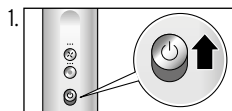

1. Insert the mains plug into a power socket and push the On/Off sliding switch upwards.

2. Set the temperature by repeatedly pressing the  button:
low temperature > medium temperature > high temperature > medium temperature, etc.
3. Adjust the airflow by repeatedly pressing the  button:
gentle airflow > medium airflow > high airflow > medium airflow, etc.

The indicator lights show the temperature and air speed settings you have set.

Temperature settings:

- low temperature
- medium temperature
- high temperature

Air speeds:

- gentle airflow
- medium airflow
- high airflow



 
After switching off and on again, the most recent temperature and air speed setting will still be set.

Hairdressing

1. Style your hair as desired, e.g. as described under "Using attachments".
2. Allow your hair to cool down before combing it out carefully.

Cold air button

The cold air button is useful for cooling a strand more quickly. If you use the precision nozzle, for example, you can dry specific sections of hair and then cool them down more quickly using the cold air button. This cool-down effect will make your hairstyle last longer.

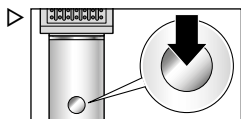

Press the cold air button to switch on the cold air function.



 
All three temperature indicator lights will flash.
The temperature setting can no longer be changed.

- ▷ Press the cold air button again to switch the cold air function off.


The previously set temperature setting will then be active again.

Changing attachments

1. After styling your hair, slide the On/Off switch downwards, disconnect the mains plug from the power socket and allow the appliance to cool down completely.

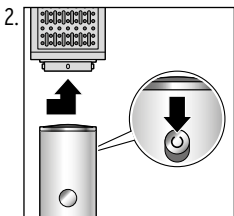

 Pull the release button downwards, turn the attachment anti-clockwise and remove it.

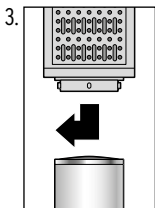

Insert the chosen attachment into the attachment slot on the handle. To secure the attachment, turn it clockwise until you hear and feel the attachment click into place.

Using attachments



The hair styler can be used in many ways. Because your hair is subjected to very high temperatures when it is styled using the hair styler, we have compiled a few tips for you to ensure that you get the best possible results when using the product.

- When choosing a shampoo or other hair care products, check that they will moisturise your hair.
- If necessary, use a product that will protect your hair against heat before styling. Suitable products are available from your hairdresser or from a health and beauty retailer.
- Do not use any other styling products before using the hair styler.
- It may be useful to divide your hair into sections and pin up the upper sections of hair.
- Only comb out your hair carefully after it has cooled down. We recommend using a wide-tooth comb or simply running your fingers through your hair to loosen it up.
- After styling your hair, use suitable styling products as required to set the hairstyle.
- More styling tips are available online.



CAUTION - risk of burns

At the higher temperature, do not leave your hair wrapped around the curling iron attachments for more than 10 seconds. Likewise, when using an attachment, do not hold it on the same part of the hair for more than 10 seconds. Otherwise your hair may be damaged.

Hairdryer/adaptor attachment

1. Make sure that your hair is clean and towel-dried before styling it with the hairdryer attachment.
2. Guide the hairdryer attachment over your hair slowly, starting from the roots and working towards the tips.

Precision nozzle

The precision nozzle allows you to dry specific sections of your hair.



The cold air button is useful for cooling the strand of hair more quickly (see section “Cold air button” in this chapter).

You will need the hairdryer/adaptor attachment (see section “Fitting an attachment” in this chapter).

- ▷ Wrap a section of hair over a round brush attachment, for example, and direct the styling nozzle at it.

 
Diffuser

You will need the hairdryer/adaptor attachment (see section “Fitting an attachment” in this chapter).



The diffuser dries hair gently without making it frizzy. It is particularly suitable for drying natural curls or permed hair. You can touch the hair directly with the diffuser when drying it.

Flat brush attachment

1. Make sure that your hair is clean. It should be towel-dry and **definitely not wet!**
2. Guide the brush slowly and evenly over your hair from the roots to the tips.

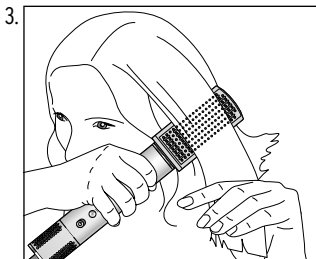

  You can also run the brush through your hair with the bristles facing outwards. Hold the strand you would like to dry at the tips and pull it taut. Guide the brush slowly and evenly over your hair from the roots towards the tips.

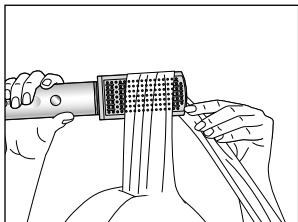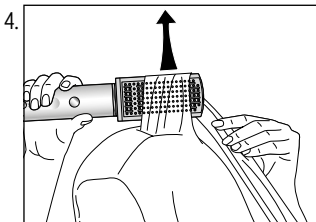

For more volume at the roots, pull the strands of hair upwards slightly with the brush as illustrated.

5. For added bounce in the tips of your hair, hold the brush in position for a moment at the tips with the hair curled inwards or outwards.
6. Repeat this process until the hair section is dry and straight. Unpin any pinned hair sections and dry them the same way.

 
Curling iron attachments

1. Make sure that your hair is clean. It should be towel-dry and **definitely not wet!**
2. Comb your hair through first to get rid of any knots, etc.
3. Hold the tips of your hair up to the curling iron attachment.

The illustrations and descriptions on the following page are from the perspective of someone looking in the mirror.


Arrow to the left:

Hold strand behind the curling iron attachment.

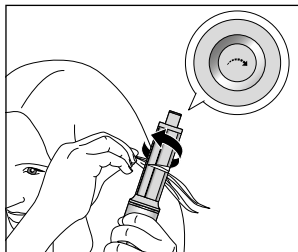


Arrow to the right:

 Hold strand in front of the curling iron attachment.

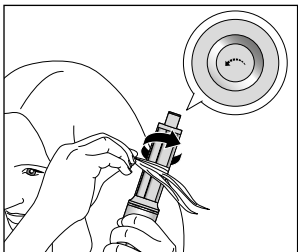


 The strand automatically wraps around the curling iron.

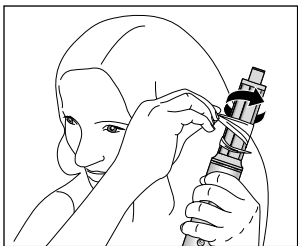

4. Guide the curling iron attachment towards your head.

 The strand automatically wraps further.

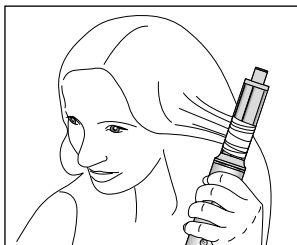

5. Hold the curling iron attachment in position for approx. 10 seconds.



When curling a strand of hair, first set a high temperature setting and then set the lowest temperature setting at the end. This cool-down effect will make the curl last longer.

6. Switch off the appliance and carefully pull the curling iron attachment down and out of your hair.

7. For a natural look, change the winding direction of the attachment multiple times while styling all sections of your hair.

After use

- ▷ After styling your hair, slide the On/Off switch downwards, disconnect the mains plug from the power socket and allow the appliance to cool down completely.
- ▷ Ensure that no one accidentally touches the hot parts while the appliance is cooling down!
- ▷ After use, put the appliance down where the attachment is not touching anything until it has cooled down sufficiently. Ensure that any surface on which the appliance is placed is heat-resistant.
- ▷ If necessary, remove hairs as described in the chapter "Cleaning".
- ▷ Store the product as described in the chapter "Storage".

Overheating protection

If the appliance overheats, the fuse will automatically switch it off.

1. Slide the On/Off switch downwards, disconnect the mains plug from the power socket and allow the appliance to cool down.
 2. Check whether hair or fluff is blocking the air intake openings. Remove them if necessary.
- ▷ To switch the appliance on again, insert the mains plug into the power socket and push the On/Off sliding switch upwards.
-

 
Cleaning



CAUTION - risk of burns

The appliance and the attachments become very hot during use.
Leave the appliance and attachments to cool down before cleaning them.
There is a risk of burns!

1. Unplug the mains plug from the power socket and remove the attachment.
 2. Remove all remaining hairs from the flat brush attachment if necessary.
 3. Wipe down the housing and the attachments with a slightly damp cloth.
- ▷ If necessary, carefully pull off any hair or fluff caught in the air intake openings.
-

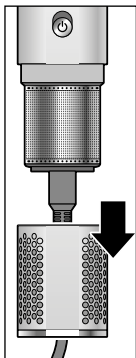

For more thorough cleaning, pull off the air grille regularly and remove hair and fluff.



DANGER - risk of fatal electric shock

Allow the appliance to cool down fully after cleaning it before using it again.
There is a risk of fatal electric shock!

Storage

- ▷ Allow the appliance to cool down completely before putting it away.
- ▷ To avoid damage to the mains cable, do not wind it around the appliance.
Place the mains cable in loops and hold it together with the hook-and-loop tape attached to the mains cable.
- ▷ Keep the appliance out of the reach of children.
- ▷ Store the appliance in a cool, dry location.

Technical specifications

Model: MS 801
Product number: 717 950
Mains voltage: 220-240 V~
50 Hz

Protection class: II 

Power: 1200 W

Ambient
temperature: +10 to +40 °C

Manufactured by: Jaxmotech GmbH
Ostring 60
66740 Saarlouis
Germany
info@jaxmotech.de

In the course of product improvement, we reserve the right to make technical and optical modifications to the product.



Disposal

The product and its packaging have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Appliances marked with this symbol must not be disposed of along with normal household waste!

 You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities.

Model: MS 801
Product number: 717 950
Manufactured by: Jaxmotech GmbH
Ostring 60
66740 Saarlouis
Germany
info@jaxmotech.de