

Dear Customer

We are delighted that you have chosen this little digital companion. Read these instructions carefully so you know how to feed, care for and play with your virtual pet.

We hope you will have lots of fun with your new digital friend!

Your Tchibo Team


Safety warnings

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

- Not suitable for children under 36 months. Small parts. Choking hazard.
- This product is recommended for children aged 6 and above.
- The product is designed for private use and is not suitable for commercial purposes.
- Use the product only in moderate climatic conditions.
- Keep packaging materials and small parts that could be swallowed out of the reach of children. They pose several risks, including the risk of choking/suffocation!
- **WARNING:** The product is equipped with a lithium coin battery. Dispose of used batteries immediately. Swallowing batteries can be fatal. If a battery is swallowed, this can cause severe internal chemical burns and even death within 2 hours. Therefore, keep both new and old batteries out of the reach of children. If the battery compartment does not close properly, do not continue to use the product and keep it out of the reach of children. If you suspect that a battery has been swallowed or has entered the body in any other way, seek medical advice immediately.
- The battery must only be inserted or replaced by adults.

- The product contains a lithium battery (coin battery). There is a risk of leakage, gas emissions, explosion and fire:
- **Warning!** Lithium batteries can explode if inserted incorrectly. Therefore, ensure that the polarity (+/-) is correct when inserting the battery. Only use batteries of the same type or ones with identical technical specifications (see "Technical specifications").
 - Single-use batteries must not be charged, disassembled or crushed. Do not throw them into fire or a hot oven, and do not short-circuit them. Do not modify and/or deform/heat/dismantle single-use batteries. Do not allow damaged batteries to come into contact with water.
 - Single-use batteries must not be overdischarged. Keep unused batteries in the original packaging. Unpacked batteries (either new or partially/fully used) must be stored in an orderly fashion so that their contacts cannot touch each other. They must also be kept away from metal objects.
 - Batteries exposed to excessive heat, direct sunlight, extremely low air pressure (such as at high altitudes) or extreme temperatures may explode or release flammable liquids or gases. Protect batteries from excessive heat, direct sunlight, extreme air pressures and extreme temperatures.
 - Remove the battery when it is flat or if you do not intend to use the product for a prolonged period. This will prevent damage that may be caused by leakage.
 - If a battery has leaked, avoid all contact with skin, eyes and mucous membranes. If necessary, rinse the affected areas with water and consult a doctor immediately.
 - Protect the product from drops and splashes of water. Do not expose it to rain.
 - Always check that the product is in good working condition before using it. Do not use the product if it is damaged.
 - The contact terminals in the battery compartment must not be short-circuited.
 - Do not immerse the product in water. Protect the product from dust, impacts, moisture, direct sunlight and extreme temperatures.
 - Do not use caustic or abrasive agents or hard brushes, etc. for cleaning.


At a glance (features)

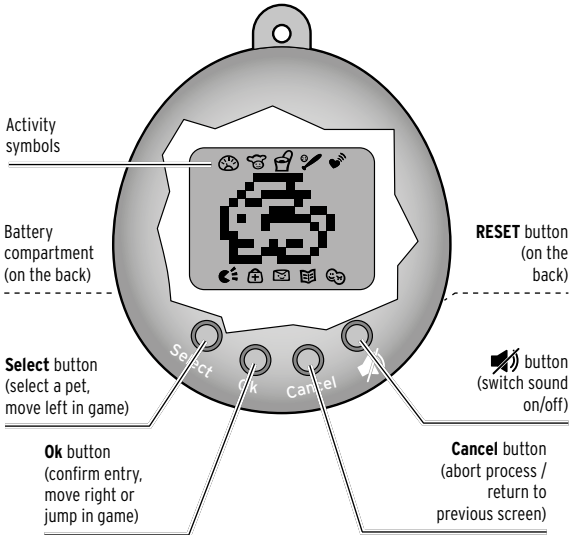

- Also included (not illustrated):
- 1x CR2032 battery (already inserted)
 - Mini screwdriver (for opening the battery compartment)

Inserting / changing batteries

- DANGER to children -**
danger to life by suffocation/choking
- Keep packaging material and small parts that could be swallowed out of the reach of children. Dispose of the packaging material immediately.
 - The battery must only be inserted or replaced by adults.
- ▷ Before using the product for the first time, remove the insulating strip from the battery compartment.

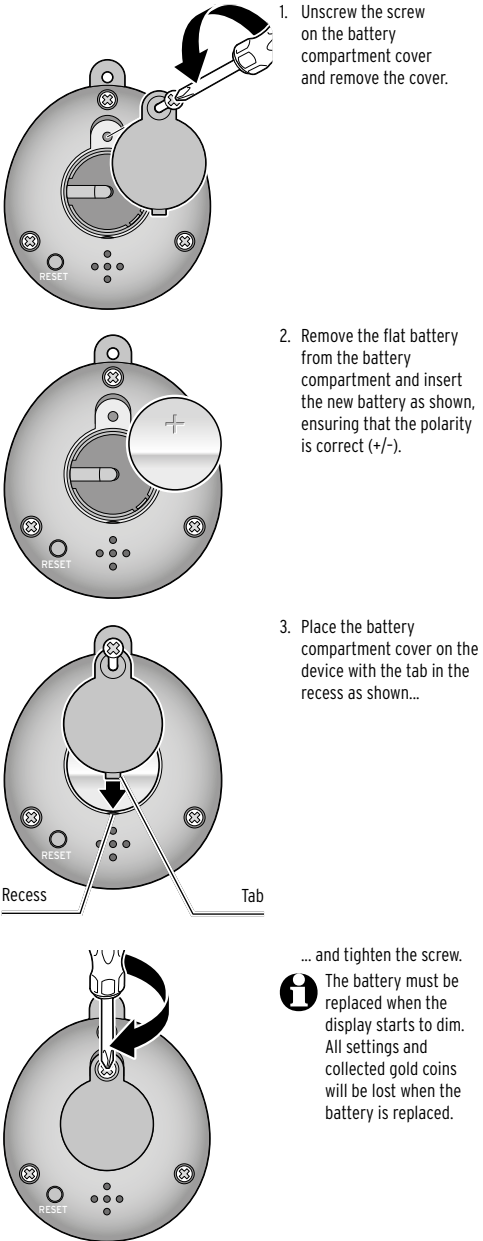


Starting

- i** A protective film has been applied to the display. Remove it before using the device.

Selecting a digital pet, setting the time and choosing a name

1. Press the **Select** or **Cancel** button to scroll through the various digital pets. Each time you press the button, the next digital pet will be shown on the display.

You can choose from 168 digital pets.

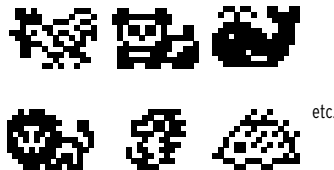

2. Press the **Ok** button to select the displayed pet. The time will then start flashing on the display.
 3. Use the **Select** button to set the hour.
 4. Press the **Ok** button to save the setting. The minutes will then start flashing on the display.
 5. Use the **Select** button to set the minutes.
 6. Press the **Ok** button to save the setting. One of eight selectable names for your pet will appear on the display.
 7. Use the **Select** or **Cancel** button to choose the desired name.
 8. Press the **Ok** button to save the setting and complete the settings process.
- Your digital pet will now come to life.

Good to know

- If this symbol is flashing at the bottom right of the display, is a reminder that your digital pet needs something. Your pet is either hungry, has made a mess or needs medical attention (see also "Activity symbols on the display and their functions").
- If your pet has not yet mastered a certain skill, is not in the mood or lacks the necessary energy (e.g. because it is hungry), it will signal this by making a shaking motion. Try to figure out what your pet needs. Here's a little tip: Food always works!
- If your digital pet is happy - whether because you helped it, because it won a game or because you cleaned up the mess it made, etc. - it will jump for joy!
- By pressing the **Cancel** button - multiple times if necessary - you can cancel a function, navigate back one step or return to the screen showing your digital pet.
- If you do not press a button for approximately 60 seconds after selecting a function, the current process will automatically end, and the display will return to showing your digital pet.
- After the device is started for the first time or after you have activated the digital pet (see chapter "Starting"), the display will automatically enter standby mode after 3 hours if you do not play with the device continuously during this time. However, if you play continuously for 3 hours or longer, the display will remain on and will not automatically enter standby mode. During further use, the display will automatically enter standby mode if no button is pressed for approximately 15 minutes. Press the **Cancel** button to reactivate the display.
- The time is set during initial setup and cannot be changed afterwards. It is the digital pet's time of birth. Until the display automatically switches to sleep mode for the first time, the time can be displayed by pressing the **Ok** button. A time symbol will then appear instead of the time, symbolising that the digital pet is growing up.

Activity symbols on the display and their functions
(from top left to bottom right)

 General information

1. Press the **Select** button as many times as necessary until the  symbol is displayed.
2. Press the **Ok** button to confirm.
3. Press the **Select** button or the **Ok** button to scroll through the following information:

 **Growth**
This number indicates how big your digital pet is. Feed your digital pet, play with it, train it and pamper it - this will keep it happy and help it to grow.

 **Food**
This number indicates how much food you have already given to your digital pet. Feed your pet frequently to ensure it has enough energy to learn and play.

 **Gold**
When you get your digital pet to play or work, you earn gold coins. You can use the gold coins to buy gifts for your digital pet.

 **Name**
The name you chose for your digital pet will appear here.

 Feeding

1. Press the **Select** button as many times as necessary until the  symbol is displayed.
2. Press the **Ok** button to confirm.
3. Press the **Select** button to switch between the following options ...

 **Cake**

 **Bread.**

4. Press the **Ok** button to feed your pet the selected food.

 Toilet

 If this is shown on the display, your digital pet has made a mess.

1. Press the **Select** button as many times as necessary until the  symbol is displayed.
2. Press the **Ok** button to clean up the mess.

 Training

1. Press the **Select** button as many times as necessary until the  symbol is displayed.
2. Press the **Ok** button to confirm.
3. Press the **Select** button to switch between the following options ...

 **Catch the frisbee**
➤ Press the **Ok** button to jump and catch the frisbee.

 **React quickly**
➤ Move left using the **Select** button or right using the **Ok** button to dodge the falling objects.

 **Shop**
You can buy gifts for your digital pet in the shop.
➤ Press the **Select** button to scroll through the gifts  and  and then press the **Ok** button to buy the selected gift.

- After purchasing a gift, you will find it in the gift collection .
- You can only buy gifts if you have enough gold coins.

 School, play and changing your pet's appearance

1. Press the **Select** button as many times as necessary until the  symbol is displayed.
2. Press the **Ok** button to confirm.
3. Press the **Select** button to switch between the following options ...

 **School**
Let your digital pet go to school.

 **Play**
Let your digital pet play with friends.

 **Change appearance**
You can change the appearance of your digital pet, provided you have a gift in your gift collection .

 Learning

1. Press the **Select** button as many times as necessary until the  symbol is displayed.
2. Press the **Ok** button to teach your pet so that it performs better in school.

 Medical attention

 If this symbol appears on the display, your digital pet is sick and needs help.

1. Press the **Select** button as many times as necessary until the  symbol is displayed.
2. Press the **Ok** button to give your digital pet an injection.

 Email

1. Press the **Select** button as many times as necessary until the  symbol is displayed.
2. Press the **Ok** button to confirm.
3. Press the **Select** button to switch between the following options ...

 **Happiness stars**
The number indicates how many happiness stars you have. The more happiness stars you have, the happier your digital pet is.

 **Email**
If this symbol  is flashing on the display, your pet has received an email. The email may contain good or bad news. If you are lucky, you might receive gold coins  as a gift, but if you are unlucky, you might have a mess to clean up .

 Collection

1. Press the **Select** button as many times as necessary until the  symbol is displayed.
2. Press the **Ok** button to confirm.
3. Press the **Select** button to switch between the following options ...

 **Guess the password**
Enter a three-digit numeric code. If you guess the correct code*, you will receive feed as a gift. You can find your gifts in the gift collection .

 **Gift collection**
Here you can view the gifts you have purchased.

Problems / solutions

The device is not working (no sound and no picture).

- Is the battery flat?
Replace the battery.

No sound, but the display and buttons are working as usual.

- Has the sound been muted?
Press the  button multiple times if necessary.

The display is very faint.

- Is the battery flat?
Replace the battery.

The display flickers, has stripes or is otherwise distorted.

- If necessary, press the **RESET** button using a pointed object.
Warning! All settings and collected gold coins will be lost if the device is reset.
- Is the battery flat?
Replace the battery.

Technical specifications

Model:	720 853 (D/A) 723 996 (D/CH/CZ/PL/SK/HU/TR)
Single-use battery: (tested as per UN 38.3)	1x CR2032/3.0 V (Li-MnO2)
Ambient temperature:	Watt-hour rating: 0.63 Wh +10 °C to +40 °C
Made exclusively for:	Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany



Disposal

This product, its packaging and the supplied battery have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment. Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.

 **Devices, single-use batteries and rechargeable batteries** marked with this symbol must not be disposed of along with household waste!
You are legally obliged to dispose of old devices separately from household waste. Electronic devices contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old devices can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

Information about the supplied battery

<i>Manufacturer</i>	<i>Email</i>
Changzhou Anyida Power Technology Co., Ltd.	11464986@qq.com
<i>Address</i>	<i>Model</i>
No.1. East Road, Lou Xia Industrial Park, Rulin Town, Jintan District, Changzhou city, Jiangsu	CR2032
	<i>Manufacturing date</i>
	2025/06
	<i>Made in</i>
	China



www.tchibo.de/instructions