



Safety warnings

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Intended use

The solar lantern is suitable for decoration and not as lighting.

It is designed for permanent outdoor use. However, you should take it inside in the event of strong winds.

It is designed for private use and is not suitable for commercial purposes.

Danger to children

- Swallowing rechargeable batteries can be fatal. If a rechargeable battery is swallowed, this can lead to severe internal chemical burns and even death within 2 hours. Therefore, keep both new and old rechargeable batteries as well as the product itself out of the reach of children. If you think that a battery has been swallowed or has got into the body in any other way, seek medical advice immediately.

- Keep the packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

Risk of injury

- Do not operate the product using standard, non-rechargeable batteries. Risk of explosion!

- Rechargeable batteries must not be taken apart, thrown into fire or short-circuited.

- If a rechargeable battery has leaked, avoid contact with skin, eyes and mucous membranes. If necessary, rinse the affected areas with water and consult a doctor immediately.

Material damage

- Do not use the product if it shows any visible signs of damage.

- Due to the extremely long service life of the light-emitting diodes (LEDs), it is not necessary to replace them. They cannot and must not be replaced. The LEDs are firmly built into the lantern. Opening the product to remove the LEDs will damage it.

- Remove the rechargeable battery pack from the product when it is spent or if you are not intending to use the product for a long period of time. This will prevent damage caused by leakage.

- Do not make any modifications to the product. Have repairs carried out only by a specialist workshop or as arranged by our customer care service.

- Do not stick anything to, cover or paint the solar module.
- Do not use any caustic, aggressive or abrasive products for cleaning.

- The product is suitable for outdoor use and complies with protection type IP44. This means that the product is protected against contact with tools, wires and foreign objects with a diameter larger than 1 mm and splashes of water from all sides, such as rain. However, protect the product from heavy rain and streams of water and do not immerse it in water.

- Make sure that the water outlets remain clear so that condensation can escape.

- The product is suitable for outdoor use at temperatures above approx. -10 °C. If the temperature falls below this level, store the product inside, otherwise it may become damaged.

Use

Choosing a location


The lantern works independently of any electric power source. However, since the product depends on light from the sun, you should consider and observe the following:

- Place the lantern in a sunny location during the day. Choose a spot where the lantern will be exposed to direct sunlight for as long as possible. The rechargeable battery pack can only recharge if the solar module is in a sunny location.
- Avoid positioning the lantern in a fully, or mostly shady location (beneath trees, roof ridges, etc.). Do not place the lantern on the north side of a building where there is not sufficient sunlight during the day.
- The solar module should not be continuously exposed to other sources of light during the night, e.g. strong spotlights in a driveway or garage entrance, etc. Keep in mind that many light sources only switch on at night, such as those activated by a timer or motion sensor.

Turning on/off

The On/Off switch and the battery compartment are located on the underside of the lantern.

The rechargeable battery pack is already inserted upon delivery.

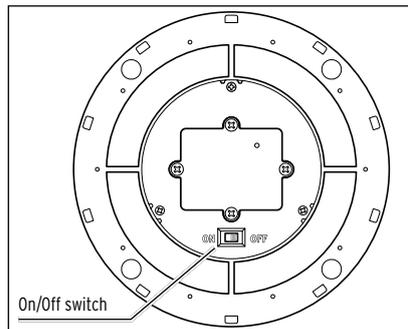

▷ Slide the On/Off switch on the underside of the lantern head to **ON** to activate the light.

In this position the lantern works fully automatically:

- The lantern switches on at dusk.
- The lantern switches off at dawn.

▷ To deactivate the lantern, slide the On/Off switch to **OFF**.

The lantern is now switched off permanently. The battery pack will continue to charge once there is sufficient light.

Charging the battery pack

- The battery pack can only be charged if the lantern is placed in a sunny spot with the solar module facing upwards.

- Depending on the weather and sun intensity, it can take a few hours for the solar module to fully charge the battery pack.

- During the winter or after a successive number of cloudy days you may find that the battery pack is not sufficiently charged. In this case, slide the On/Off switch to **OFF** to deactivate the lantern. The battery pack will charge even when the lantern is switched off.

Cleaning

NOTICE - material damage

Do not use any caustic, aggressive or abrasive products for cleaning.

▷ Wipe the lantern with a soft, slightly damp cloth.

Problems / solutions

The solar lantern is producing only a dim light or does not light up at all.

- Are the surroundings too bright? Check whether other sources of light (e.g. street lights or time or motion sensor-controlled outdoor lights) are shining onto the lantern. If necessary, change the location.
- Is the battery pack completely charged? Switch the lantern off for a few days so that the battery pack can be fully recharged.
- Is the battery pack worn out? Replace the battery pack as described in the chapter titled "Removing / replacing the battery pack".

The LEDs are faulty.

- The LEDs cannot be replaced.

Performance varies depending on the season.

- This is due to weather conditions and is not a fault. Weather conditions are best during the summer and unfavourable in the winter or after a successive number of cloudy days.

Technical specifications

Model:	733 165
Power supply	
Solar module:	5.5 V / 0.8 W
Rechargeable battery pack:	3x HR6 (AA) Ni-MH 1.2 V / 1000 mAh
Protection class:	III
IP code:	IP44
Ambient temperature:	-10 to +40 °C
Made exclusively for:	Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany

Disposal

The **product**, its **packaging** and the inserted **rechargeable battery pack** have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Appliances, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste!

You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health or the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities. Flat single-use/rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

For instructions on how to remove the rechargeable battery pack, see "Removing / replacing the battery pack".


Removing / replacing the battery pack



WARNING - risk of injury

Do not operate the solar lantern using standard, non-rechargeable batteries. Risk of explosion!

The rechargeable battery pack is designed for long-term operation. However, after a long period of use, it may need to be replaced. Rechargeable batteries are subject to standard wear and tear, and performance can diminish.

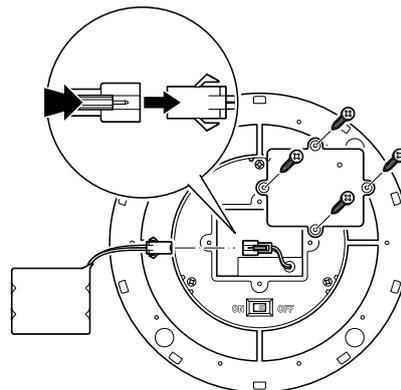

- Slide the On/Off switch on the underside of the lantern to **OFF**.
- Loosen the four screws for the battery compartment on the underside of the lantern using a Phillips screwdriver.
- Remove the battery compartment lid.
- Lift the battery pack and pull the connector cable plug out of the socket in the battery compartment, as shown, by pressing the small lever on the top.
- Insert the plug of the new battery pack. It can only be inserted in one direction. You can order a new battery pack by contacting our customer care service (see the chapter titled "Warranty").
- Put the battery pack back into the battery compartment. The plug must be in the recess under the battery pack, with the wires to the side.
- Replace the battery compartment lid on the battery compartment and tighten the screws.
- Slide the On/Off switch on the underside of the lantern to **ON** again to activate the lantern.

Warranty

Tchibo GmbH grants a **three-year warranty** from the date of purchase.

Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany

We will remedy all defects in workmanship or materials **within the warranty period**. In order for the warranty to be granted, all warranty claims must be accompanied by proof of purchase from Tchibo or from an authorised Tchibo distribution partner. This warranty is valid within the EU, Switzerland and Turkey.

The warranty does not cover worn parts, consumables, or damage resulting from improper use or inadequate descaling. Parts and consumables can be ordered from our customer care service.

This warranty does not restrict **statutory warranty rights**. Statutory warranty rights can be asserted free of charge.

Service and repair

If, contrary to our expectations, a defect is found, please contact our customer care service. Our customer consultants will be happy to advise you on further procedure.

If you have any questions relating to product information, ordering accessories or servicing, please contact our customer care service.

Please have the product number to hand in case of any queries.

Customer care service

Email: service@tchibo.de