


2 in 1 cordless vacuum cleaner

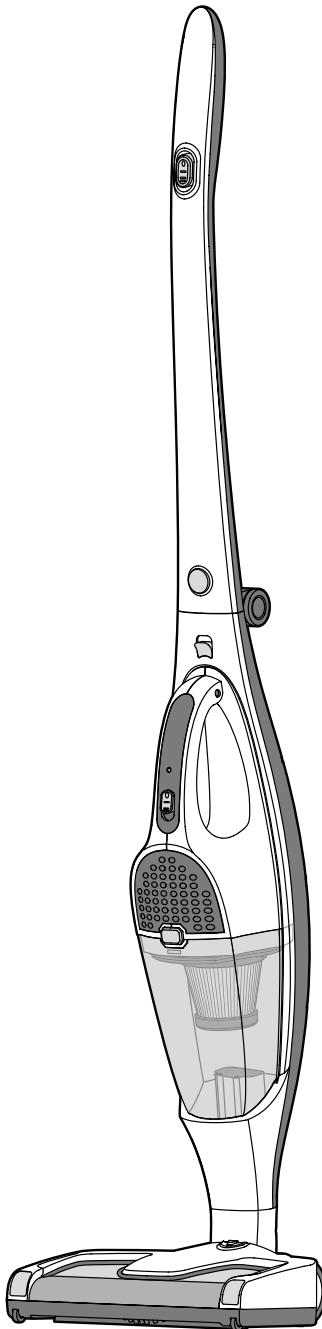

 **Instructions for use**

150953FV01X00XVI · 2025-06

Dear Customer

With its 2-in-1 function (combined vacuum and hand-held vacuum cleaner), your new cordless vacuum cleaner is ideal for keeping things clean.

Clean the floor quickly and easily with the cordless vacuum and use the hand-held vacuum cleaner and crevice nozzle to access hard-to-reach areas.

The brush attachment is suitable for upholstery and delicate surfaces.

We hope you enjoy using your new product!

Contents

2	About these instructions	9	Cleaning the appliance
3	Safety warnings	9	Cleaning the brush attachment and crevice nozzle
5	At a glance (contents)	9	Cleaning the brush roller on the floor head
6	Prior to first use	10	Emptying and cleaning the dust collector
6	Removing transport protection and packaging materials	10	Cleaning the filter
6	Assembling the cordless vacuum cleaner	10	Reassembling the hand-held vacuum
7	Charging the rechargeable battery	10	Cleaning the casing
7	Use	11	Technical specifications
8	Using the vacuum cleaner	12	Problems / solutions
8	Parking the cordless vacuum cleaner upright	12	Disposal
8	Using the hand-held vacuum		

About these instructions

This product is equipped with safety features. Nevertheless, read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Symbols used in these instructions:



This symbol warns you about the risk of injury.



This symbol warns you about the risk of injury caused by electricity.

Signal words used in these instructions:

CAUTION warns about the potential risk of minor injury.



This indicates additional information.

Safety warnings

Intended use

The product is suitable for picking up dust, dirt, crumbs, etc. in dry indoor locations.

It is not intended for cleaning larger areas or for extended use.

The product is designed for home use and is not suitable for commercial purposes.

Use the product under moderate climatic conditions only.

Danger to children and people with limited ability to operate appliances

- This appliance may be used by children aged 8 and over, and by persons with reduced physical, sensory or mental capacities or a lack of sufficient experience and/or knowledge, provided they are supervised or have been trained in the safe use of the appliance and understand the potential dangers.

Cleaning and maintenance must not be carried out by children without supervision. Children must not be allowed to play with the appliance.

- Keep packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

Danger due to electricity

- Never immerse the appliance or mains adapter in water or other liquids as this poses a risk of electric shock. Do not touch the mains adapter while your hands are wet.

- Only use the mains adapter provided so as not to damage the vacuum cleaner.

- Only connect the appliance to a properly installed power socket with a mains voltage that complies with the technical specifications of the mains adapter.

- Disconnect the mains adapter from the power socket ...

... if it malfunctions while charging,

... after charging,

... during thunderstorms and

... before cleaning the appliance.

Always pull on the mains adapter, not on the connection cable.

- The power socket must be easily accessible so that you can disconnect the mains adapter quickly, if necessary. Route the connection cable in such a way that it is not a tripping hazard.
- Do not operate the appliance if the vacuum cleaner itself, its mains adapter or connection cable show any sign of damage or if the vacuum cleaner has been dropped.
- Do not disassemble the appliance any further than described in these instructions. Do not make any modifications to the product. Have repairs to the appliance, mains adapter or connection cable carried out only by a specialist workshop or our customer care service.

When charging the battery, note the following:

- Do not put any containers filled with liquid, such as vases, within close proximity of the rechargeable battery or the hand-held unit. They could topple over and the liquid could impair the electrical safety of the appliance. There is a risk of an electric shock.

Warning – hazards resulting from misuse

- Never vacuum up the following:

- glowing ash, cigarette butts, matchsticks, etc.: Risk of fire!
- toner for printers: Danger of fire or explosion!
- caustic or toxic substances (acid, asbestos or asbestos dust, etc.): Danger to health!
- liquids (in particular liquid carpet cleaners): Danger of short circuit!
- pointed, hard or sharp objects (splinters of glass, nails, etc.): These can destroy the filter.

- plaster, cement, dust from drilling, construction waste, make-up, etc.: These substances could block the filter and thus damage the appliance.
- cables, wiring, etc.: Their insulation could be damaged or they could become wound around the brush roller and damage the appliance.
- Do not use the appliance to vacuum up small objects.

Warning – risk of injury

- Never use the product on people or animals. Always keep hair, body parts and items of clothing such as shoelaces and scarves well away from the suction opening. Never attempt to remove a blockage when the vacuum cleaner is in operation.
- Always switch off the appliance before removing or attaching the hand-held vacuum cleaner or one of the nozzles or removing or attaching the dust collector from the hand-held vacuum.
- The appliance must be disconnected from the mains during use, when being cleaned, when detaching the hand-held vacuum and when removing the dust collector.
- The appliance's metal contacts will get very hot during use. Do not touch them.
- Put the appliance away after use so that it cannot be tripped over.
- Do not attempt to open the hand-held vacuum cleaner except as described in these instructions. If the rechargeable battery is faulty, dispose of the entire product using the proper waste disposal method.
- The hand-held vacuum cleaner may only be used when fully assembled.
- Be particularly careful when vacuuming stairs.

Danger of fire

- Do not use the appliance in the vicinity of highly flammable substances, such as oil-based

paints, paint thinners or similar, or explosive or toxic vapours.

Material damage

- Ensure that the airing vents on the appliance are not covered by dust or similar substances.
- Do not place the floor head on the fringes or edges of carpets or rugs or stair mats or similar, as the brush roller may pull them in and damage the carpet.
- When vacuuming, do not allow the floor head to remain in one place for a long time. This may damage the carpet.
- If there is anything obstructing the brush roller in the floor head, such as rug fringes or a piece of fabric, switch the appliance off immediately and remove the obstructing object.
- Do not use the appliance in a damp environment. Do not store it in rooms exposed to moisture such as cellars or garages.
- Do not insert any objects into the openings on the appliance.
- Always use the vacuum cleaner with the filter inserted.
- Only use original accessories.
- Do not use caustic or abrasive agents or hard brushes, etc. for cleaning.
- Protect the appliance from knocks, falls, dust, moisture, direct sunlight and extreme temperatures. Protect the rechargeable battery in particular and the hand-held vacuum from excessive heat.

Information on the rechargeable battery:

- Store the battery out of the reach of children.
- The battery must not be short-circuited.
- Do not forcibly discharge or deform the battery, or dispose of it in a fire. Dispose of the battery as described in the chapter "Disposal".
- Do not attempt to remove or insert the battery.

At a glance (contents)

Base

Handle

On/Off switch

Push button to release the hinge

Hinge

Release for the hand-held vacuum cleaner

Metal contacts

Holder for the hand-held vacuum

Slot-in connection

Joint

Locking mechanism for the floor head

Floor head

Brush roller

Hand-held vacuum cleaner

Motor unit

Connection socket for the mains adapter (on the hand-held vacuum handle)

Indicator light

On/Off switch

Air outlet

Release for removing the dust collector

Filter

Dust collector

Suction opening

Crevice nozzle

Brush attachment

Mains adapter


Prior to first use

Removing transport protection and packaging materials


1. Remove all packaging materials prior to first use.



2. Remove the transport protection from the On/Off switch on the hand-held vacuum.

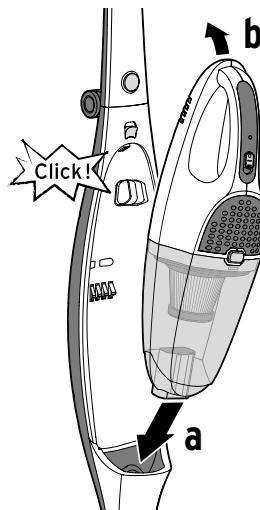


Assembling the cordless vacuum cleaner

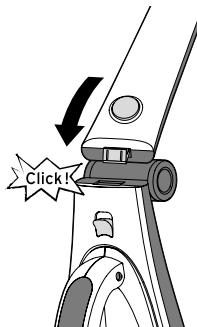


1. Fold the handle up until you hear and feel it click into place.

► If the hand-held vacuum cleaner has not yet been inserted into the cordless vacuum cleaner, insert the suction opening in the holder (a) and press it at the top until you hear and feel it click into place (b).

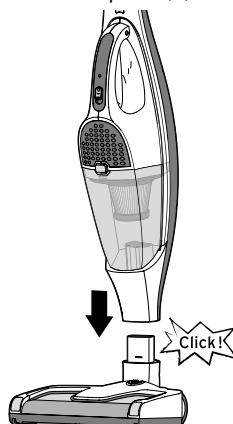

2. Attach the cordless vacuum cleaner to the slot-in connection of the floor head as shown.
You must hear and feel it click into place.

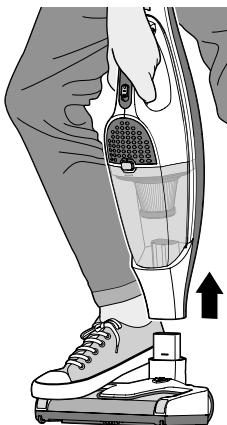

▷ To remove the floor head again, e.g. for cleaning, place a foot on the floor head to hold it firmly on the floor and pull the appliance out of the floor head.

Charging the rechargeable battery

i The hand-held vacuum does not need to be inserted into the cordless vacuum for charging.

The battery is not fully charged upon delivery. To reach the battery's maximum charging capacity, charge the battery fully before using the appliance for the first time.


The maximum charging time is approx. 4-5 hours.

When its battery is fully charged, the cordless vacuum cleaner has an operating time of: approx. 30 minutes (with low suction power/ indicator light lights up yellow) or approx. 16 minutes (with high suction power/ indicator light lights up green).

Indicator light display

- Indicator light flashes green: low battery.
- Indicator light flashes red and green alternately: battery drained. The appliance cannot operate.
- Indicator light goes out: battery empty. The indicator light will light up as soon as the battery is charged.

i To preserve the rechargeable battery's full capacity for as long as possible, you should recharge the battery every 3 months, even if you do not use the vacuum cleaner. The battery will best hold its charge at normal room temperature. The lower the temperature, the shorter the operating time.

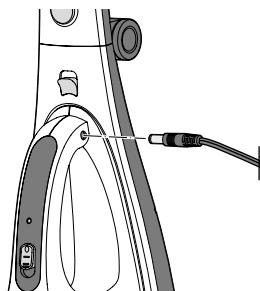

1. Insert the plug of the mains adapter into the connection socket on the handle of the hand-held vacuum cleaner and insert the mains adapter into the power socket.

The indicator light will flash red.

As soon as the battery has been fully charged, the indicator light will turn steady green.

2. Disconnect the mains adapter from the power socket and the connection plug from the connection socket on the hand-held vacuum.


Use

i You can use the cordless vacuum cleaner either fully assembled with the floor head or just the hand-held vacuum with the crevice nozzle and optionally also the brush attachment.


The hand-held vacuum can also be used without a nozzle.

Using the vacuum cleaner

1. Assemble the appliance completely as described in the section "Assembling the cordless vacuum cleaner" in the chapter "Prior to first use".
2. Slide the On/Off switch on the handle of the appliance to
 - I for low suction power and to
 - II for high suction power.
3. Slide the On/Off switch to 0 to switch the appliance off.

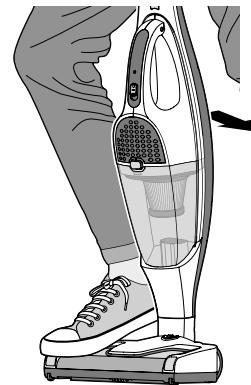

Parking the cordless vacuum cleaner upright

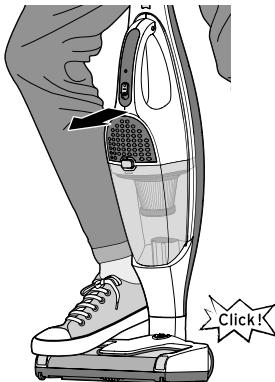


▷ You can park the cordless vacuum cleaner by pushing the handle forwards so that you can hear and feel the floor head lock engage. The handle must be orientated in the same direction as the floor head. The cordless vacuum cleaner will now remain upright on the floor head without you having to hold it.

i The brush roller will continue to rotate in this position as long as the appliance is still switched on.

▷ To release the floor head lock, place one foot on the floor head to fix it to the floor and pull the handle towards you.

Using the hand-held vacuum

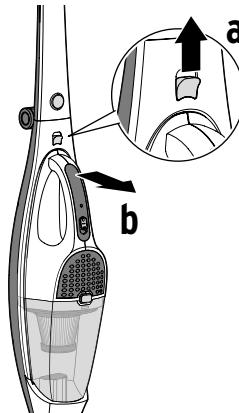


1. Pull the hand-held vacuum release upwards (a).

You will hear the mechanism release.

2. Remove the hand-held vacuum from the holder on the base (b).

i • The **crevice nozzle** is ideal for hard-to-reach, delicate areas such as the gaps between cushions.
• The **brush attachment** is suitable for use on upholstery and other delicate surfaces.

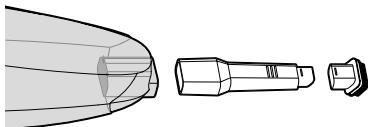

3. Insert the crevice nozzle in the suction opening and if needed, fit the brush attachment to the crevice nozzle.

You must hear and feel it click into place.

4. Slide the On/Off switch on the handle of the hand-held vacuum to
 - I for low suction power and to
 - II for high suction power.
5. After use, slide the On/Off switch to 0 to switch the appliance off.

Cleaning the appliance


Cleaning the brush attachment and crevice nozzle

1. Switch the hand-held vacuum off and remove the crevice nozzle and, if fitted, the brush attachment from the appliance.
2. Remove hair or other dirt from the brush attachment or crevice nozzle.
3. Wipe the brush attachment and the crevice nozzle with a slightly dampened, lint-free cloth.


3. Lift the right-hand side of the brush roller and pull it out of the holder.
4. Remove the dirt from the brush roller by hand.
5. Wipe the inlet of the brush roller using a slightly damp, lint-free cloth.
6. Replace the brush roller and reinsert the locking mechanism.
You must hear and feel the locking mechanism click into place.

Cleaning the brush roller on the floor head

1. Remove the floor head from the vacuum cleaner.

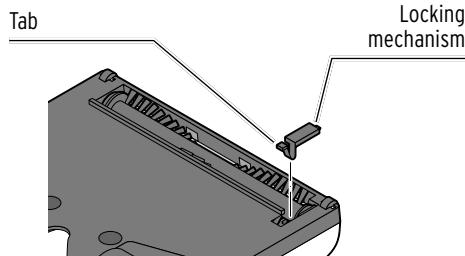

2. Press the tab on the locking mechanism to the side and remove the locking mechanism.

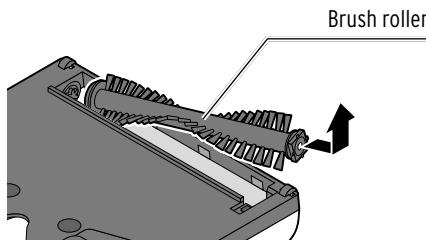

If dirt has blocked the brush roller, the vacuum cleaner stops and the indicator light flashes red and green alternately.


If this happens, switch the appliance off, remove the dirt and wait 15 minutes until the brush roller has cooled down.
After that, the appliance can be used again as usual.

If the indicator light is still flashing alternately red and green, the battery must be charged (see section "Indicator light display" in chapter "Prior to first use").


Emptying and cleaning the dust collector

Empty the dust collector regularly to avoid a decrease in suction, overheating of the appliance and excessive dirt in the filter.

1. Switch off the appliance.
2. Remove the hand-held vacuum cleaner from the holder on the base as described in the chapter "Use" in the section "Using the hand-held vacuum".
3. Hold the hand-held vacuum over a waste bin with the dust collector facing downwards.

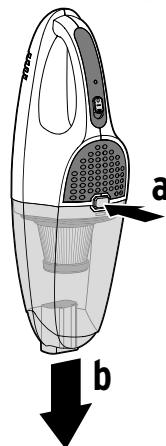

4. Press the release to remove the dust collector (**a**) and remove the dust collector (**b**).

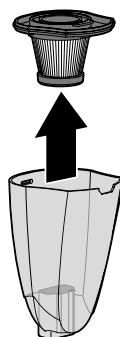

5. Take the filter out of the dust collector.
6. Empty the dust collector.
7. If necessary, wipe off the dust collector with a damp cloth.

Cleaning the filter


1. Tap the filter over the waste bin.

You can also brush the filter or wipe it with a damp cloth.

2. Let the filter dry completely before inserting it again.

Reassembling the hand-held vacuum

1. Replace the filter in the dust collector.

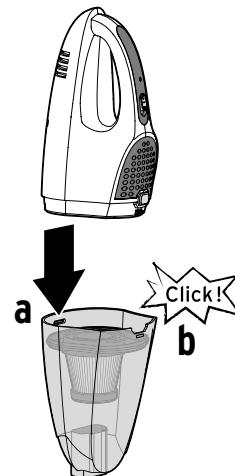

2. Position the motor unit on the dust collector in such a way that the latch at the back of the motor unit engages with the recess at the back of the dust collector (**a**).

3. Press the motor unit onto the front of the dust collector (**b**).
You must hear and feel it click into place.

Cleaning the casing

► If necessary, wipe the casing with a slightly damp, lint-free cloth.

Technical specifications

Model:	VC 102
Product number:	726 684
Mains adapter:	
Model:	SEU012A-225050
Manufacturer:	Zhejiang Mootree Electronic Technology Co., Ltd., Floor 3, plant 2, 2, No. 107, Xianglong street, nanmingshan street, Liandu District, Lishui City, Zhejiang Province, China
Input:	100-240 V ~ 50-60 Hz 0.4 A
Output:	22.5 V $\underline{\underline{}}$ 0.5 A 11.25 W (the symbol $\underline{\underline{}}$ stands for direct current) (the symbol $\diamond\text{---}\text{---}\diamond$ shows the polarity of the plug)
Protection class:	II 
IP code:	IP20
Rechargeable battery:	
Type:	lithium-ion rechargeable battery
Model:	YZ Li-ion 18650 (5INR19/66)
Voltage, capacity:	18.5 V , 2200 mAh
Battery element:	5 x 3.7 V , 2200 mAh
Charging time:	approx. 4-5 h
Watt-hour rating:	40.7 Wh (tested as per UN 38.3)
Manufacturer:	NingBo YOUTH Electric Appliance Co. Ltd. Address: 500, FengShan West Road, YuYao, ZheJiang Email: yuri@youth.com Manufacturing date: 2025/07 Made in China
Cordless vacuum cleaner:	
Suction power:	max. 120 W
Suction:	max. 8.0 kPa
Operating time:	approx. 16 min. high suction power approx. 30 min. low suction power
Sound level:	below 80 dBA
Dust collector capacity:	approx. 0.5 l
Ambient temperature:	+10 to +40 °C
Manufactured by:	Jaxmotech GmbH, Ostring 60, 66740 Saarlouis, Germany info@jaxmotech.de

In the course of product improvement, we reserve the right to make technical and optical modifications to the product.



Problems / solutions

Not working	• Is the battery of the hand-held vacuum charged?
Poor suction	<ul style="list-style-type: none">• Is the dust collector full?• Is the dust collector inserted correctly?• Is the filter very dirty?• Is the battery of the hand-held vacuum sufficiently charged?
Dust escapes from the appliance	<ul style="list-style-type: none">• Is the dust collector full?• Is the dust collector inserted correctly?• Is the filter inserted (correctly)?
Increased sound level	• Is there something stuck in the suction opening?
Brush roller stops	<ul style="list-style-type: none">• Is the brush roller blocked? <p>Switch the appliance off, remove the dirt and wait 15 minutes until the brush roller has cooled down.</p>

Disposal

The product, its packaging and the built-in rechargeable battery have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Appliances, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste!



You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about

collection points where old appliances can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

Warning! This appliance contains a rechargeable battery that, for safety reasons, is firmly built into the appliance and cannot be removed without destroying the casing. Improper disassembly leads to safety hazards. For this reason, take the appliance intact to a collection point where the appliance and battery will be disposed of properly.

Model:

VC 102

Manufactured by:

Jaxmotech GmbH, Ostring 60, 66740 Saarlouis, Germany, info@jaxmotech.de